


Limpieza pre-instalación

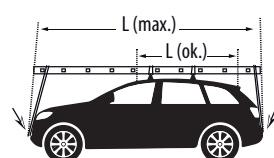

Pre-installation cleaning





Revisar par de apriete




Check torque

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

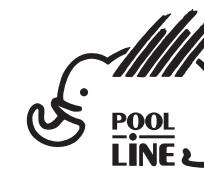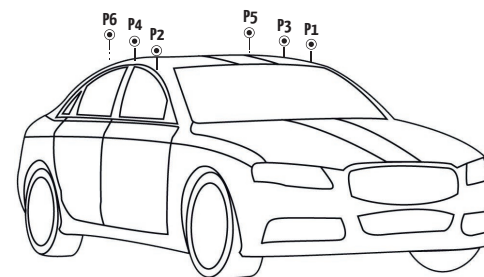

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

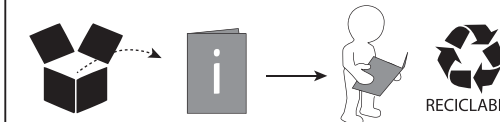

110006

Review 9/2019



		P1	P2	P3	P4	P5	P6
CHEVROLET							
EPICA	06 - 11	4	5	5		5	5
VISION	92 - 97	4	5	5		5	5
CITRÖEN							
SAXO	96 - 03	5	5			5	5
DAEWO							
LANOS (T100)	97 - 04	5	5			5	5
HONDA							
CIVIC IV / V	87 - 95	3	5	5		5	5
LEGEND	04 - 12	4	5	5		5	5
HYUNDAI							
ELANTRA HD	06 - 10	4	5	5		5	5
ELANTRA XD	00 - 06	4/5	5	5		5	5
I-10 (I / PA) (II / BA)	07 - >	5	5	5		5	5
SONATA V NF	06 - 09	4	5	5		5	5
SONATA VI YF	09 -	4	5	5		5	5
TUCSON	04 - 09	5	5	5		5	5
KIA							
SEPHIA	92 - 99	4	5	5		5	5
LANCIA							
PRISMA	82 - 89	4	5	5		5	5
MAHINDRA							
XUV 500	14 -	5	5	5		5	5
MAZDA							
2 (I/DY)	03 - 07	5	5	5		5	5
MX-3	91 - 98	3	5	5	5	5	
MITSUBISHI							
COLT (Z30)	04 - 12	5	5	5		5	5
SPACE STAR	98 - 05	5	5	5		5	5
NISSAN							
NOTE (E11)	05 - 13	5	5	5		5	5
PEUGEOT							
205	83 - 97	5	5	5		5	5
206	98 - 12	5	5	5		5	5
106 (I)	91 - 99	5	5	5		5	5
106 (II)	99 - 04	5	5	5		5	5
605 SEDAN	89 - 99	4	5	5		5	5
TOYOTA							
HILUX VIII (Cabina doble)	16 - >	4	5	5		5	5
YARIS I (XP10)	99 - 05	3	5	5	5	5	
YARIS I (XP10)	99 - 05	5	5	5		5	5
YARIS VERSO	99 - 05	5	5	5		5	5
VOLKSWAGEN							
CORRADO	88 - 95	3	5	5	5	5	
PASSAT B4	93 - 96	4	5	5		5	5

