

**BO0019**

**BO0026**

ISO M6X16

DIN 125

100 M

G5


x4

x4


x1

x4

x4

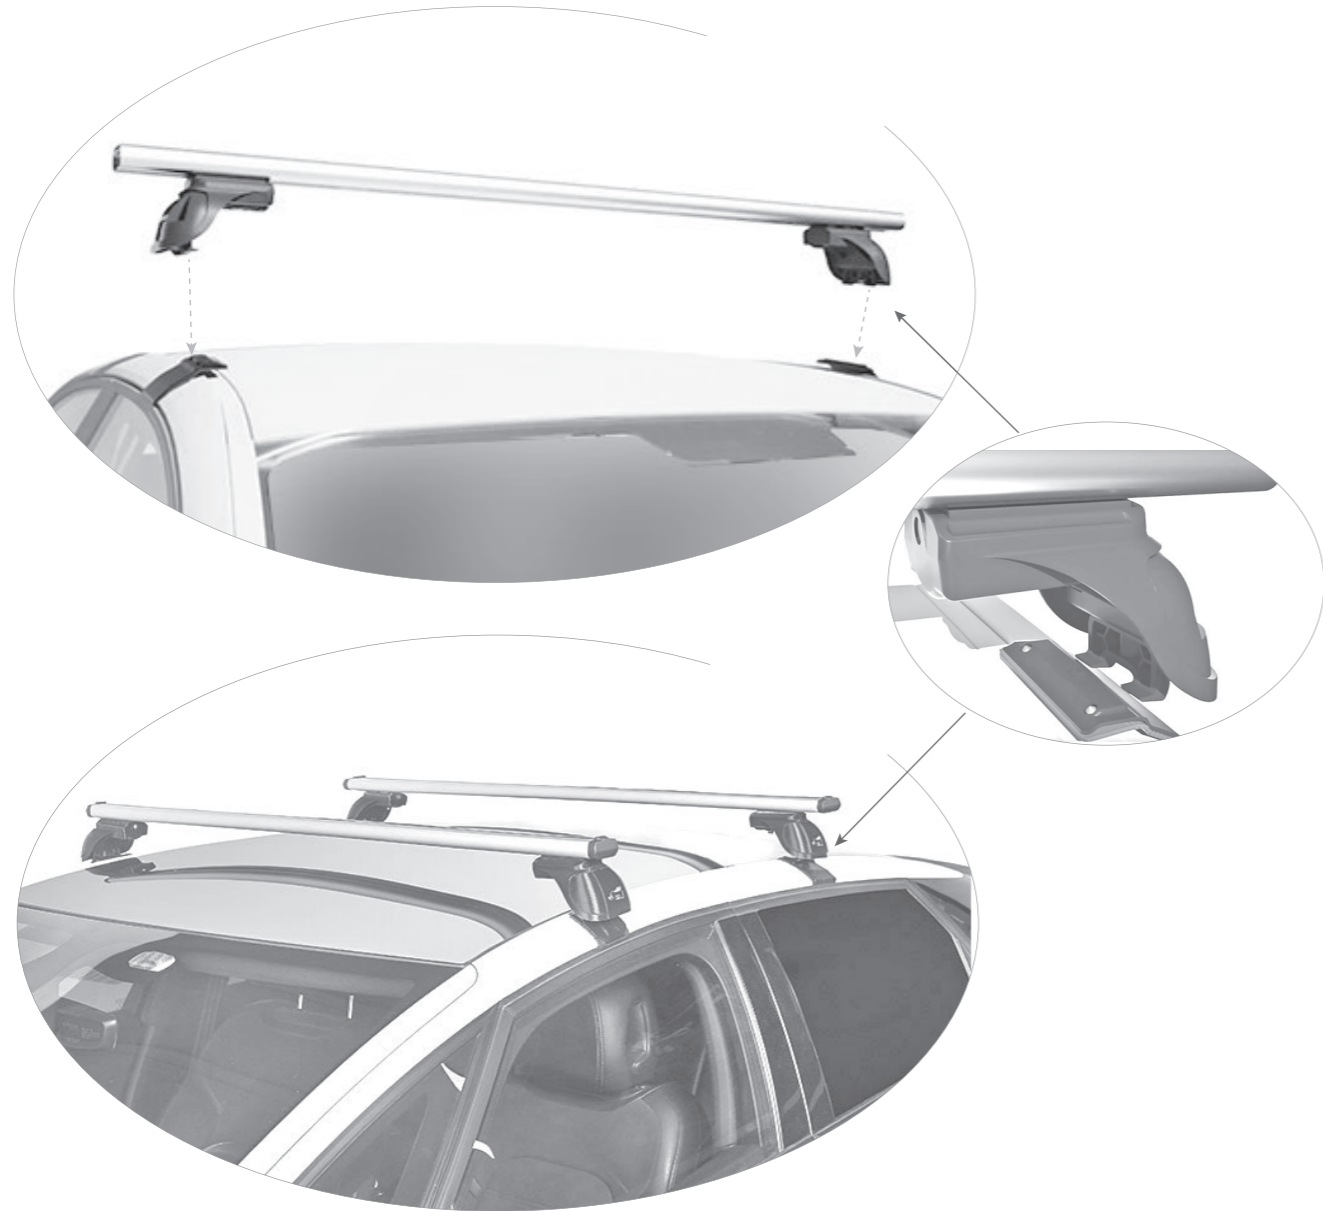

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

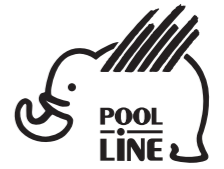




POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085


RECYCLABLE

**110033**  
Review 5/2019


Video INSTRUCCIONES MONTAJE

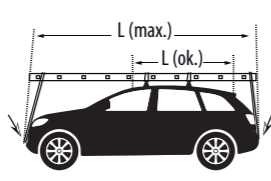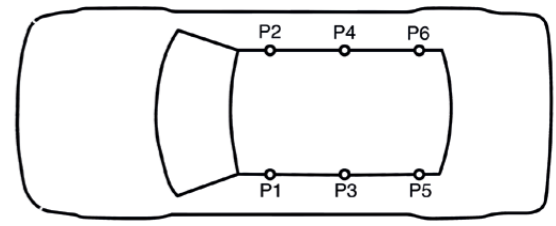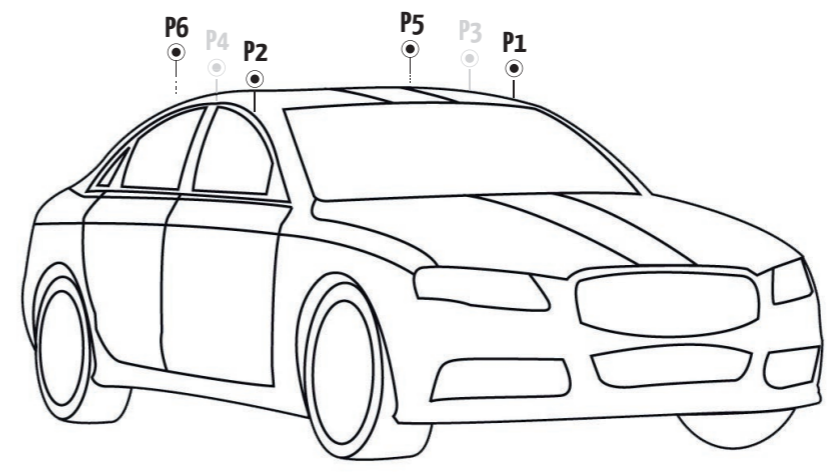



				P1	P2	P5	P6
<b>FIAT</b>							
BRAVO (Typ 198)	07 - 14	5	B00026 + B00019	100 M	100 M	100 M	100 M
<b>LANCIA</b>							
DELTA III	08 - 14	5	B00026 + B00019	100 M	100 M	100 M	100 M
<b>NISSAN</b>							
PRIMERA (P12)	02 - 08	4	B00026 + B00019	100 M	100 M	100 M	100 M
PRIMERA (P12)	02 - 08	5	B00026 + B00019	100 M	100 M	100 M	100 M



1

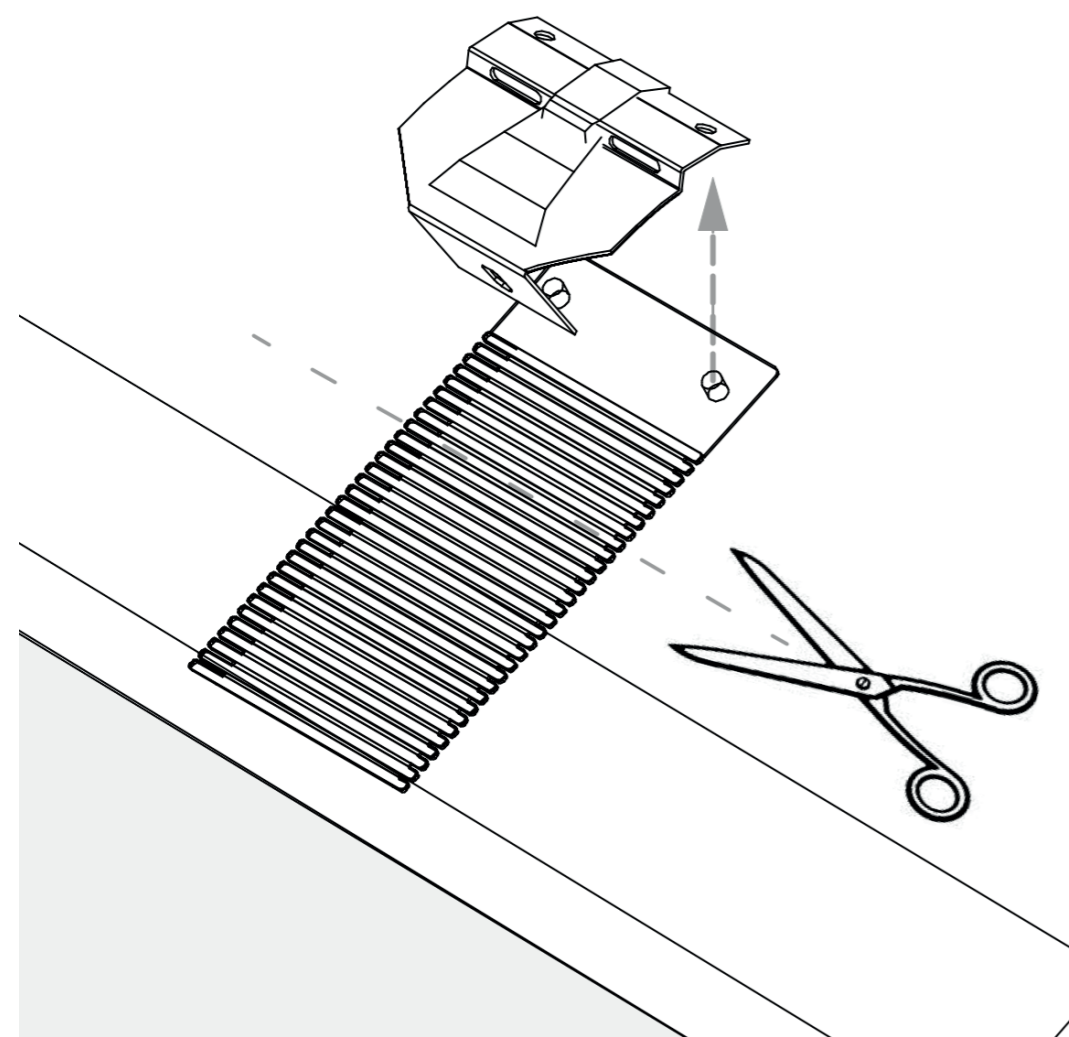

2

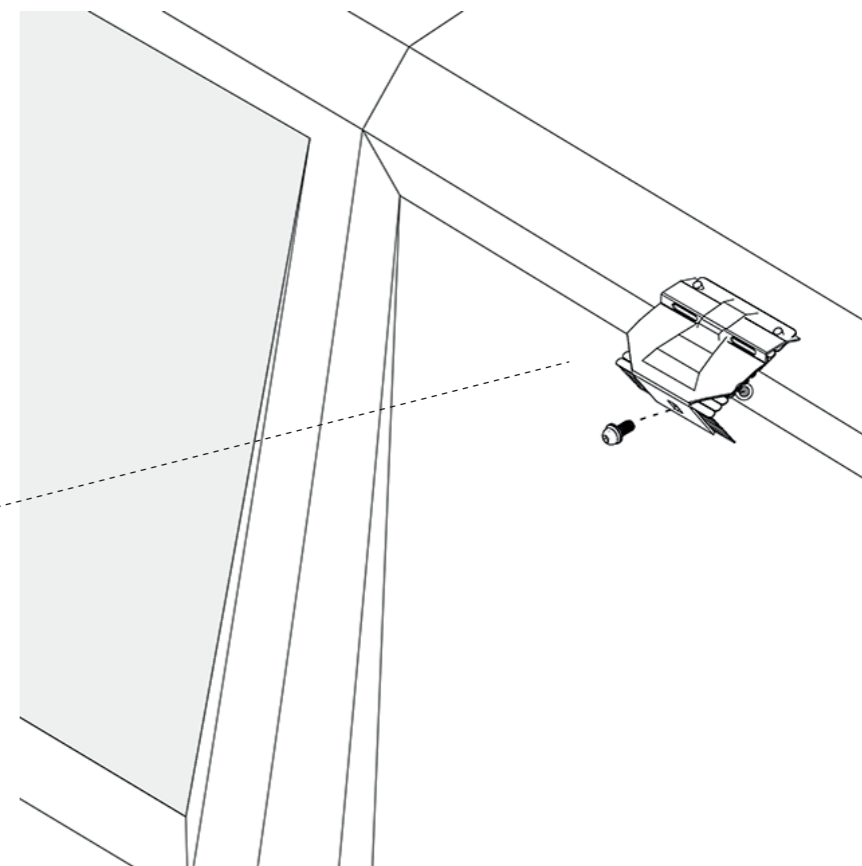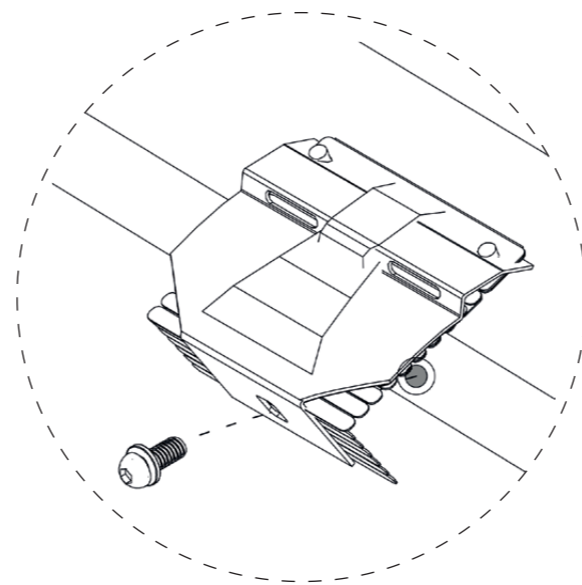

3

