



- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

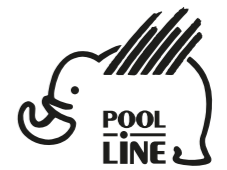


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

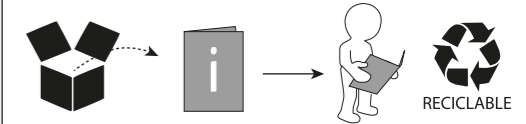


110056

Review 5/2019



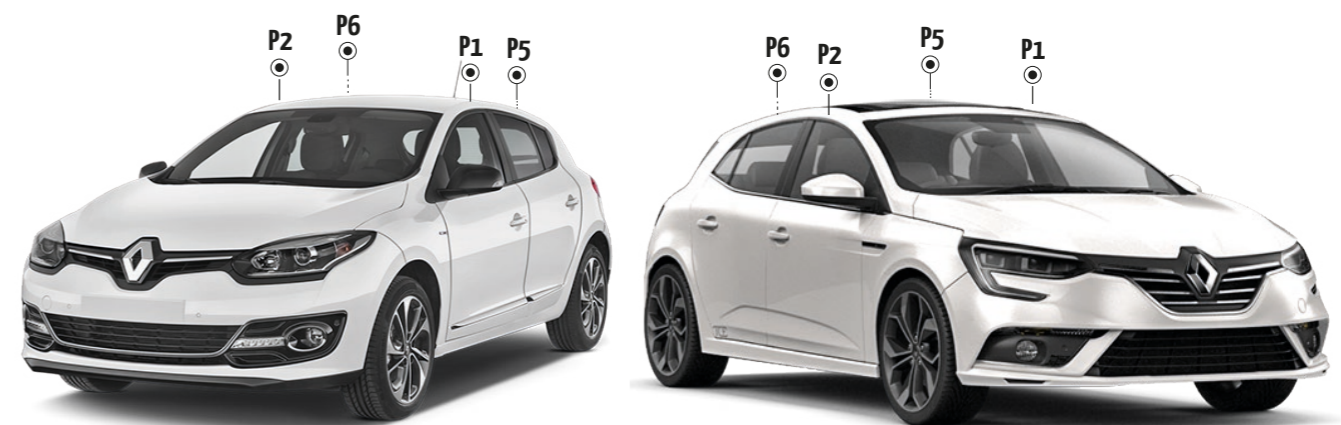


Limpieza pre-instalación
Pre-installation cleaning

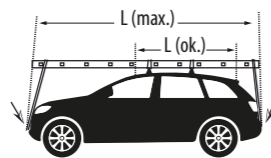


Revisar par de apriete
Check torque



				P1	P2	P5	P6
RENAULT							
Megane III	09-16	5	B00015	106	107	115 + G11	115 + G11
Megane IV	2016->	5	B00015	106 + G11	107 + G11	115 + G11	115 + G11

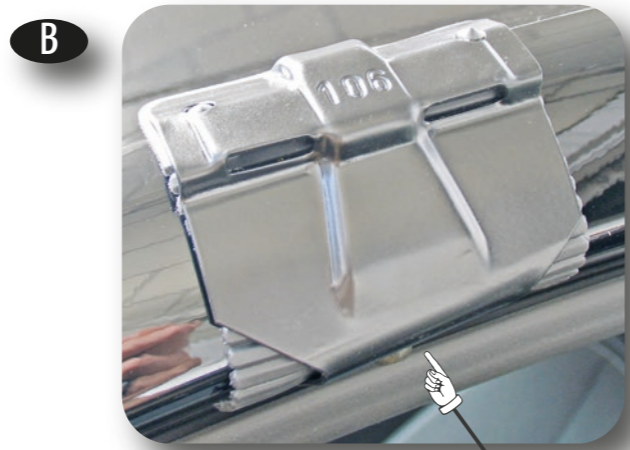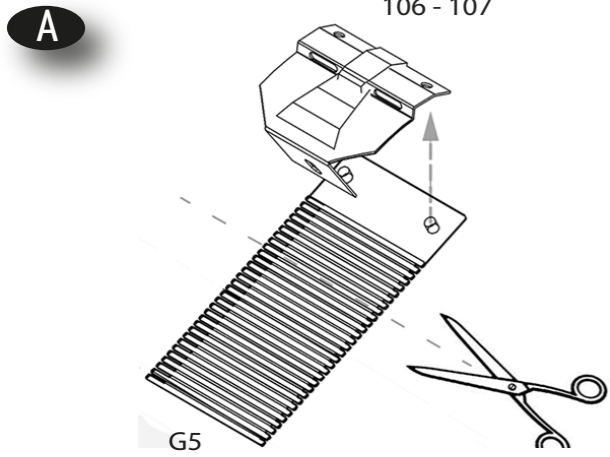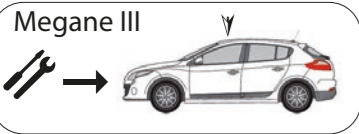


BO0015

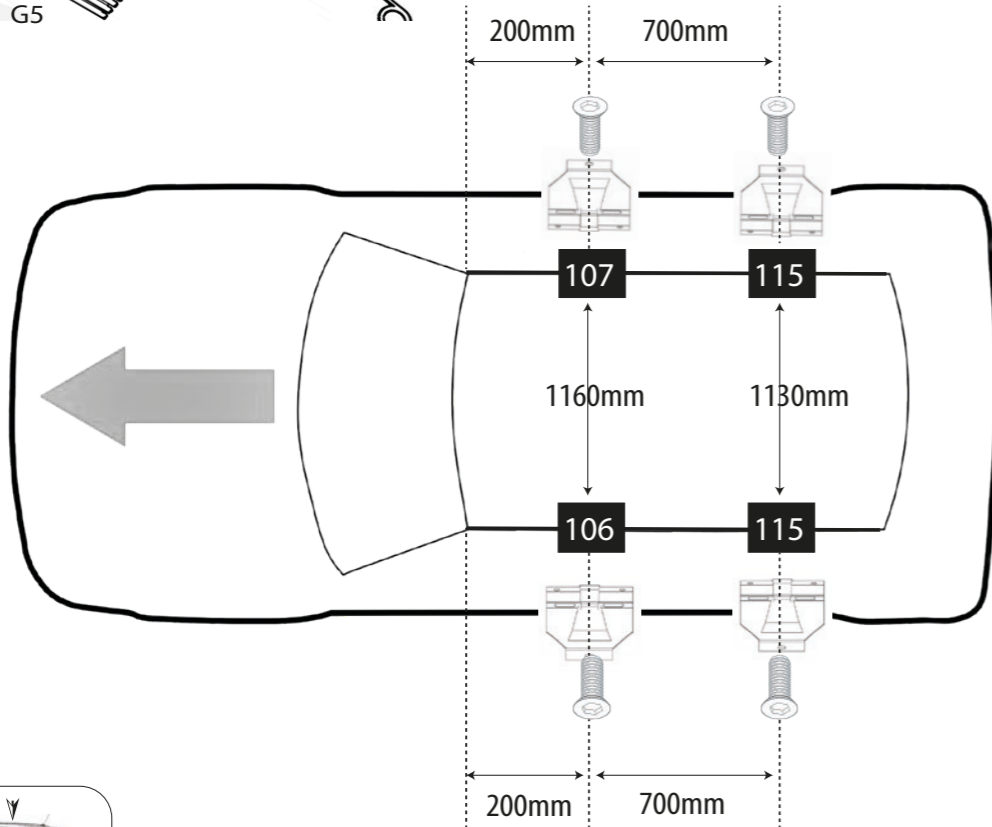


Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

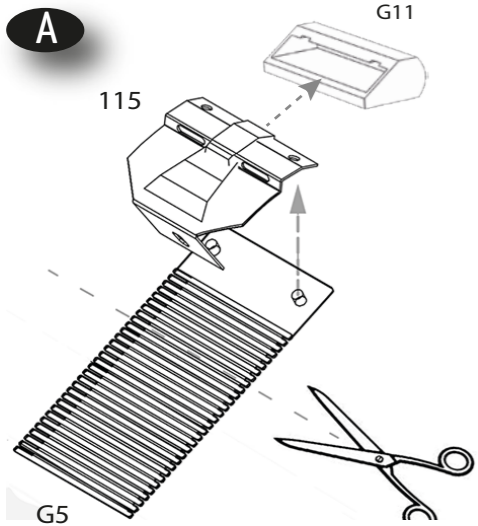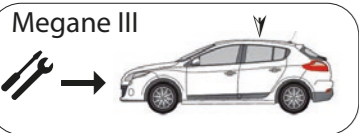


BO0015

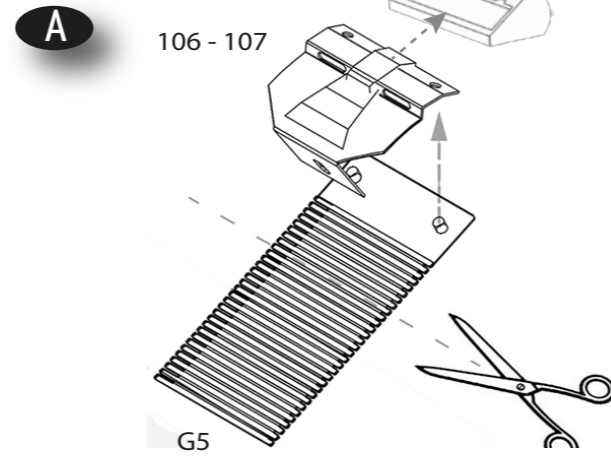

BO0015

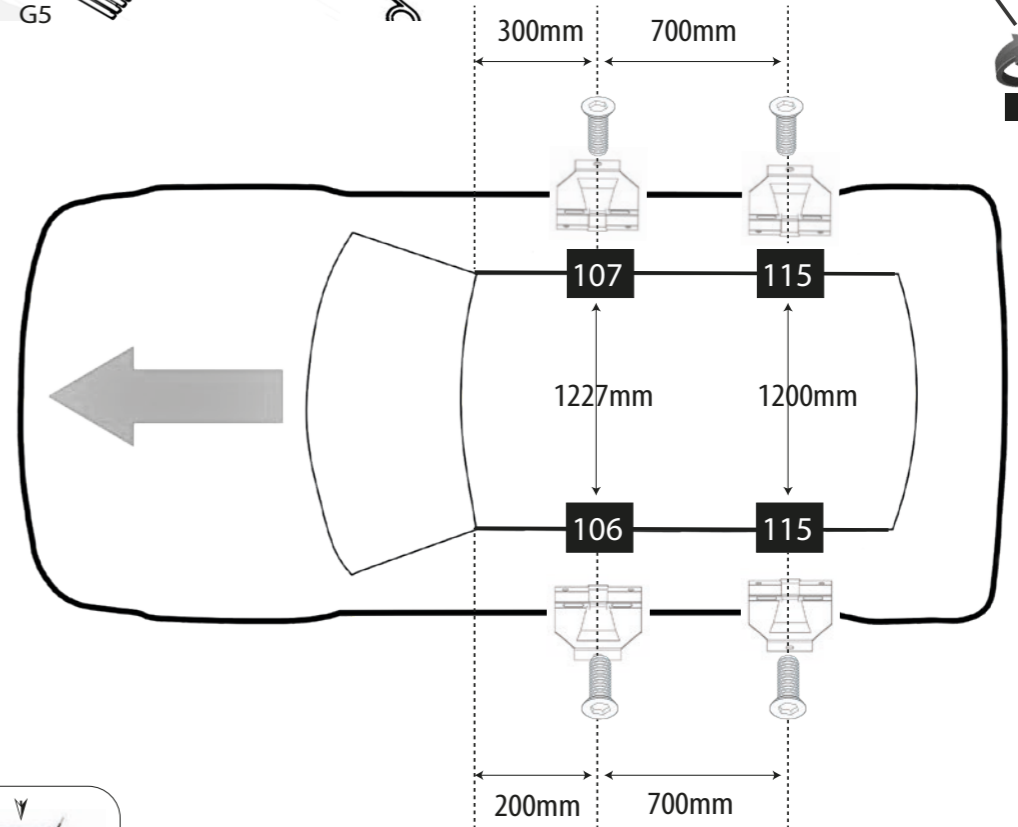

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

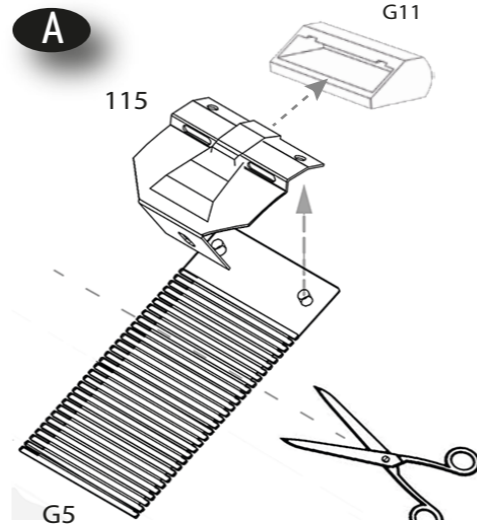

BO0015