



- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

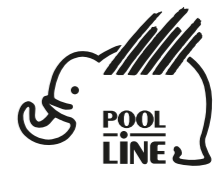


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

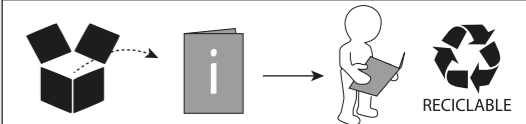


110058


Review 5/2019

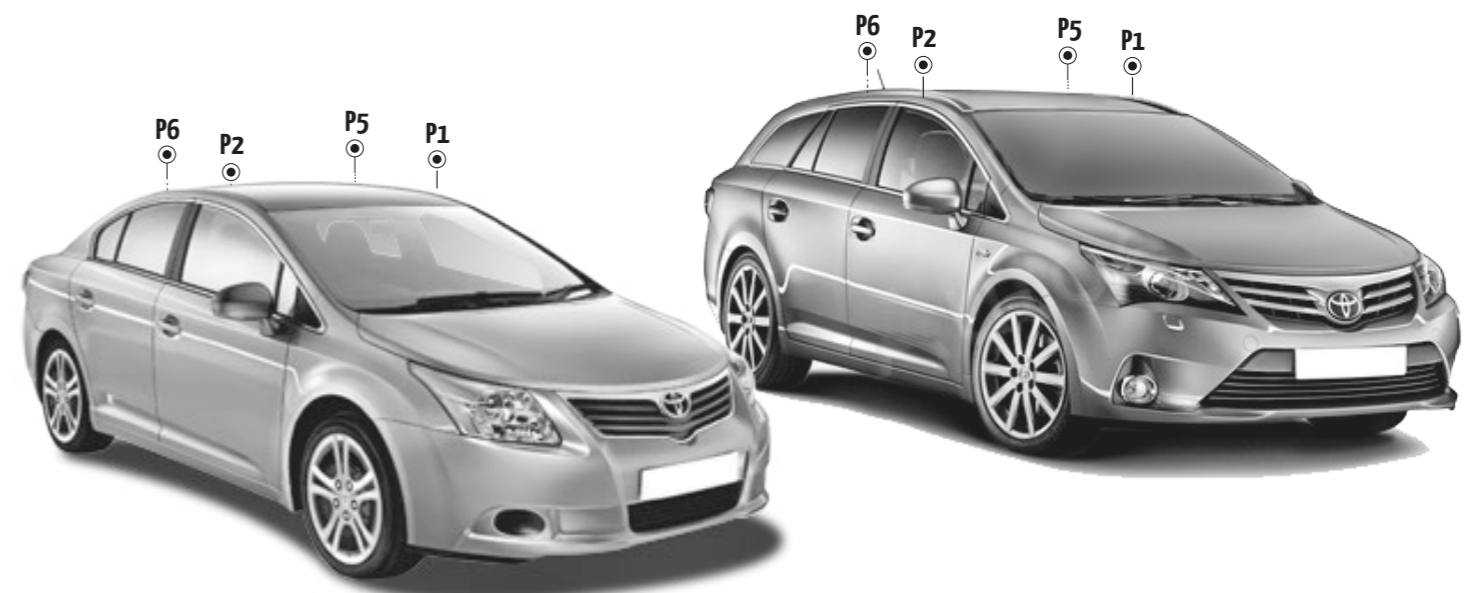



			P1	P2	P5	P6
Toyota						
AVENSIS III (T270)	09 - 18	4	84	84	5	5
AVENSIS III (T270) WAGON	09 - 18	5	84	84	5	5




1

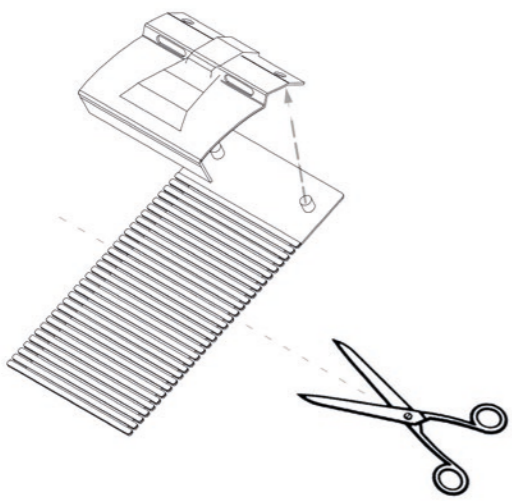


2

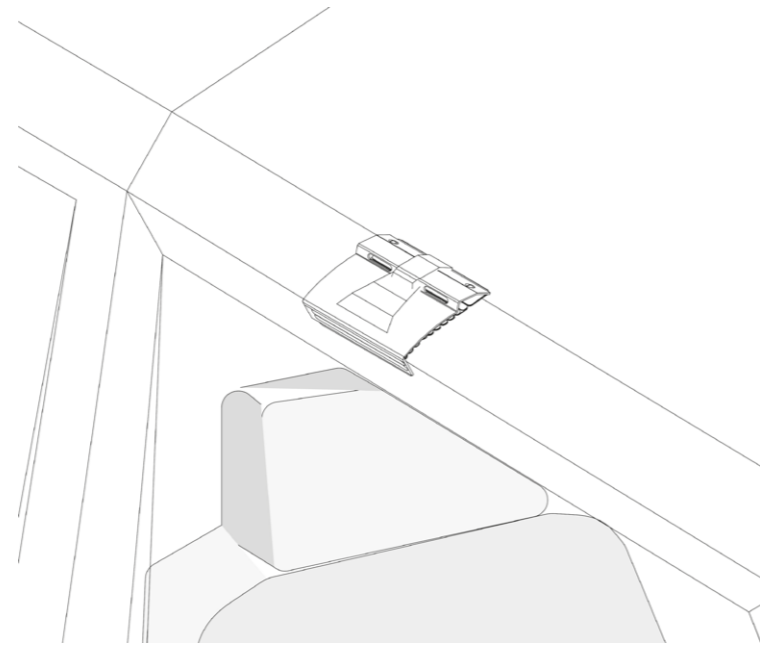

1

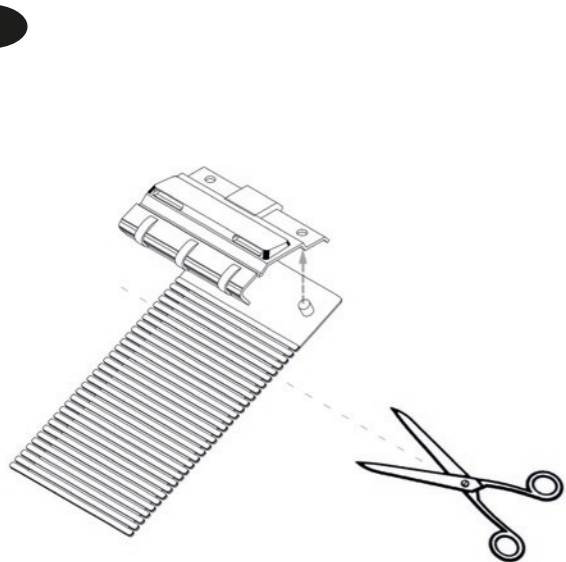


2

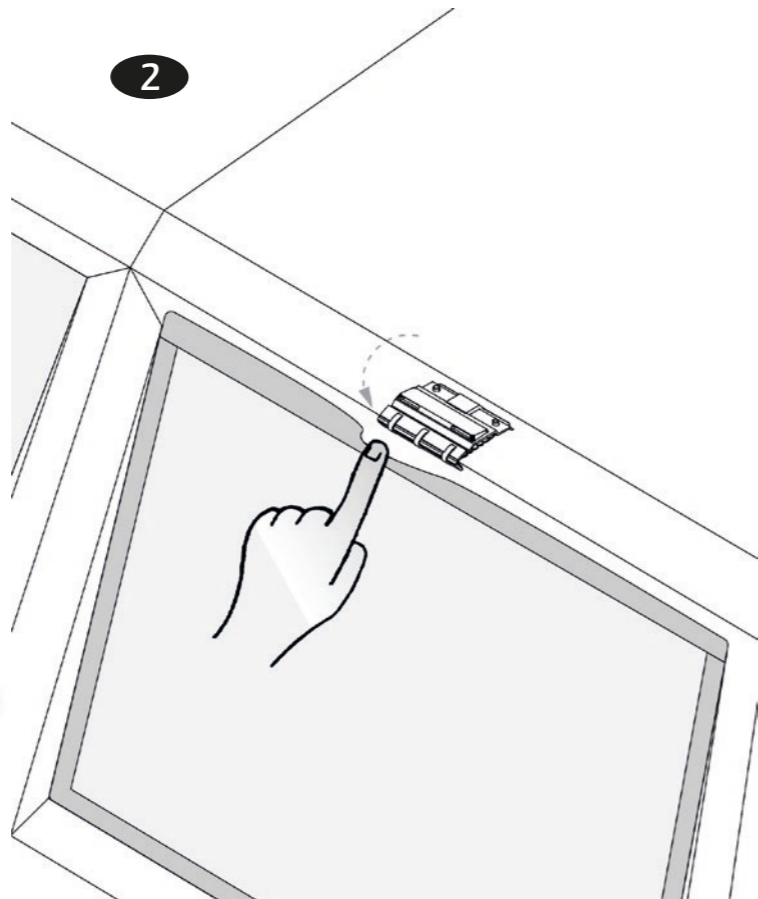

TOYOTA AVENSIS III (T270)



Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

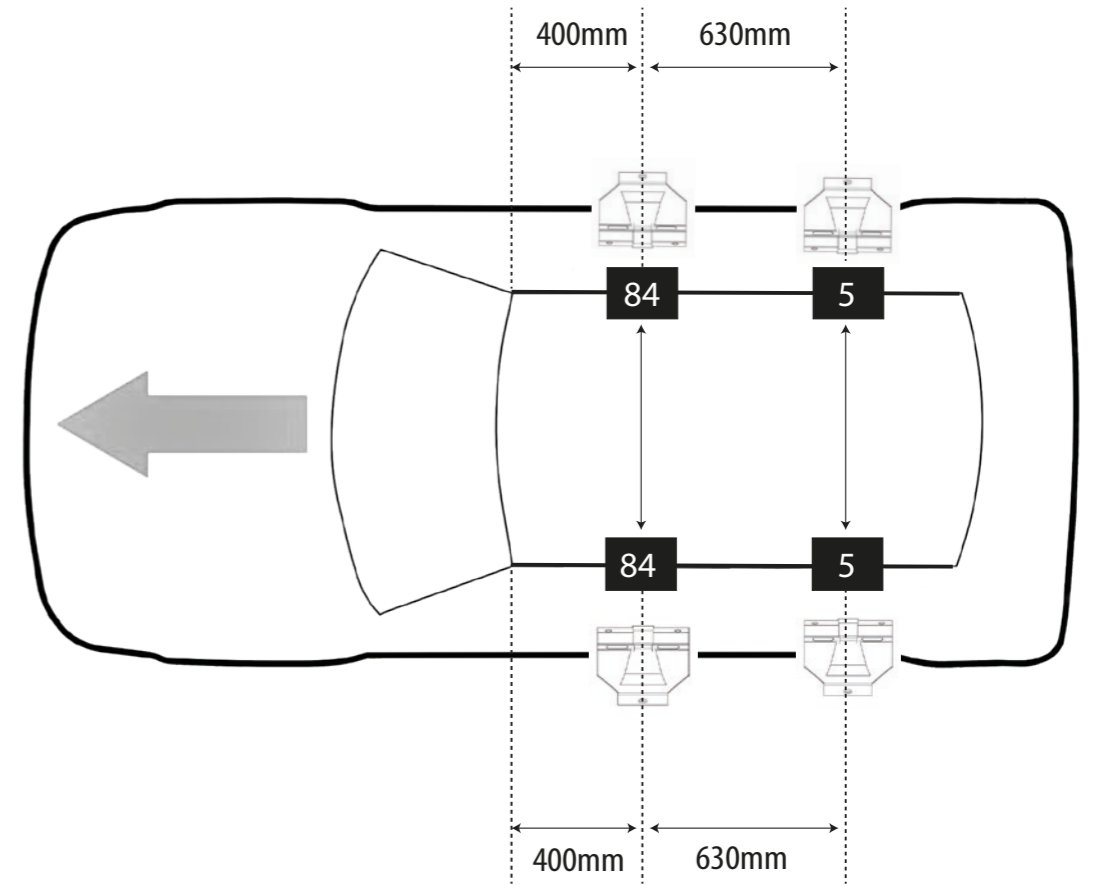

TOYOTA AVENSIS III (T270) WAGON



Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

