



- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

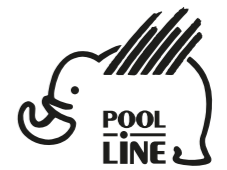



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

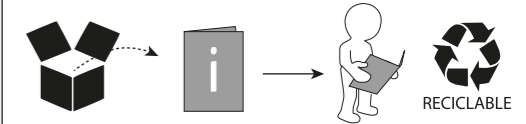


110091

Review 5/2019

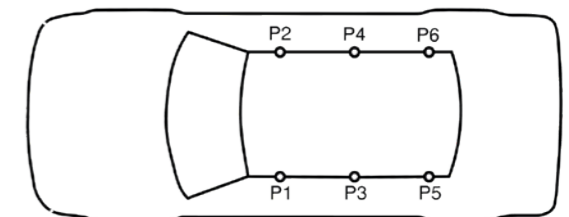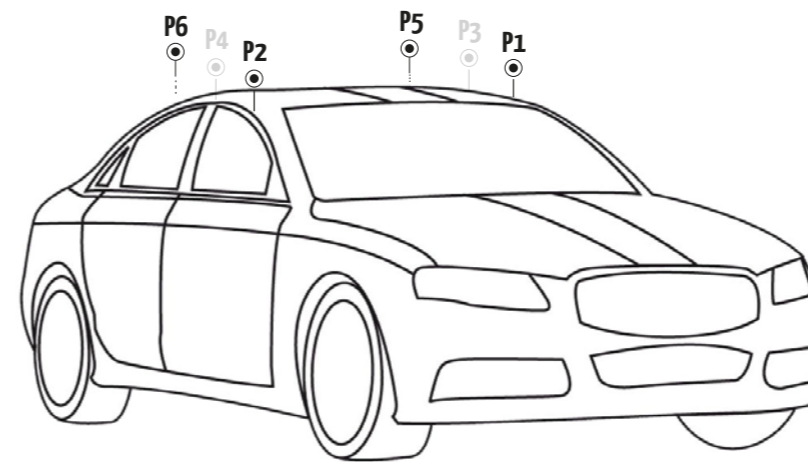

Limpeza pre-instalación
Pre-installation cleaning

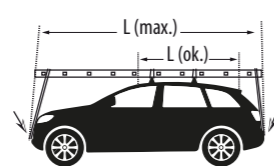

Revisar par de apriete
Check torque

			P1	P2	P5	P6
CHEVROLET						
AVEO (T200)	06 - 11	4	94	94	06	06
KALOS	06 - 11	4	94	94	06	06
KALOS	02 - 11	5	94	94	06	06
DAEWU						
KALOS	02 - 05	5	94	94	06	06
SMART						
FORFOUR W454	04 - 06	5	94	94	06	06

