



- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

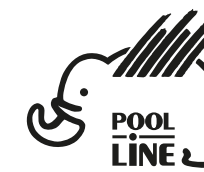


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

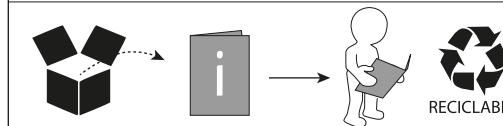

110168


Review 5/2019

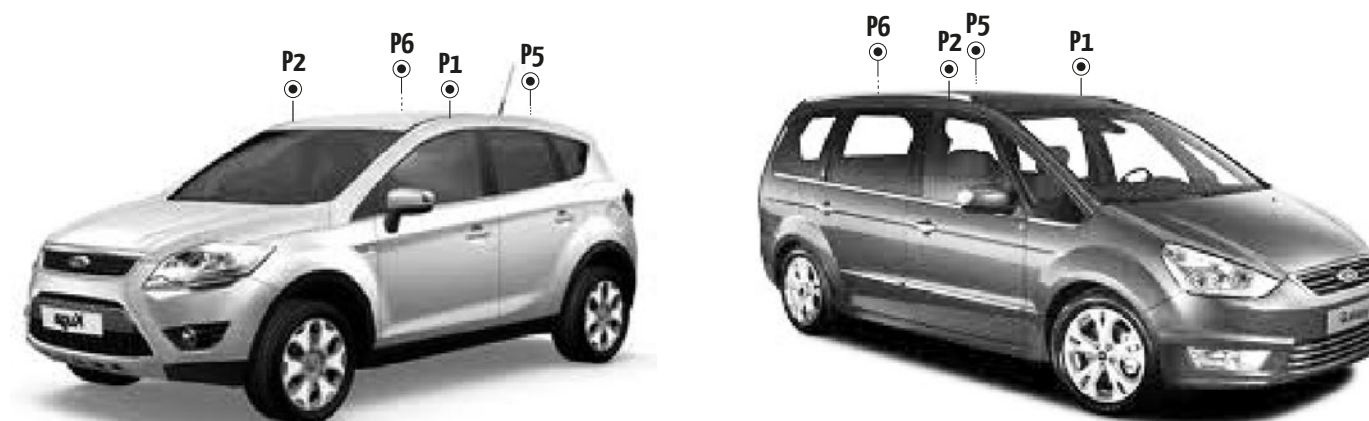

Limpieza pre-instalación



Pre-installation cleaning

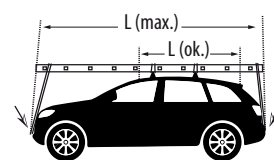

Revisar par de apriete




Check torque


			P1	P2	P5	P6
Ford						
Galaxy II (sin railing)	10-	5	20+G11+G5	20+G11+G5	20+G11+G5	20+G11+G5
Kuga I	08-12	5	20+G11+G5	20+G11+G5	20+G11+G5	20+G11+G5




A

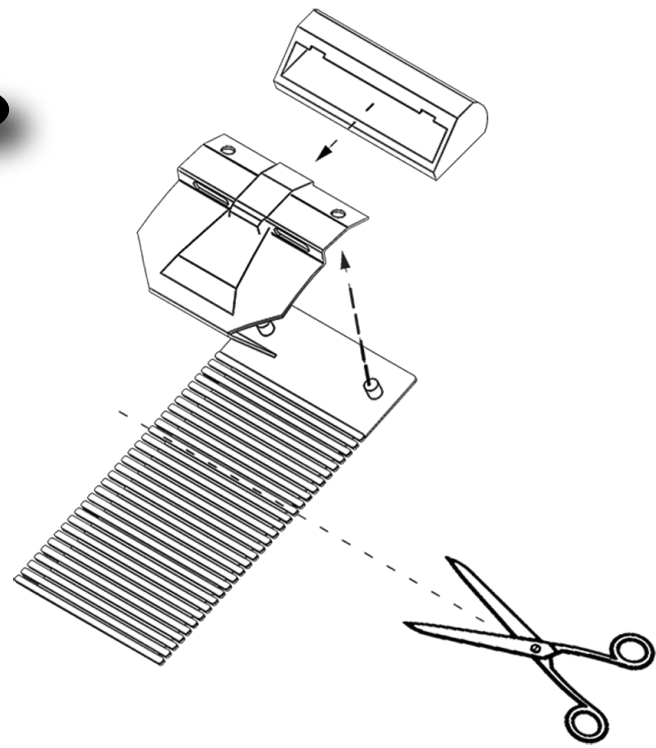


B

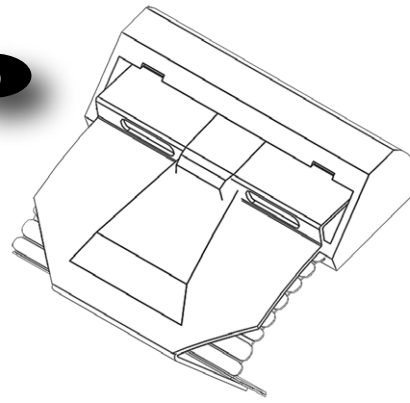

D

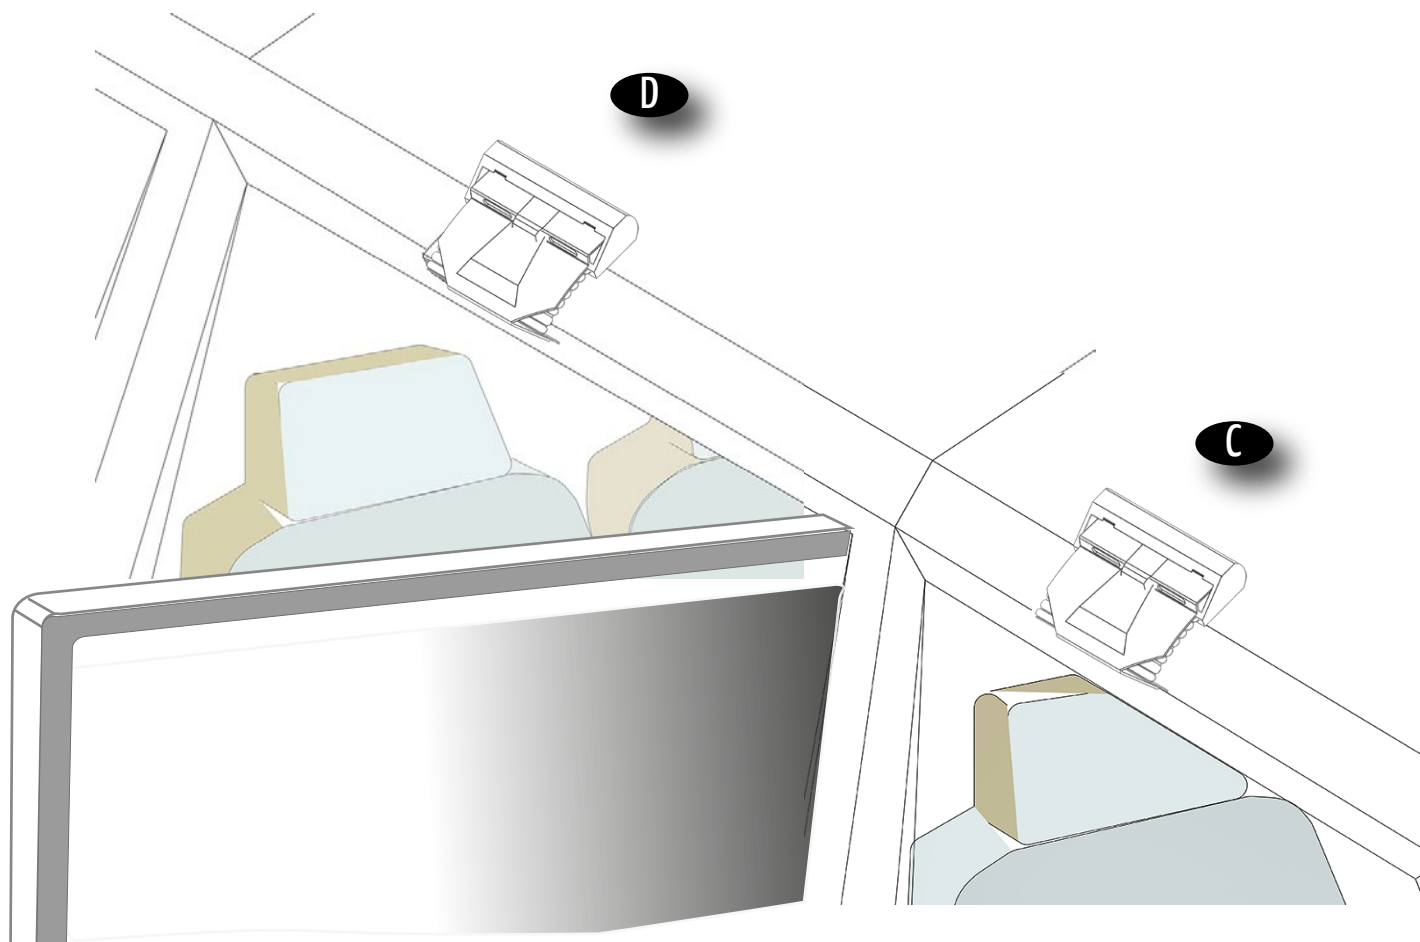


C

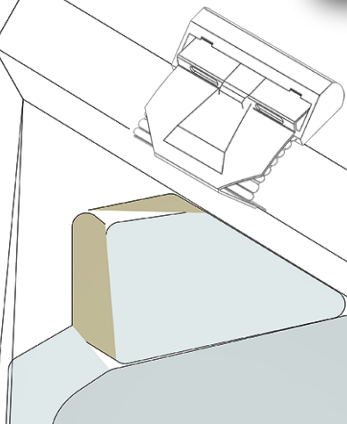

430mm 790mm

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

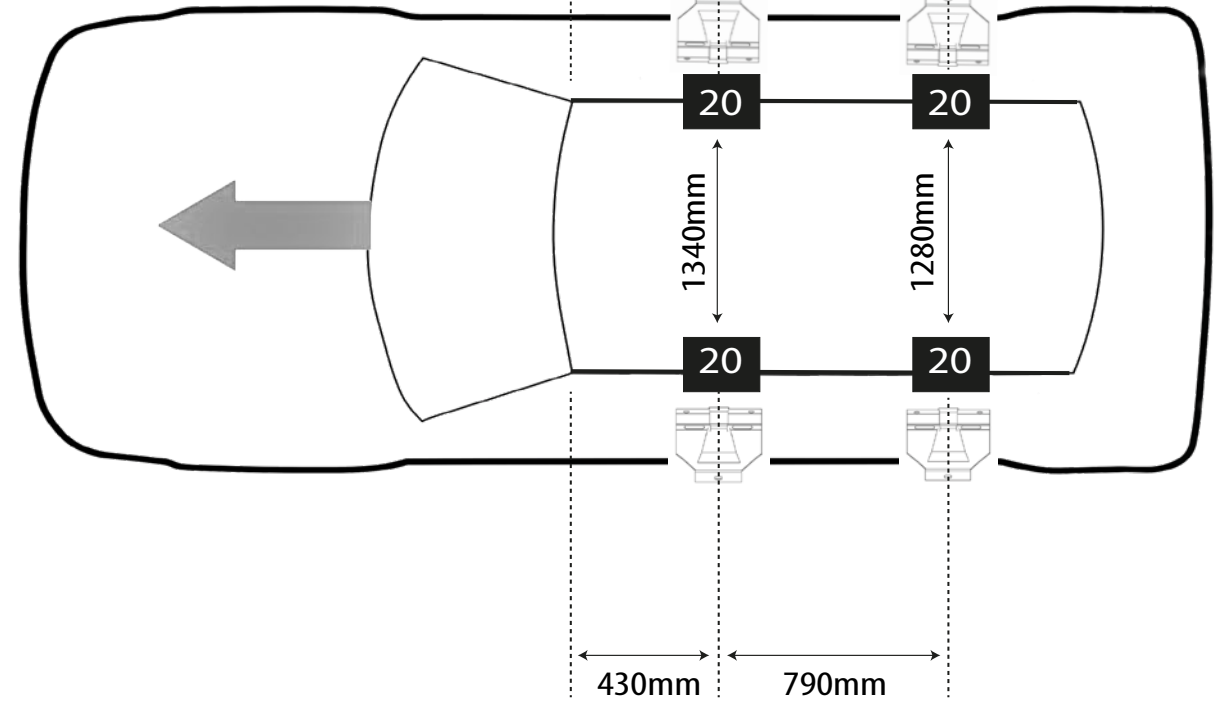


430mm 790mm



350mm 620mm

Zona delantera
Zone avant
Front zone
Zone anteriore
Vorderzone

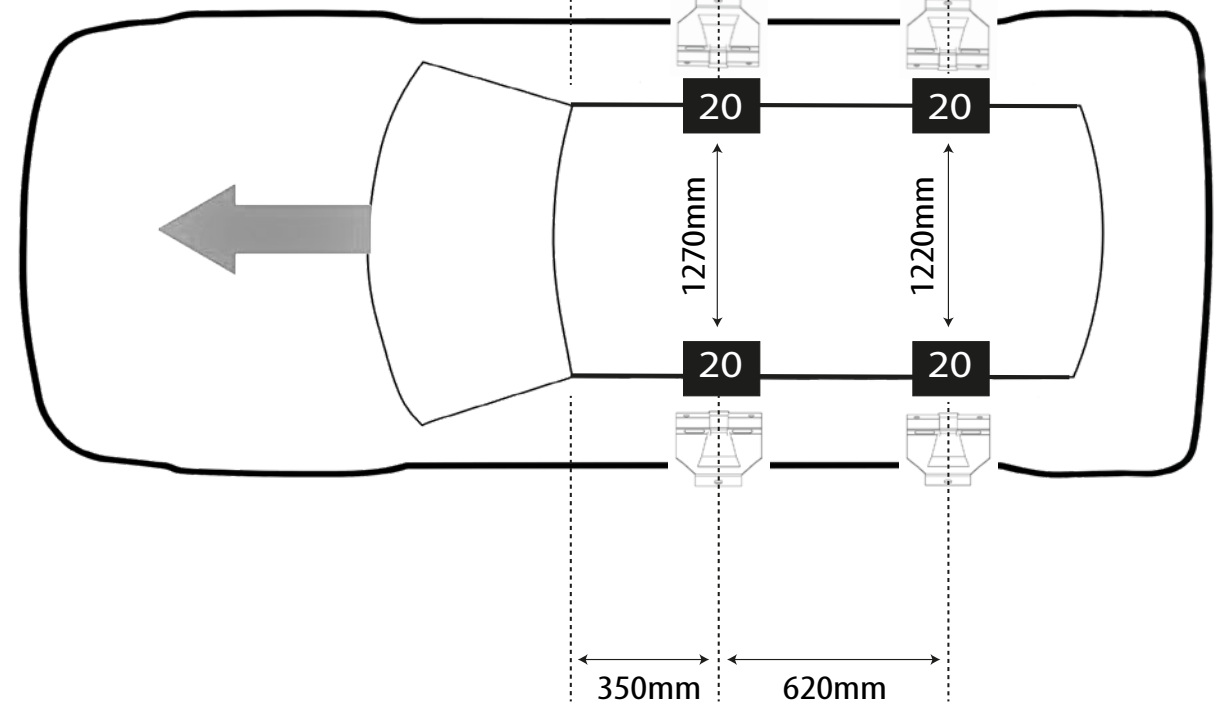

350mm 620mm