



- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

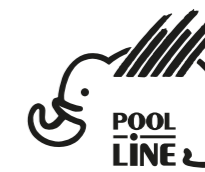



POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

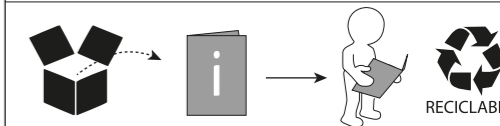

110169


Review 5/2019

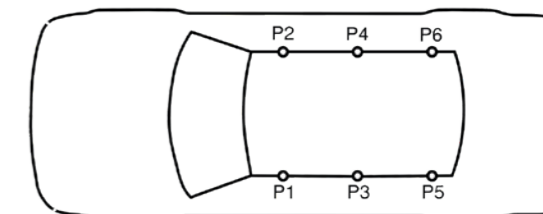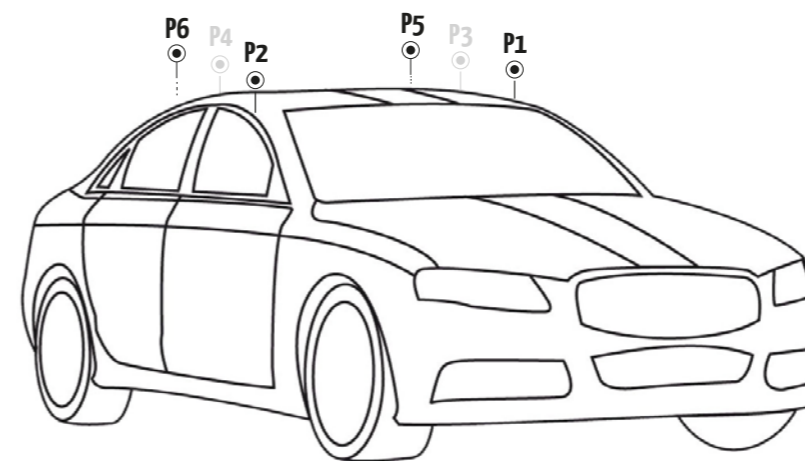

Limpieza pre-instalación



Pre-installation cleaning


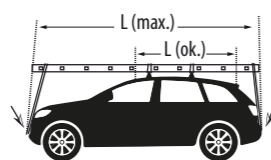


Revisar par de apriete



Check torque

				P1	P2	P5	P6
AUDI							
A-4 B7	04 - 08	4	B00039	32	32	32	32
A-4 B8	08 - 12	4	B00039	32	32	32	32
SEAT							
EXEO	2009 ->	5	B00039	32	32	32	32
SKODA							
OCTAVIA II (1Z)	04 - 13	5	B00015	32	32	32	32
SUPER B II (3T)	2008 ->	5	B00025	32	32	32	32
VOLKSWAGEN							
TOURAN	2010 ->	5	B00015	32	32	32	32

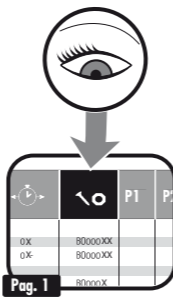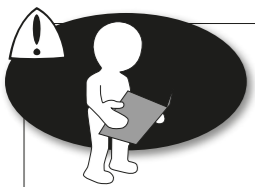

0X	90000XX
0X	90000XX
0X	90000XX
Pag. 1	

