

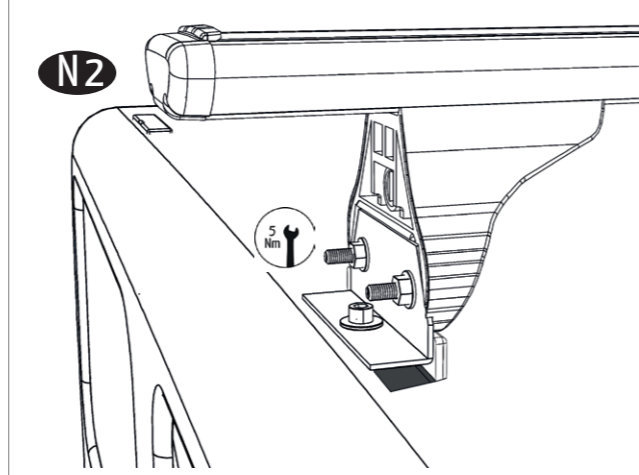
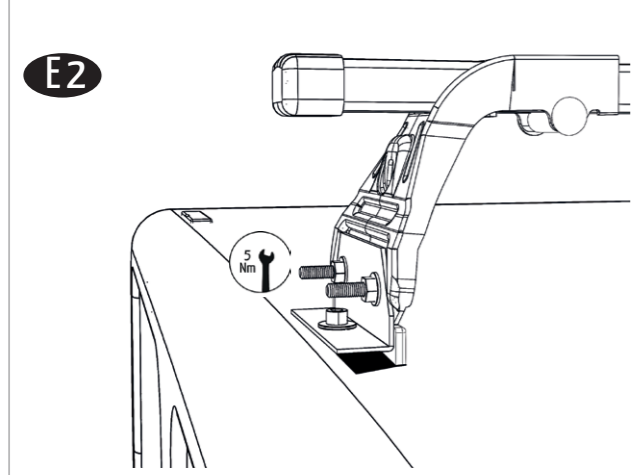


**EVO**


**NEO**

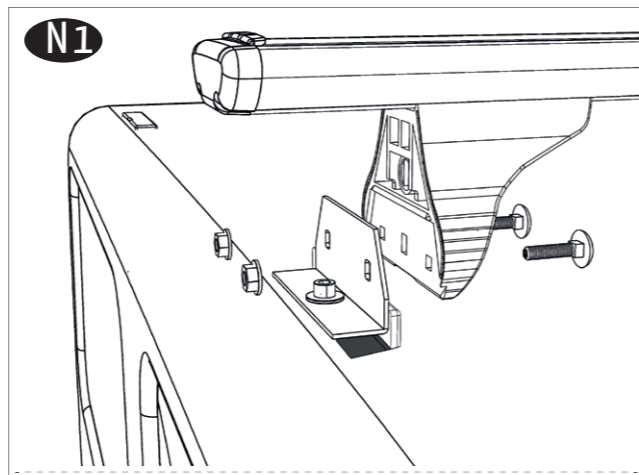

Limpieza pre-instalación

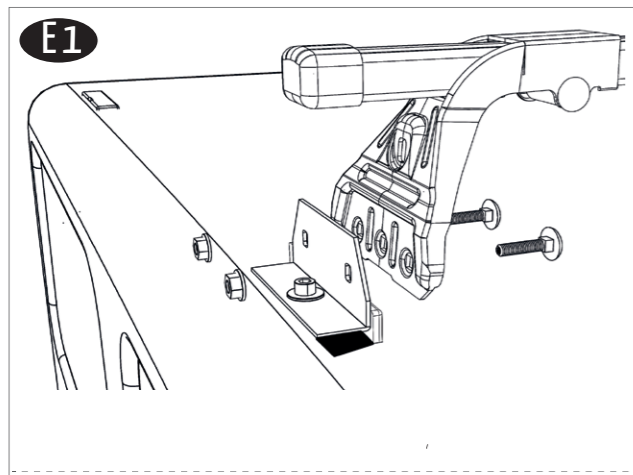

Pre-installation cleaning

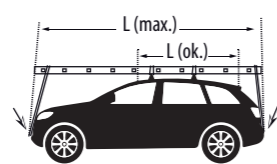

Revisar par de apriete




Check torque

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti





POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

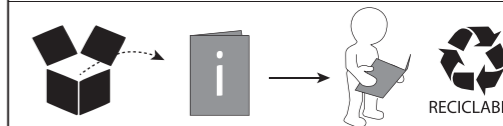



**110410**




Review 3/2023

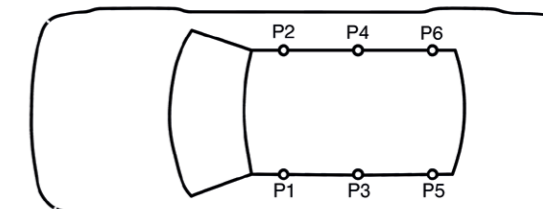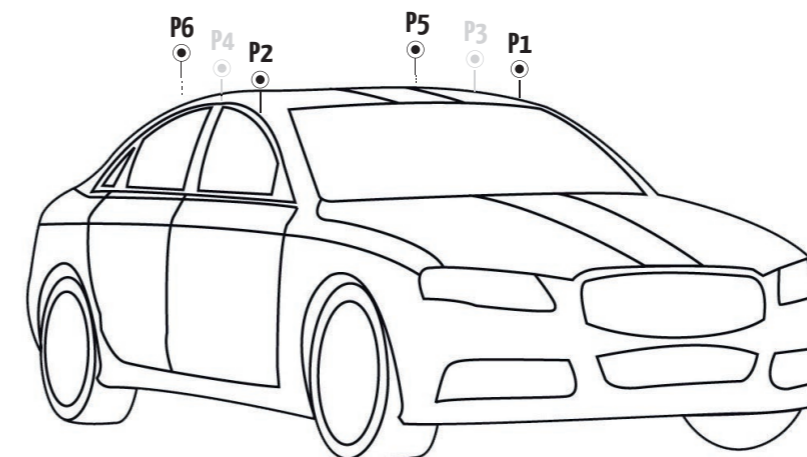

			P1	P2	P5	P6
<b>CITROËN</b>						
C15	84 - 06	B00036	S15	S15	S15	S15
<b>FORD</b>						
COURIER	95 - 02	B00035+B00033+B00032	S15	S15	S15	S15
TOURNEO CONNECT L1	02 - 13	B00036	S15	S15	S15	S15
TOURNEO CONNECT L2	02 - 13	B00036	S15	S15	S15	S15
TRANSIT CONNECT L1	02 - 13	B00036	S15	S15	S15	S15
TRANSIT CONNECT L2	02 - 13	B00036	S15	S15	S15	S15
<b>NISSAN</b>						
KUBISTAR	97 - 09	B00036	S15	S15	S15	S15
<b>RENAULT</b>						
EXPRESS	91 - 96	B00035+B00033	S15	S15	S15	S15
KANGOO I	97 - 08	B00036	S15	S15	S15	S15
KANGOO II	08 - 21	B00036+B00032	S15	S15	S15	S15
<b>VOLKSWAGEN</b>						
CADDY III	04 - 11	B00036+B00032	S15	S15	S15	S15
CADDY IV	11 - 20	B00036+B00032	S15	S15	S15	S15
CADDY V	20 -	B00036+B00032	S15	S15	S15	S15

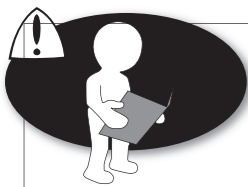

A  →

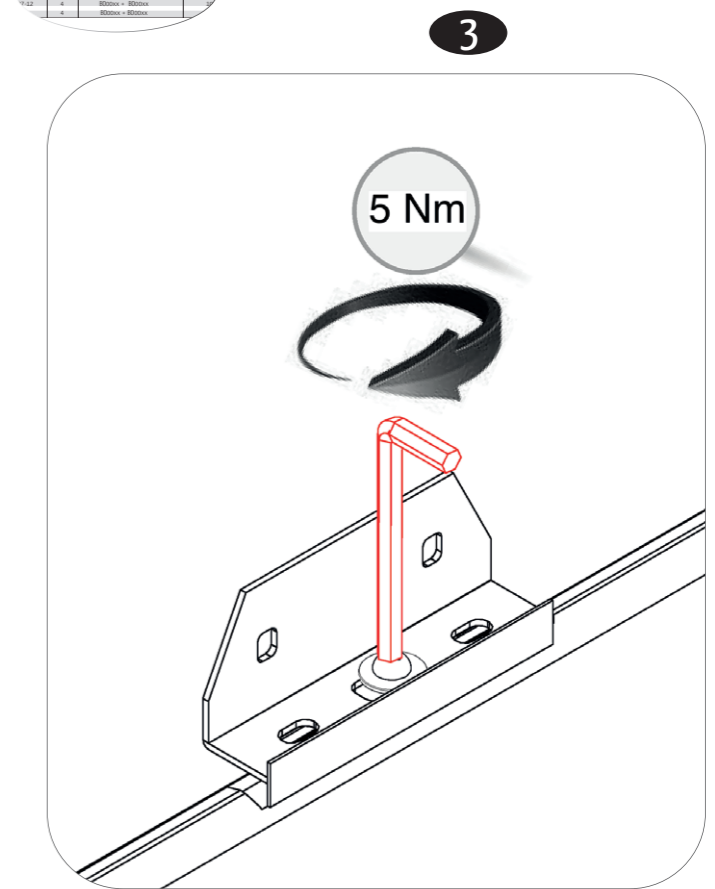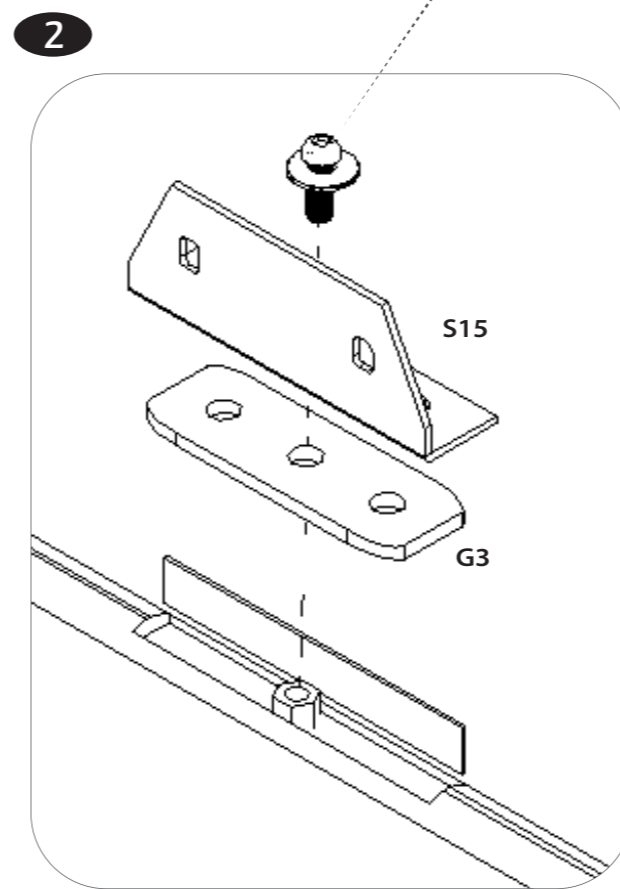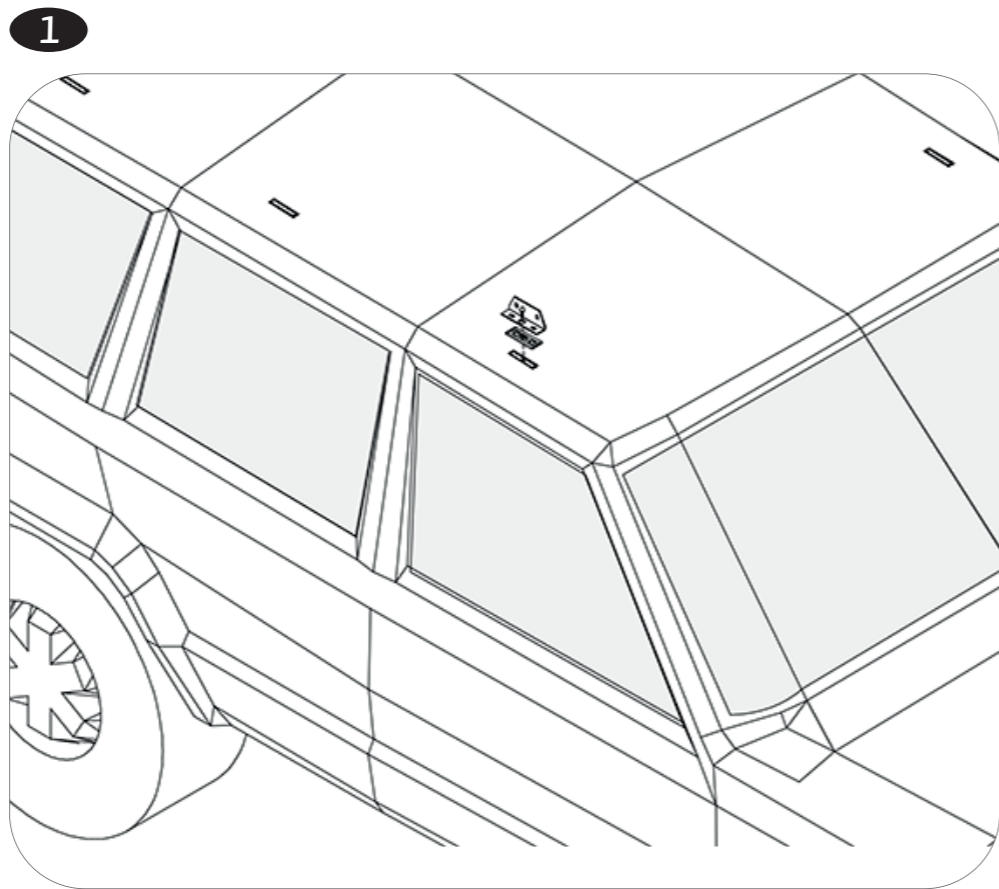

B  →

