

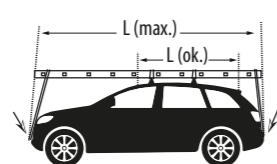
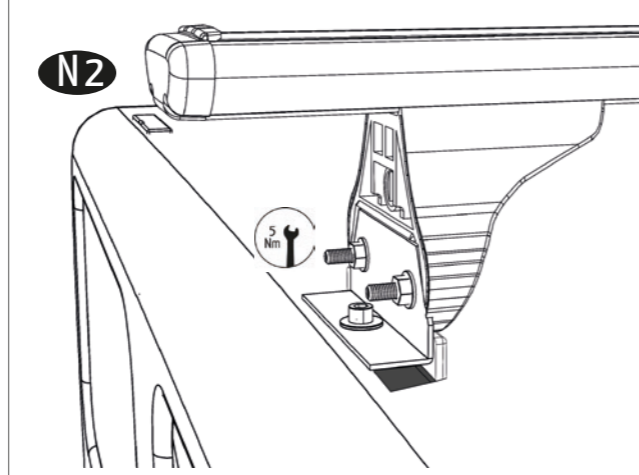
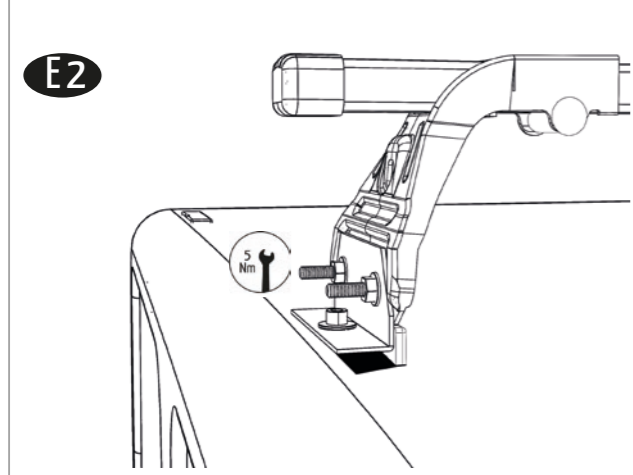
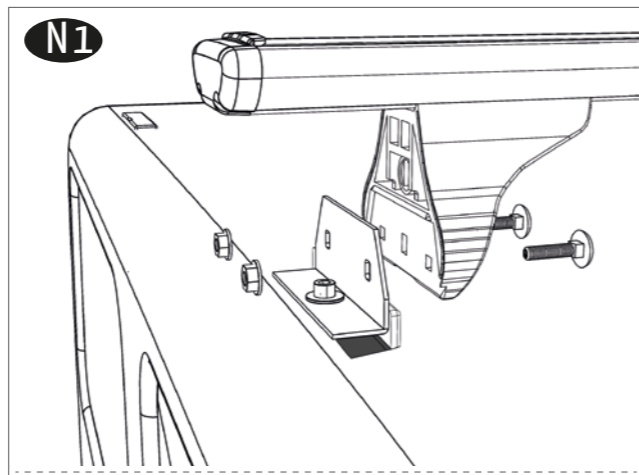


EVO

NEO

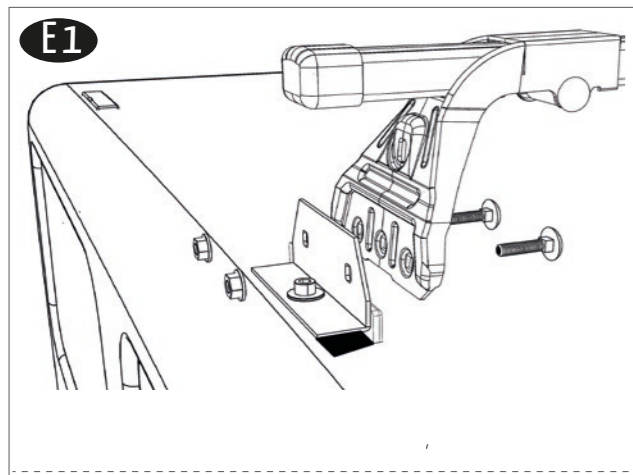


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

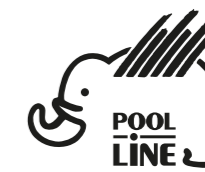



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

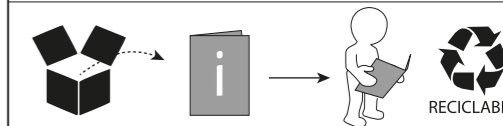



110411

Review 12/2017

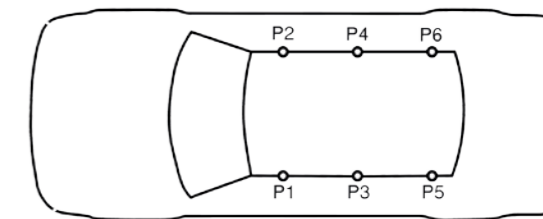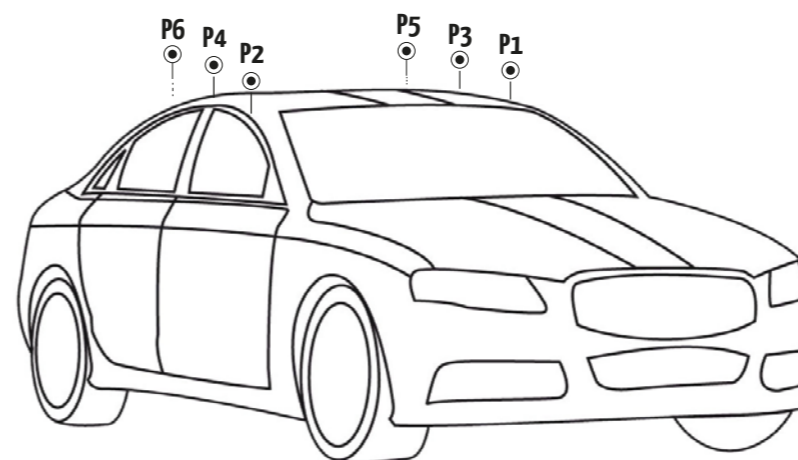


				P1	P2	P3	P4	P5	P6
CITROËN									
XANTIA BREAK	96 - 03	5	B00025	S15 + (*)	S15 + (*)			S15 + (*)	S15 + (*)
XSARA BREAK	98 - 06	5	B00025	S15 + (*)	S15 + (*)			S15 + (*)	S15 + (*)
DODGE									
NITRO	07 - 11	5	B00021+B00020	S15	S15	S15	S15	S15	S15
FIAT									
FIORINO II	- 08		B00027	S15	S15			S15	S15
FORD									
GALAXY II	06-10	5	B00027	S15 + (*)	S15 + (*)	S15 + (*)	S15 + (*)	S15 + (*)	S15 + (*)
LAND ROVER									
DISCOVERY III	04 - 09	5	B00028+B00020+B00037			S15	S15	S15	S15
RENAULT									
ESPACE III	96 - 00	5	B00025+B00020	S15	S15	S15	S15	S15	S15
ESPACE III	00 - 02	5	B00025+B00020	S15	S15	S15	S15	S15	S15
GRAND ESPACE III	96 - 00	5	B00025+B00020	S15	S15	S15	S15	S15	S15
GRAND ESPACE III	00 - 02	5	B00025+B00020	S15	S15	S15	S15	S15	S15
VOLKSWAGEN									
T5 / T6 (con rail)	03 ->		B00020+B00027	S15 + (*)	S15 + (*)	S15 + (*)	S15 + (*)	S15 + (*)	S15 + (*)
T5 / T6	03 ->		B00020+B00027	S15	S15	S15	S15	S15	S15

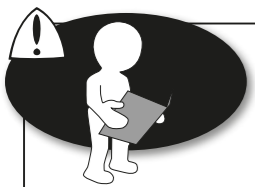


A  →


1

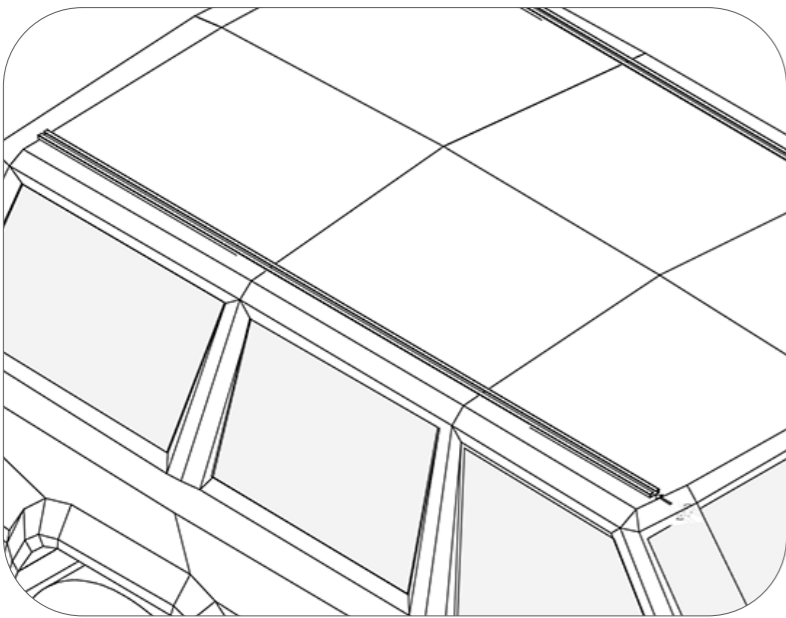


2

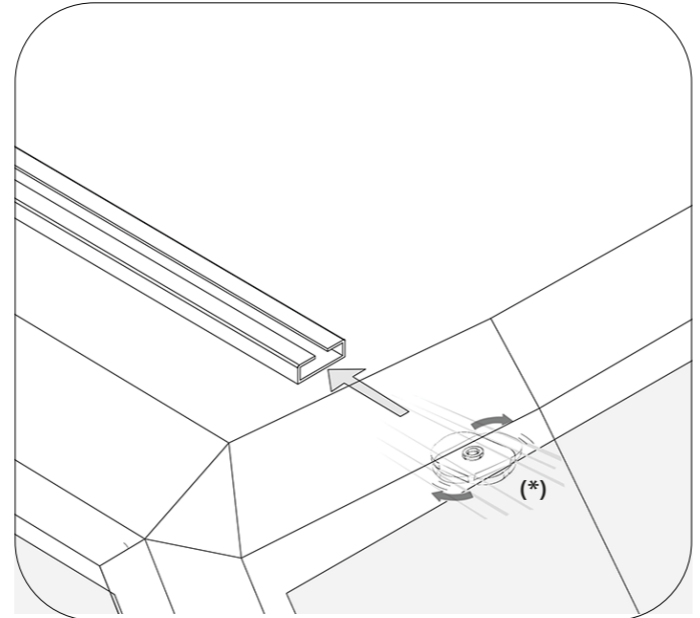


3

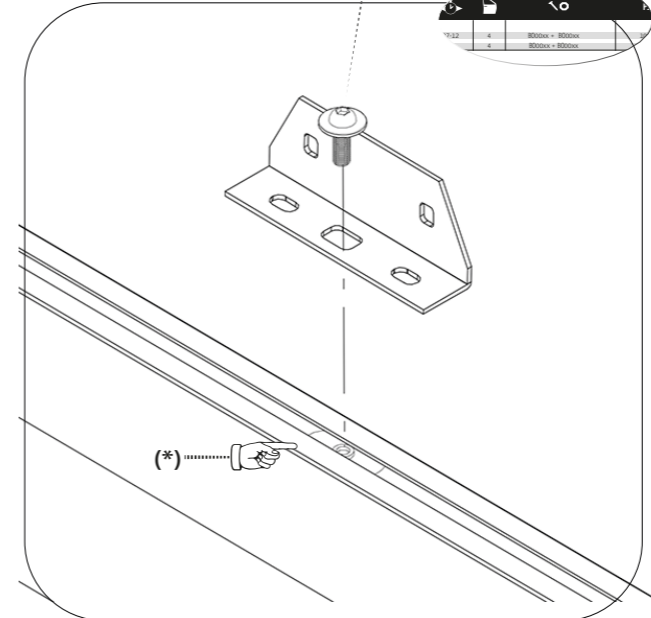


4

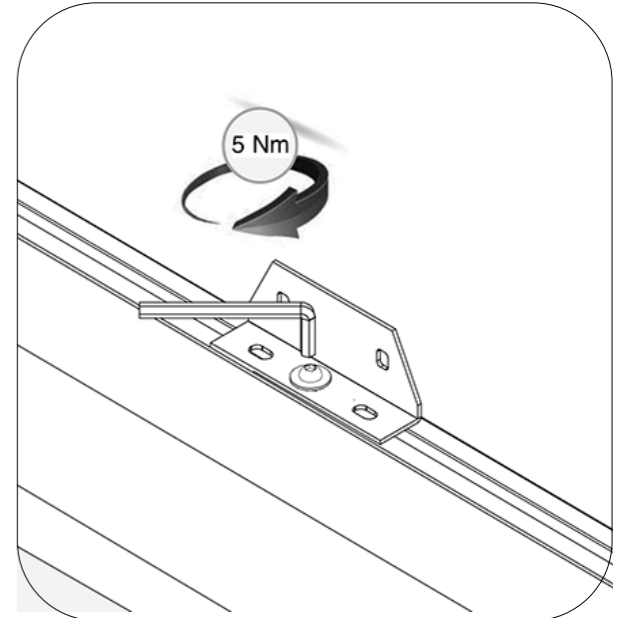


B  →

1

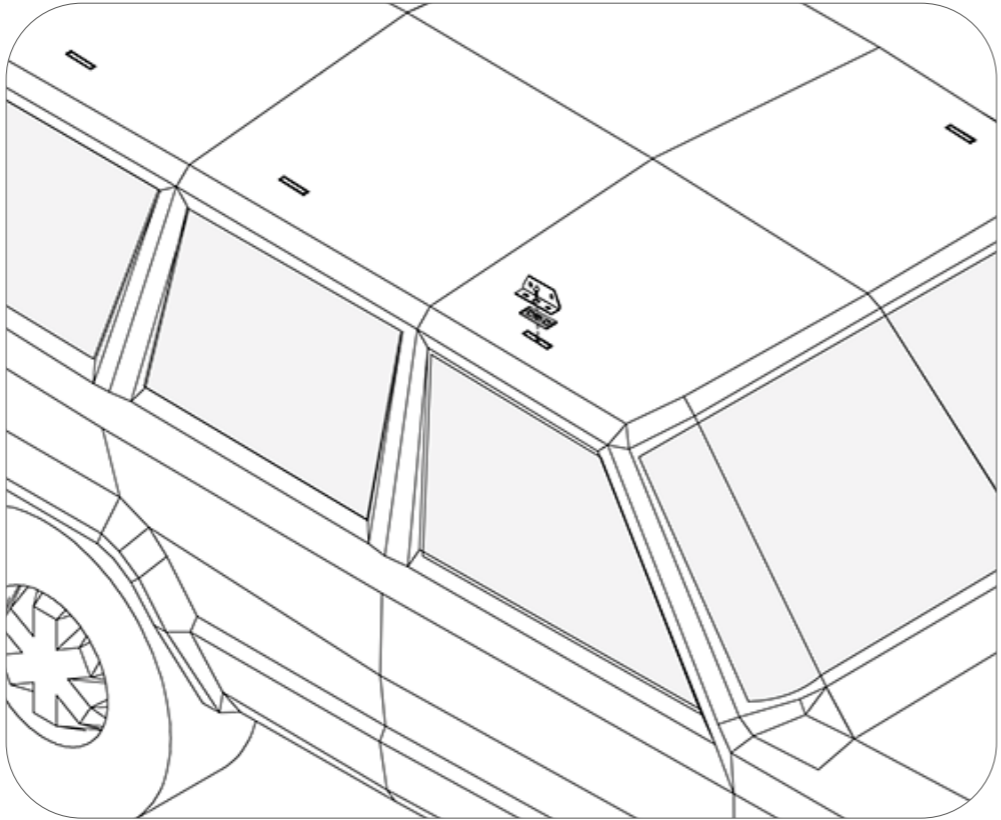

2

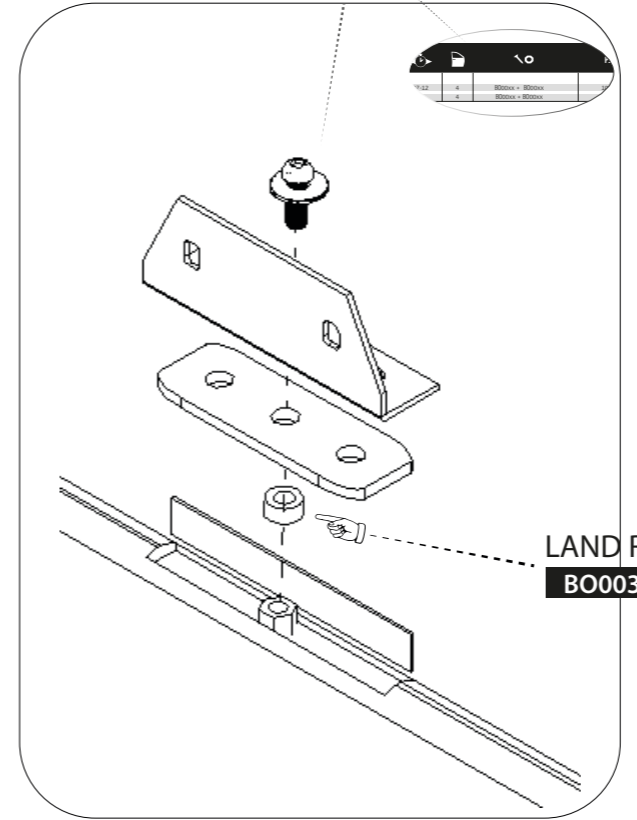

3

