
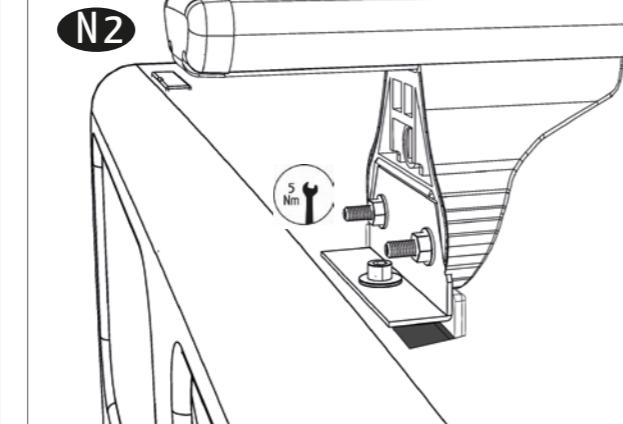
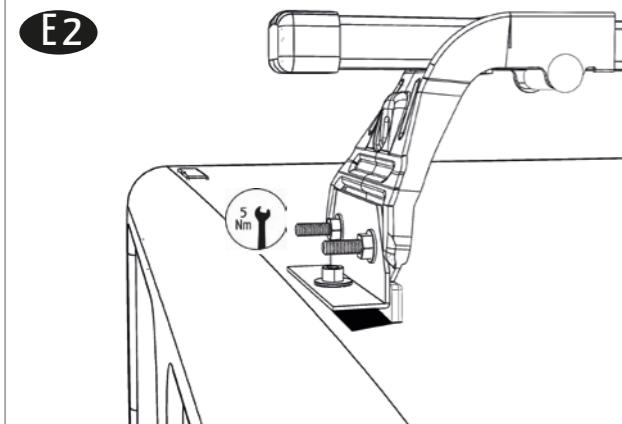
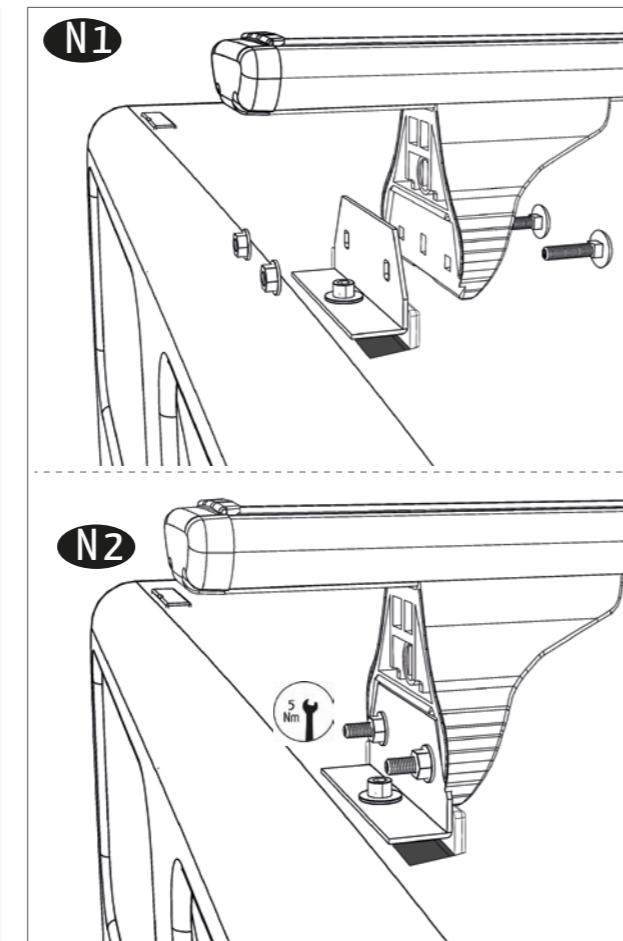



BO0018
DIN 912 M6x16
x4

BO0020
DIN 9021 Ø6
x4

BO0048
DIN 603
M6X25
DIN 934 M6
x8
DIN 9021
x8

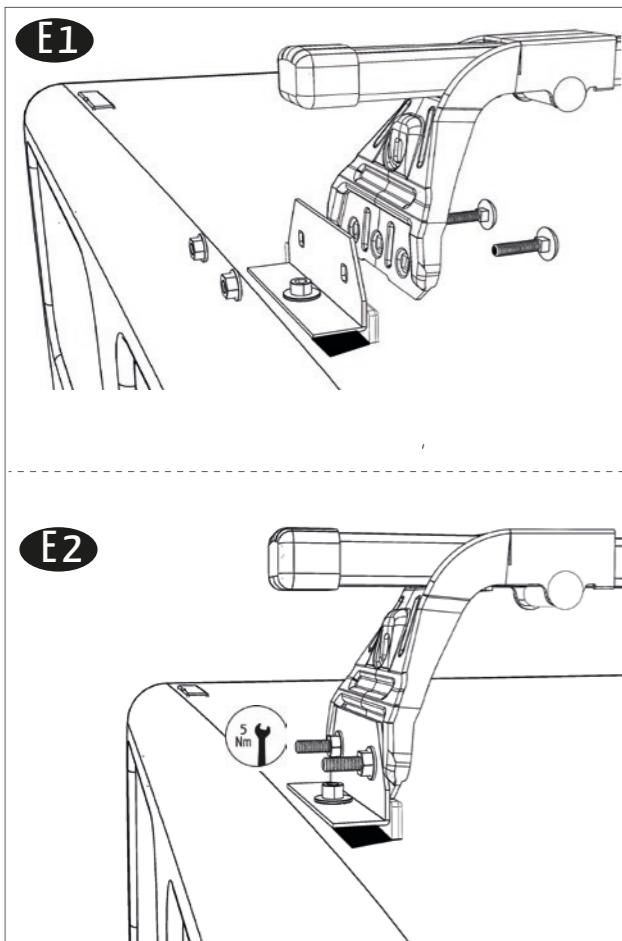


Limpieza pre-instalación
Pre-installation cleaning

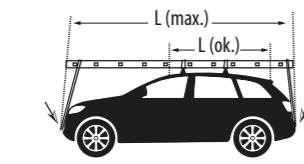


Revisar par de apriete
Check torque

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instruccions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Instruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instructiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikle montaj	Montaj kiti

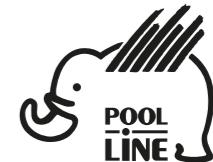


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

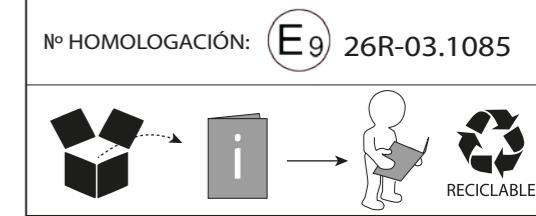

110431

Rev: 10/2017

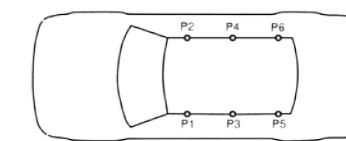

						P1	P2	P5	P6
LAND ROVER									
DISCOVERY III	04 - 09	5				B00018+B00020	S15 + G3 + 409	S15 + G3 + 409	S15 + G3 + 409
DISCOVERY IV	09 - 14	5				B00018+B00020	S15 + G3 + 409	S15 + G3 + 409	S15 + G3 + 409
RANGE ROVER SPORT L320	05 - 09	5				B00018+B00020	S15 + G3 + 409	S15 + G3 + 409	S15 + G3 + 409
RANGE ROVER SPORT L320	09 - 14	5				B00018+B00020	S15 + G3 + 409	S15 + G3 + 409	S15 + G3 + 409
PORSCHE									
CAYENNE (9PA)	02 - 09	5				B00018+B00020	S15 + G3 + 409	S15 + G3 + 409	S15 + G3 + 409

