

BO0032
DIN 125



x8

BO0033
DIN 985 M8



x8

BO0048

DIN 603
M6X25



x8

DIN 934 M6







x8

DIN 9021




x8

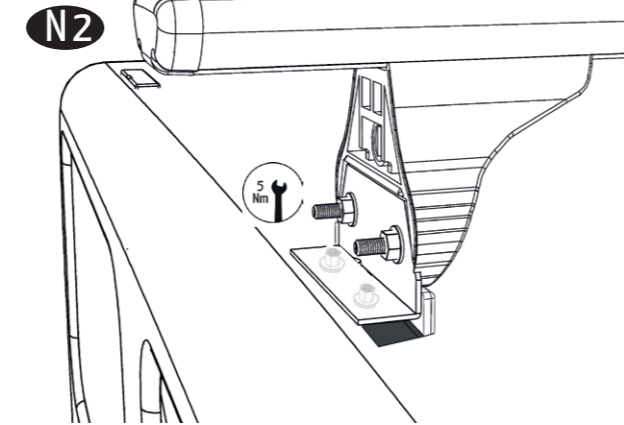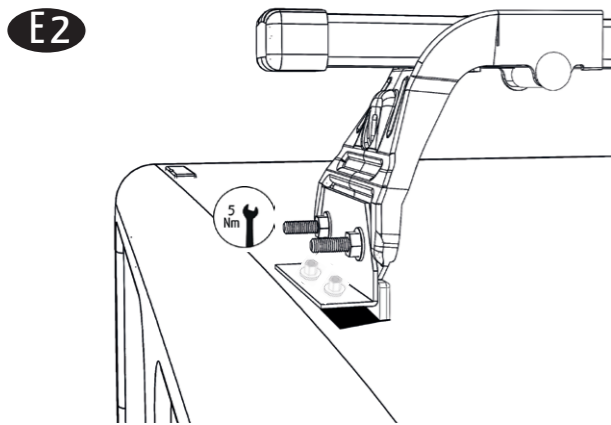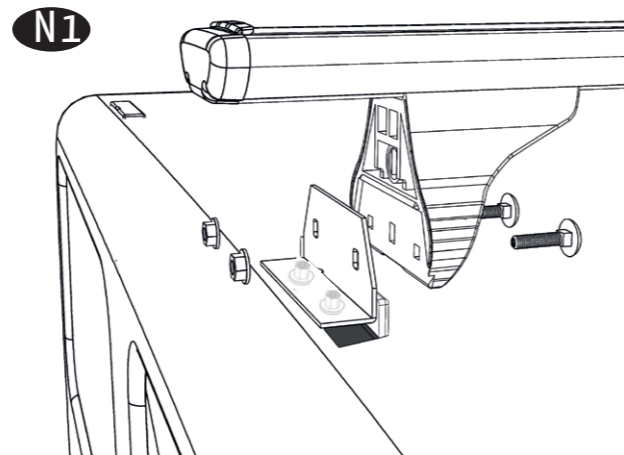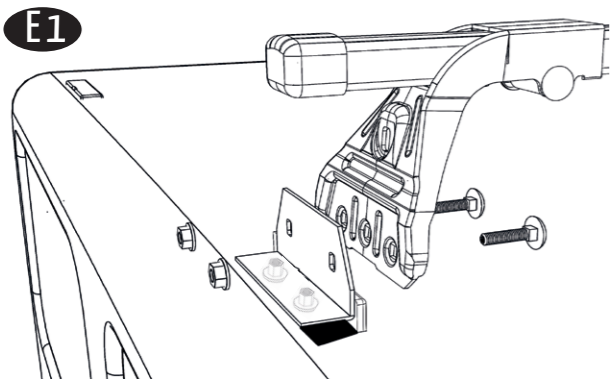

Limpieza pre-instalación



Pre-installation cleaning

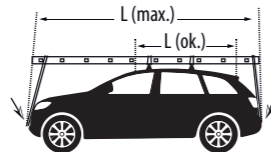


Revisar par de apriete



Check torque

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikte montaj Montaj kiti

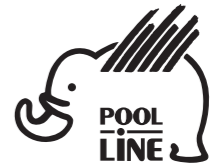

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085




RECYCLABLE

110435


Review 7/2018




				P1	P2	P3	P4
HONDA							
CR-V III	07 - 12	5	B00033 (x2) + B00032 (x2)	S38	S38	S3	S38

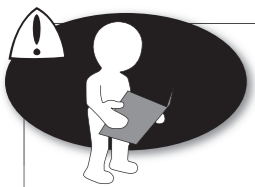


1

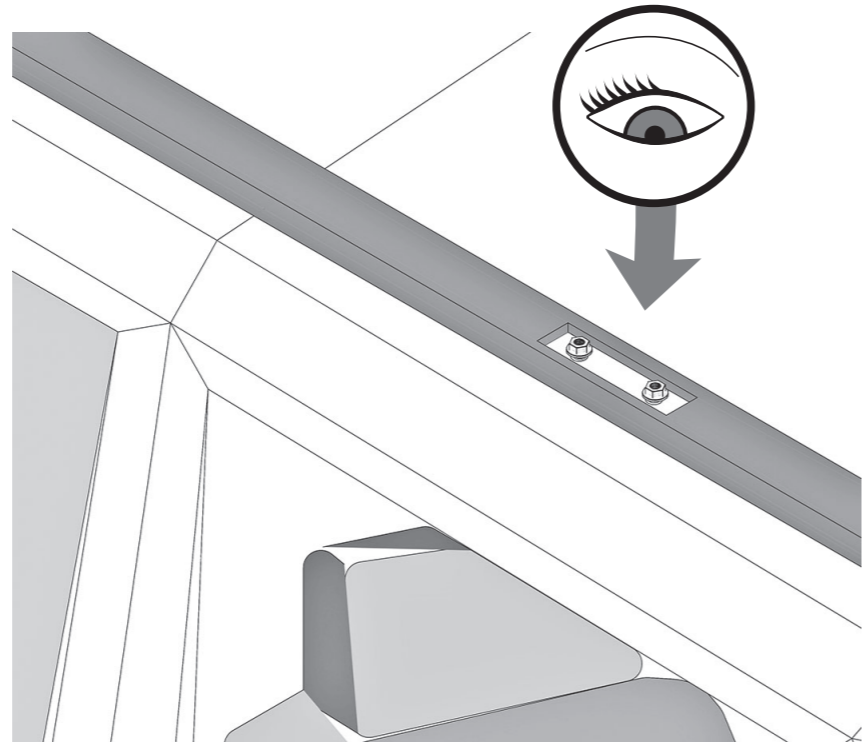


2

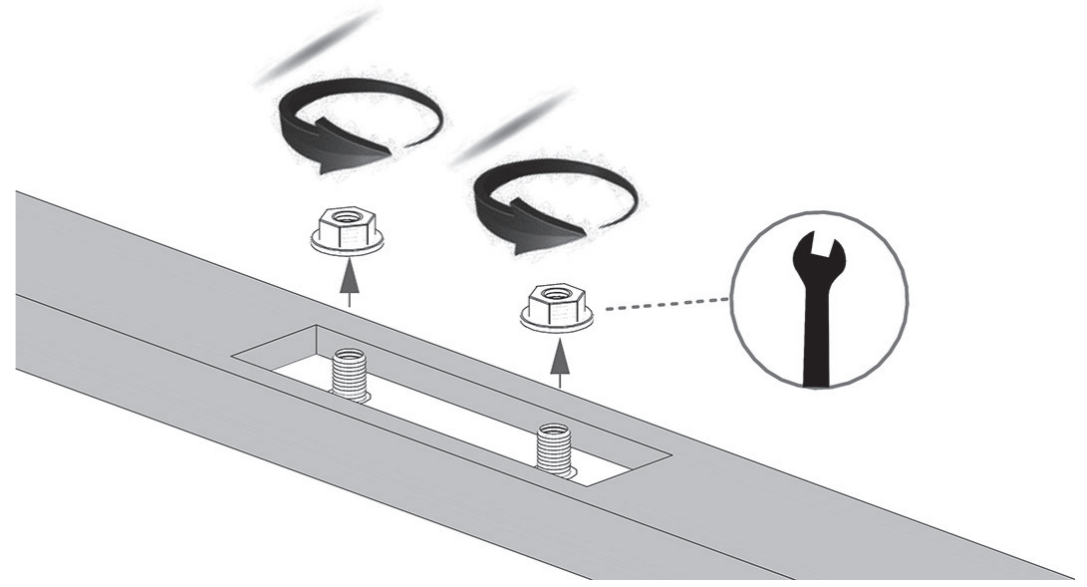

3

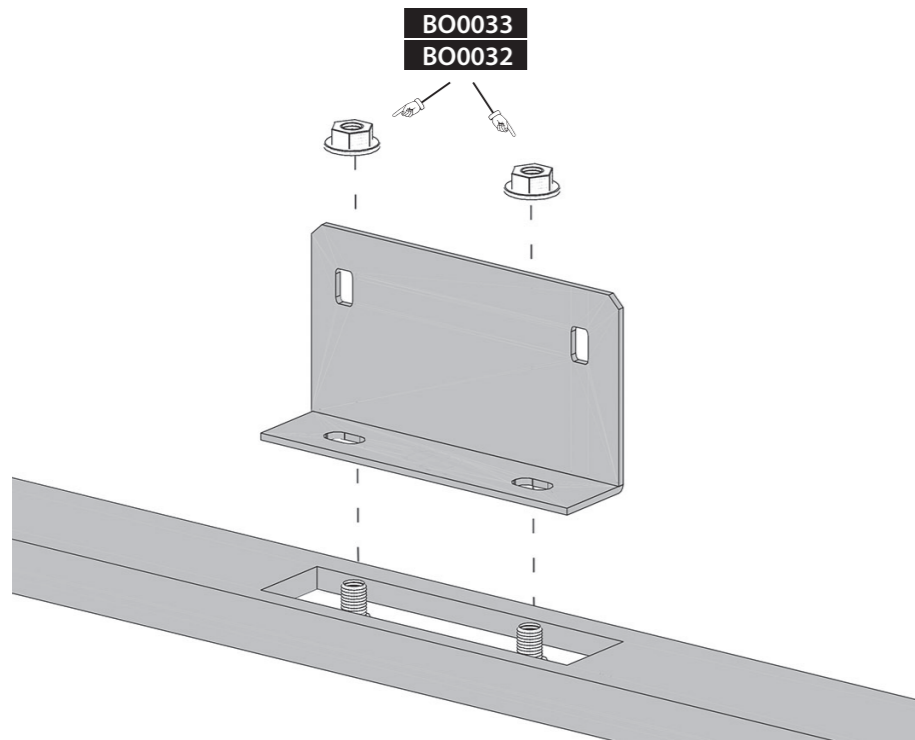

4

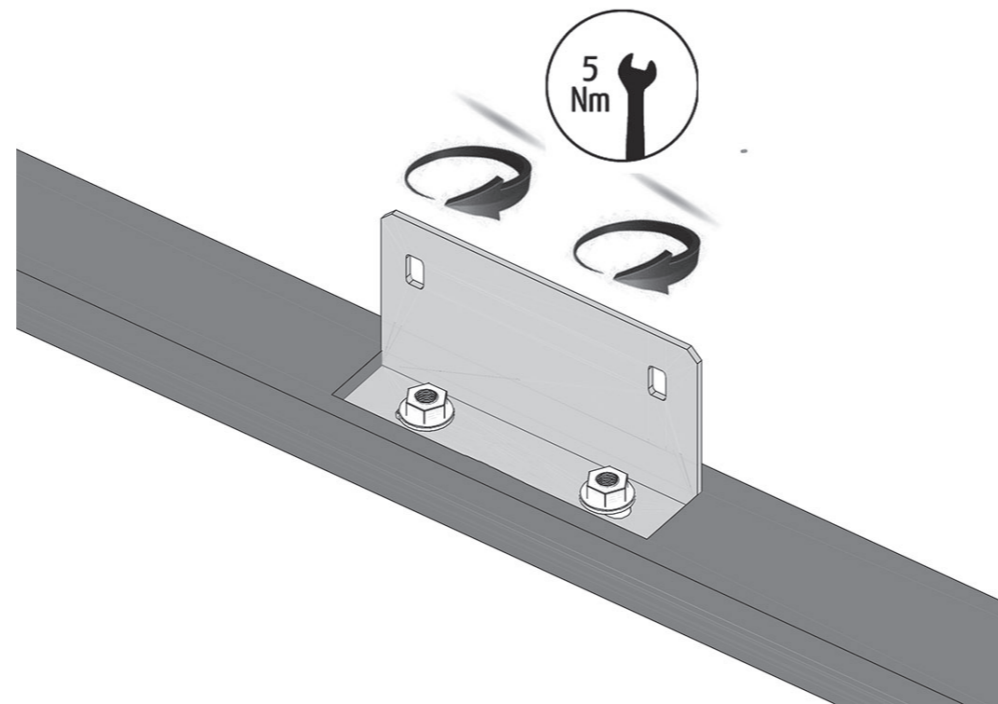

5

