


**EVO**

**BO0052-8**

DIN 603  
M6X14



x8

DIN 6923 M6




x8



**NEO**


**BO0050-8**

DIN 603  
M6X20



x8

DIN 6923 M6




x8



Limpieza pre-instalación



Pre-installation cleaning

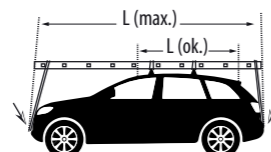


Revisar par de apriete




Check torque

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

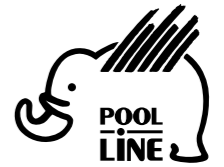



POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

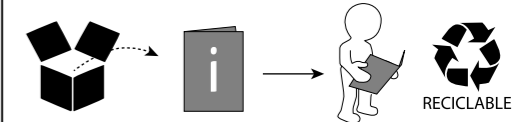

**110441**

Review 01/2017

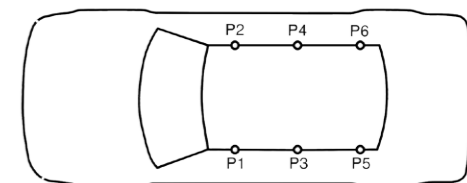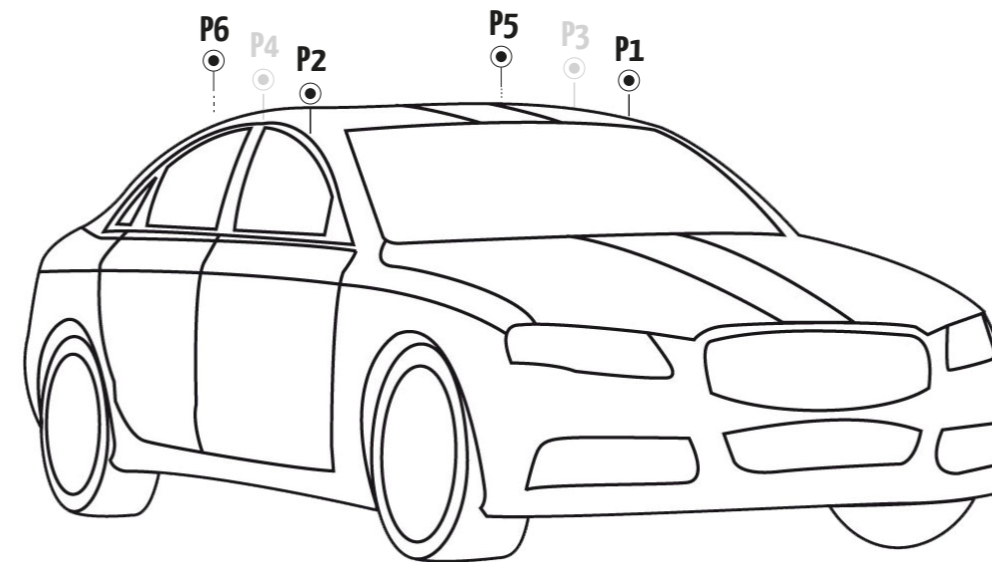

			<b>EVO</b>	<b>NEO</b>	<b>P1</b>	<b>P2</b>	<b>P5</b>	<b>P6</b>
<b>OPEL</b>								
Corsa D	06-14	3/5	B00052-8	B00050-8	S56 + S57	S55 + S54	S55 + S54	S56 + S57
Corsa E	15-	3/5	B00052-8	B00050-8	S56 + S57	S55 + S54	S55 + S54	S56 + S57
Meriva A	03-10	5	B00052-8	B00050-8	S56 + S57	S55 + S54	S55 + S54	S56 + S57
Meriva B	10-	5	B00052-8	B00050-8	S56 + S57	S55 + S54	S55 + S54	S56 + S57
Vectra C	02-08	4/5	B00052-8	B00050-8	S56 + S57	S55 + S54	S55 + S54	S56 + S57

