



EVO

NEO


E1

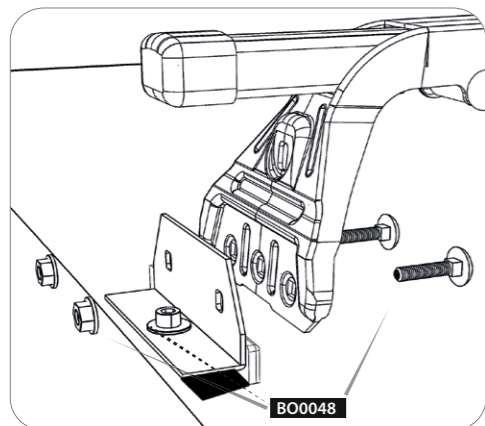


N1

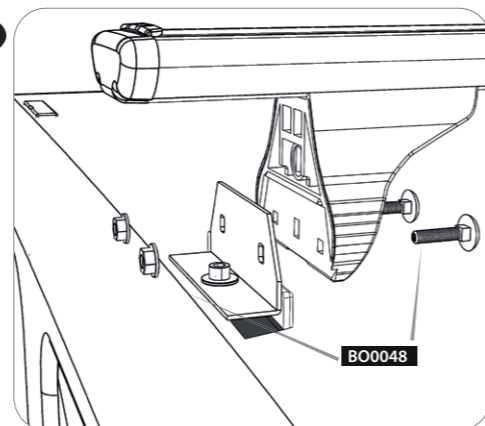


E2

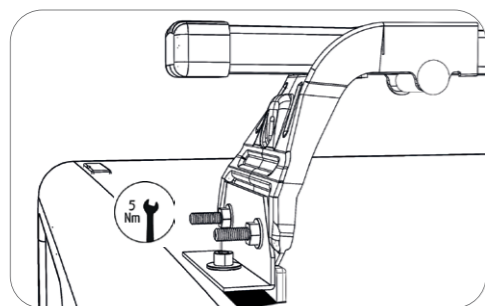

N2

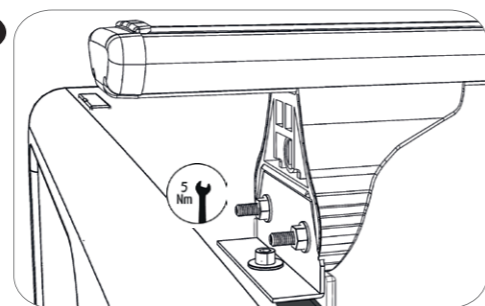


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

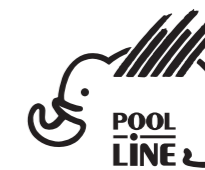


POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

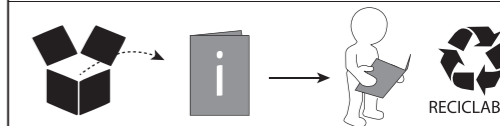


110447

Review 6/2023

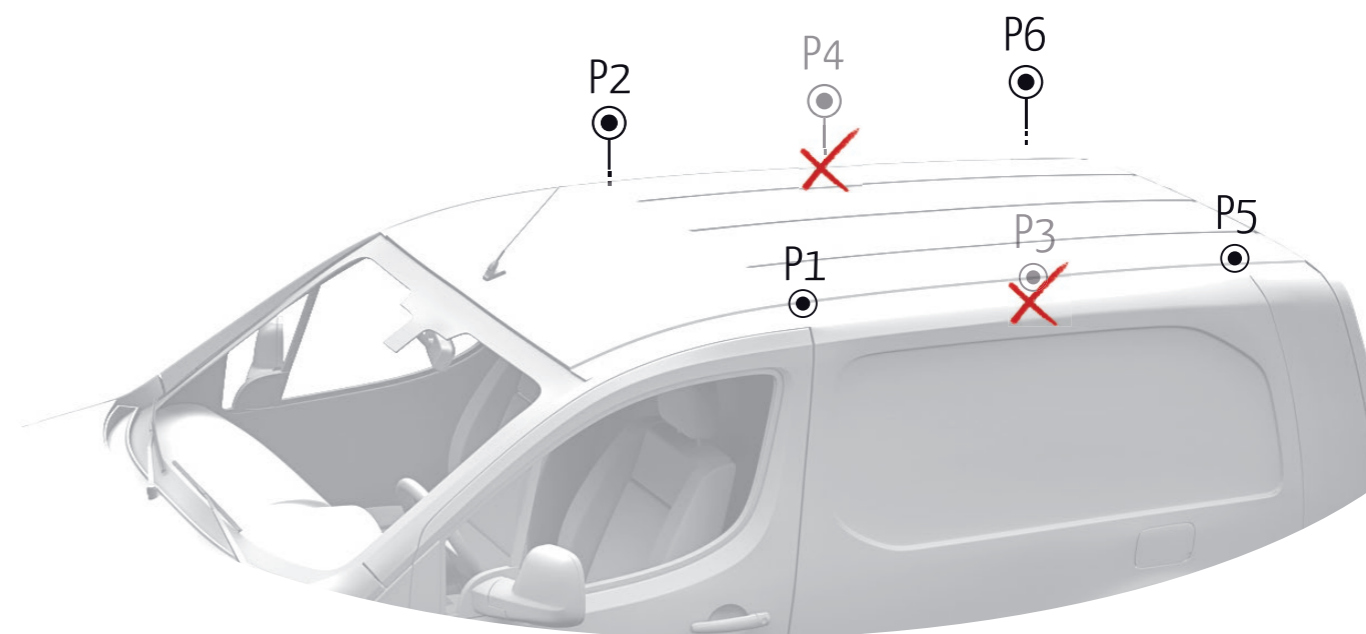

Limpeza pre-instalação
Pre-installation cleaning

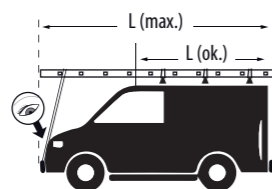

Revisar par de apriete
Check torque

				P1	P2	P5	P6
DACIA							
Dokker	12-	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6
MERCEDES							
Citan W415 L1	12-21	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6
Citan W415 L2	12-21	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6
Citan W420	21-	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6
NISSAN							
Townstar	21-	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6
RENAULT							
Express II	21-	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6
Kangoo II L1	12-21	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6
Kangoo II L2	12-21	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6
Kangoo III	21-	2/5	B00035 + B00032	S41+G6	S42+G6	S42+G6	S41+G6

