


**EVO**

<b>BO0048</b>
DIN 603 M6X25
DIN 934 M6 x8
DIN 9021 x8

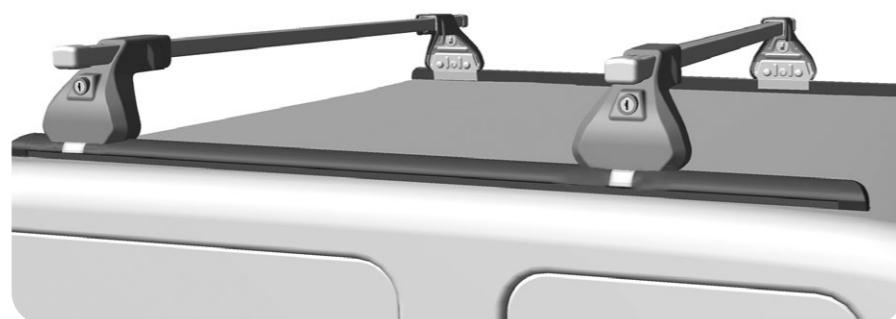


**NEO**

<b>BO0049</b>
DIN 603 M6X30
DIN 934 M6 x8
DIN 9021 x8



Limpieza pre-instalación  
Pre-installation cleaning

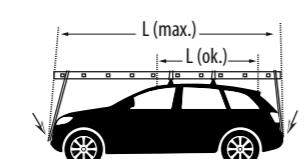


Revisar par de apriete  
Check torque

<b>E</b>	Instrucciones de montaje	Kit de fijación
<b>C</b>	Instruccions de muntatge	Kit de fixació
<b>GB</b>	Assembly instruccions	Fixation Kit
<b>F</b>	Instruction de montage	Kit fixation
<b>D</b>	Montageanleitung	Stützfuß-Kit
<b>PT</b>	Instruções de montagem	Kit fixação
<b>I</b>	Instruzioni di montaggio	Kit di fissaggio
<b>PL</b>	Instrukcja montażu	Element mocujący
<b>CZ</b>	Montážní návod	Fixační kit
<b>HU</b>	Szerelési Utasítás	Rögzítő készlet
<b>RO</b>	Instructiuni de montaj	Kit de fixare
<b>HR</b>	Detaljne upute	Kit za montažu
<b>TU</b>	Öncelikle montaj	Montaj kiti



POOL-LINE ACCESORIOS, S.L.  
C. Esqueís, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net

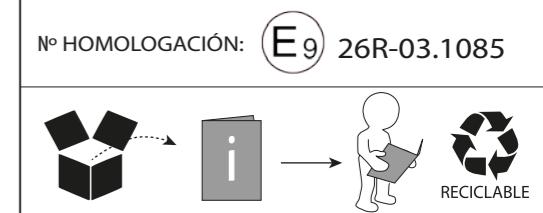

**110801**

Review 8/2018



			EVO	NEO	P1	P2	P3	P4
<b>FIAT</b>								
PANDA (319)	2012 ->	5	BO0048	BO0049	119 + 120	119 + 120	119 + 120	119 + 120
PANDA (319) 4x4	2012 ->	5	BO0048	BO0049	119 + 120	119 + 120	119 + 120	119 + 120
<b>PEUGEOT</b>								
3008 II	2016 ->	5	BO0048	BO0049	119 + 120	119 + 120	119 + 120	119 + 120
5008 II	2017 ->	5	BO0048	BO0049	119 + 120	119 + 120	119 + 120	119 + 120

