

EVO

BO0048

DIN 603
M6X25

DIN 934 M6



x8




x8

DIN 9021



x8

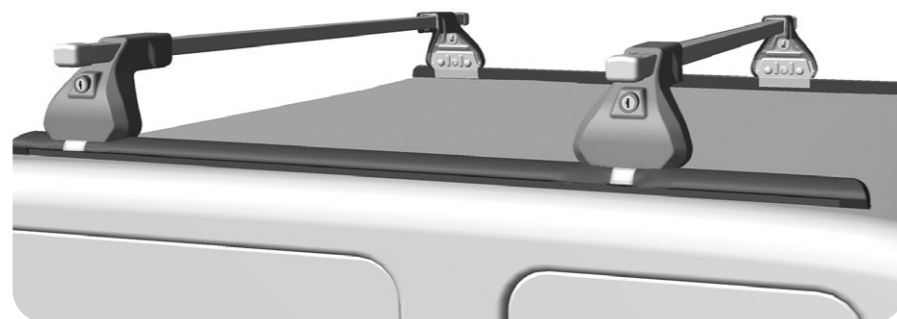

NEO

BO0049

DIN 603
M6X30

DIN 934 M6



x8



x8


DIN 9021



x8




- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

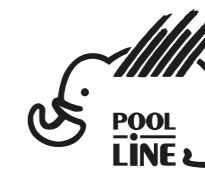

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1085

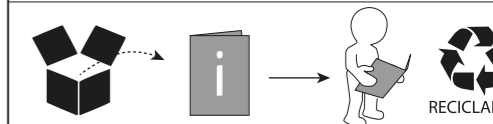

110809


Review 8/2016



Limpieza pre-instalación



Pre-installation cleaning

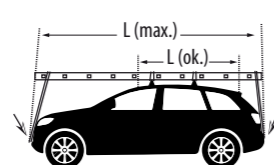

Revisar par de apriete



Check torque

					P1	P2	P3	P4
HYUNDAI								
SANTA FE III (DM)	12 -	5	B00048	B00049	116 + 122	116 + 122	116 + 122	116 + 122

