


- E** Instrucciones de montaje
- C** Instruccions de muntatge
- GB** Assembly instructions
- F** Instruction de montage
- D** Montageanleitung
- PT** Instruções de montagem
- I** Istruzioni di montaggio
- PL** Instrukcja montażu
- CZ** Montážní návod
- HU** Szerelési Utasítás
- RO** Instrucțiuni de montaj
- HR** Detaljne upute
- TU** Öncelikle montaj

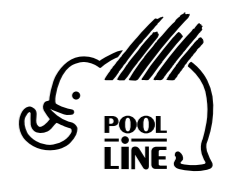

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net


80 KG. MAX. 120cm (x2)

Nº HOMOLOGACIÓN: **E9** 26R04/00*1046*02




RECICLABLE

NEO-FIX-ESPECIFIC 112045

Review 02/2026

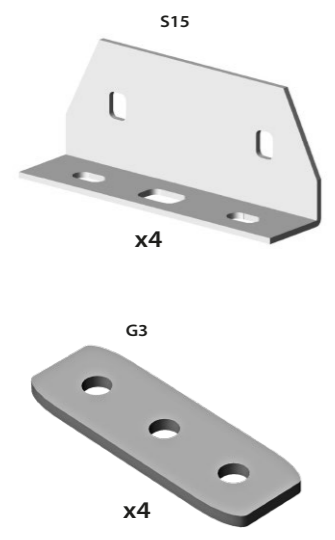

BO0032	BO0035	BO0036	BO0033	BO0018	BO0020
DIN 125 Ø8	ISO 7380 M8x20	ISO 7380 M8x16	DIN 985 M8	DIN 912 M6x16	DIN 9021 Ø6
x4	x4	x4	x4	x4	x4

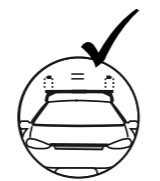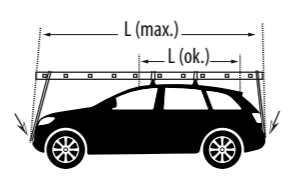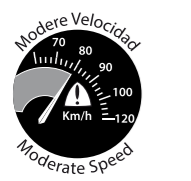

CITROËN		
C15	84 - 05	BO0036 + BO0032 + BO0033
FIAT		
DOBLO I	01 - 09	BO0018 + BO0020
DOBLO II	10 -	BO0018 + BO0020
FORD		
TOURNEO CONNECT	04 - 13	BO0036 + BO0032
TRANSIT CONNECT	04 - 13	BO0036 + BO0032
MERCEDES		
CITAN W415 L3--H1	12 -	BO0035 + BO0032
NISSAN		
NV250 L2-H1	19 - 21	BO0035 + BO0032
OPEL		
COMBO B (1 tornillo) L1--H1	93 - 02	BO0018 + BO0020 + B.TCHA.23
COMBO D CARGO	12-	BO0018 + BO0020
RENAULT		
EXPRESS L1--H1	91 - 00	BO0035 + BO0032 + BO0033
KANGOO II L3--H1	10 -	BO0036 + BO0032
VOLKSWAGEN		
CADDY III	04 - 11	BO0036 + BO0032
CADDY III.2	11 - 15	BO0035 + BO0032
CADDY IV	15 - 20	BO0035 + BO0032
CADDY V	20 -	BO0035 + BO0032


Nota: Guardar instrucciones para posibles montajes y desmontajes.



1




2

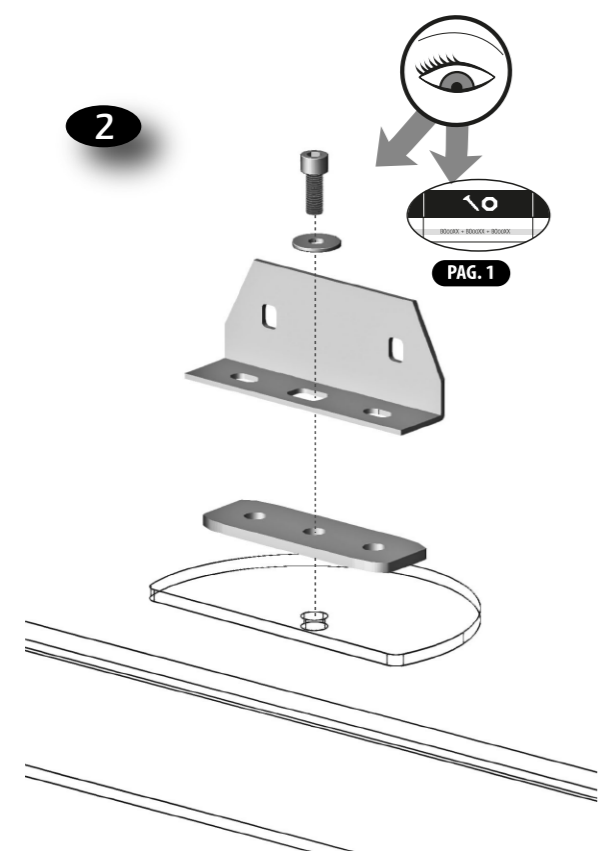


2a


* Opel Combo B

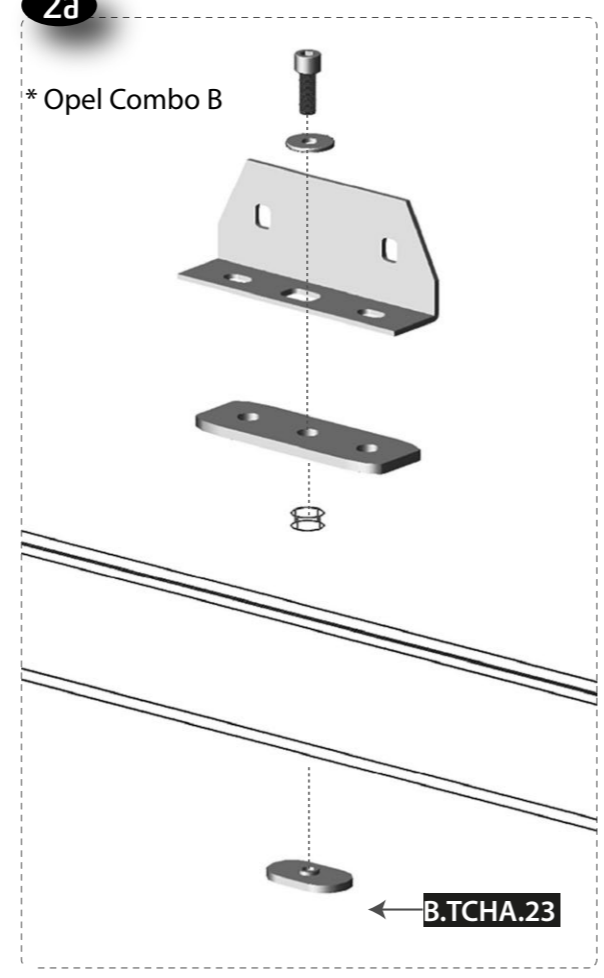


3

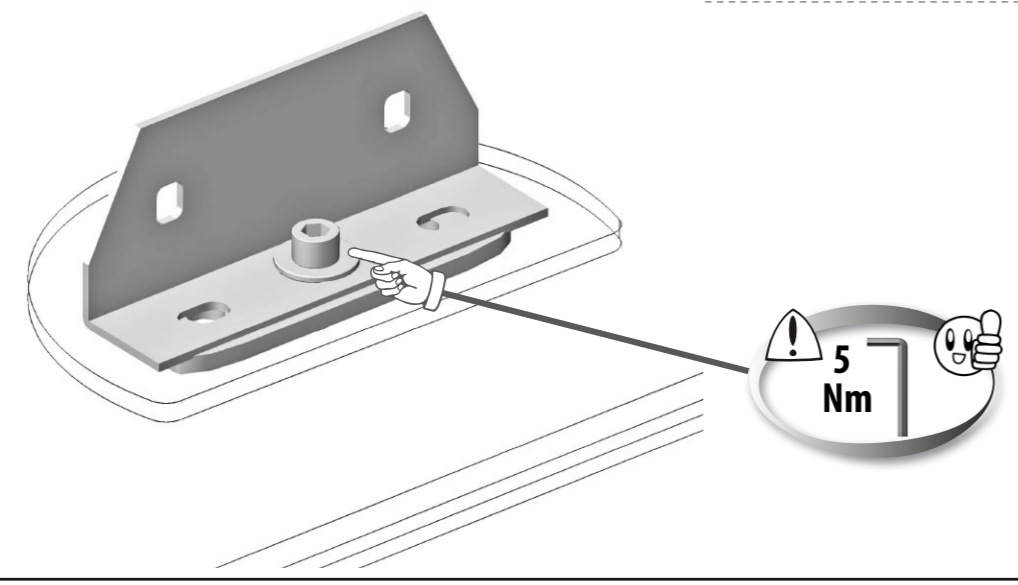


4

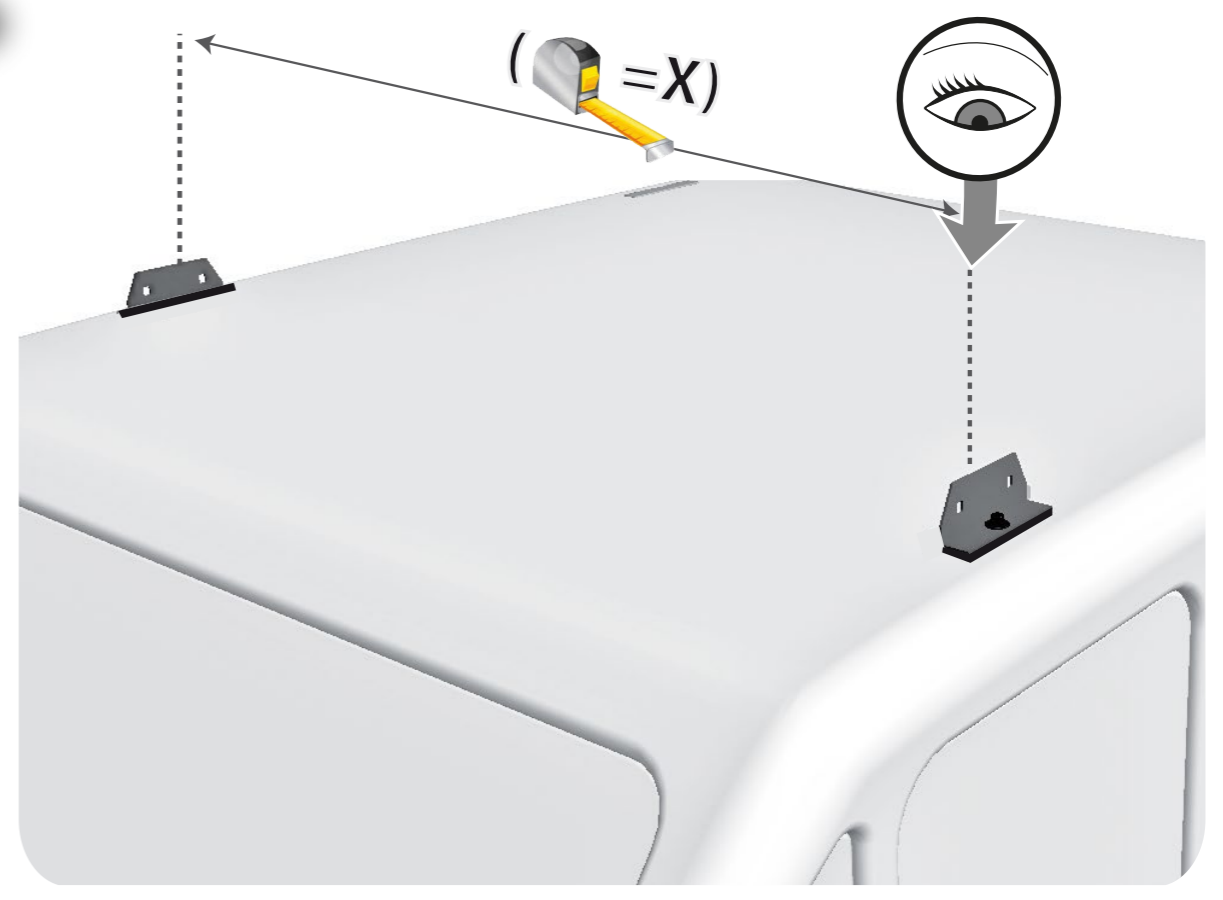

5

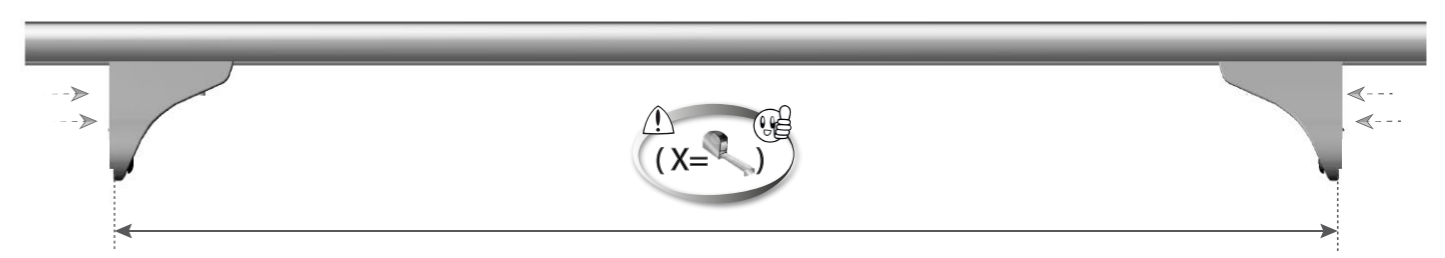


6

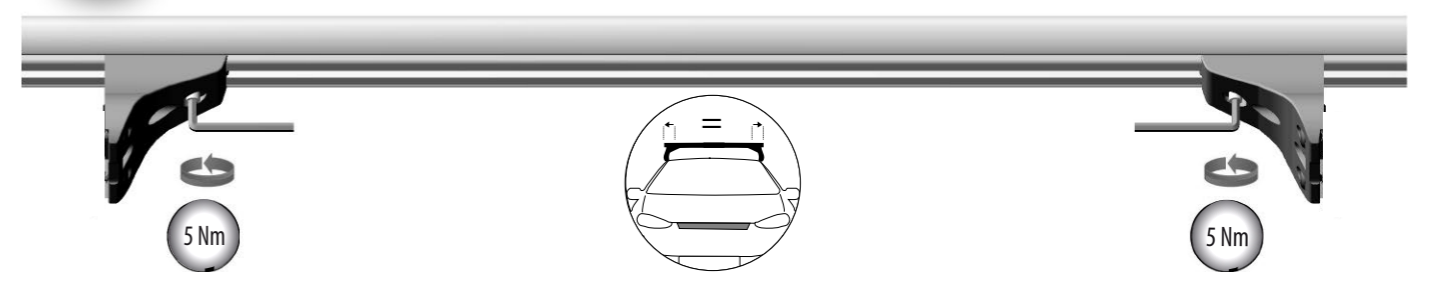





7

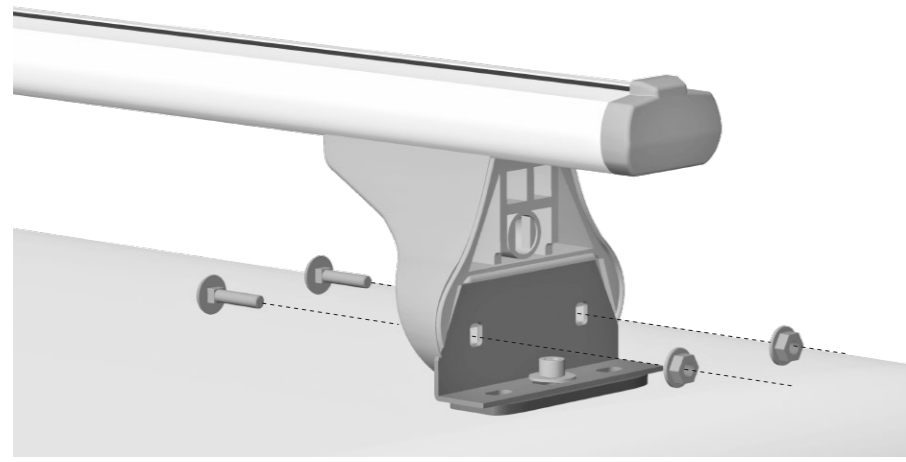


8

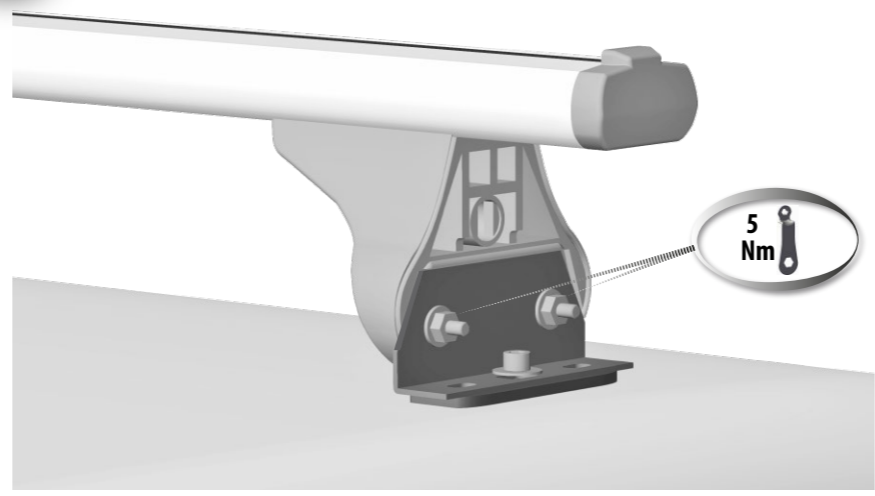


9

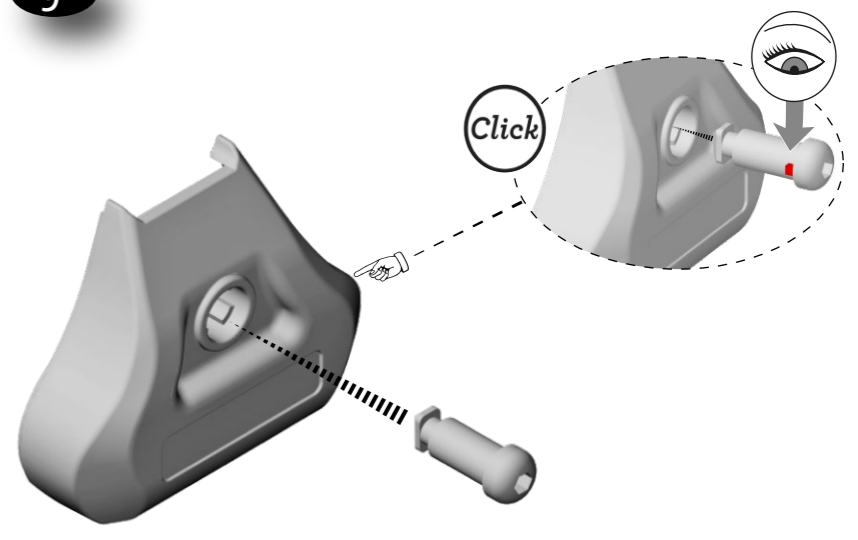

10

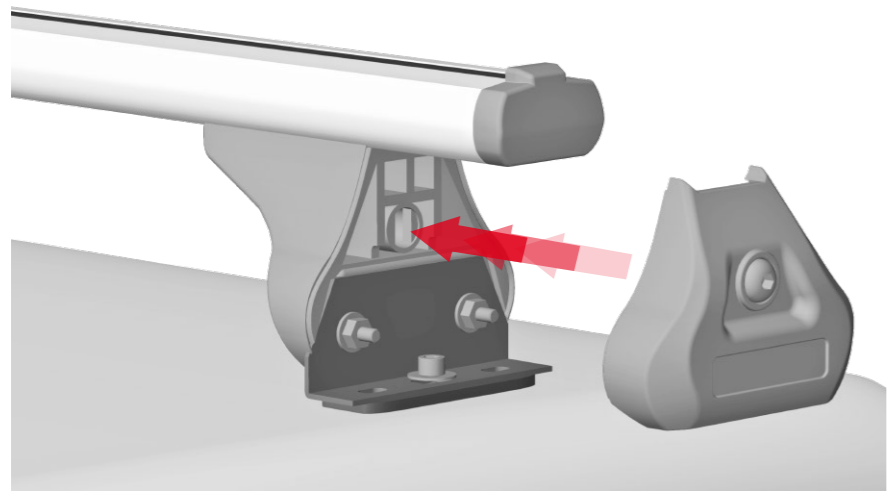

11

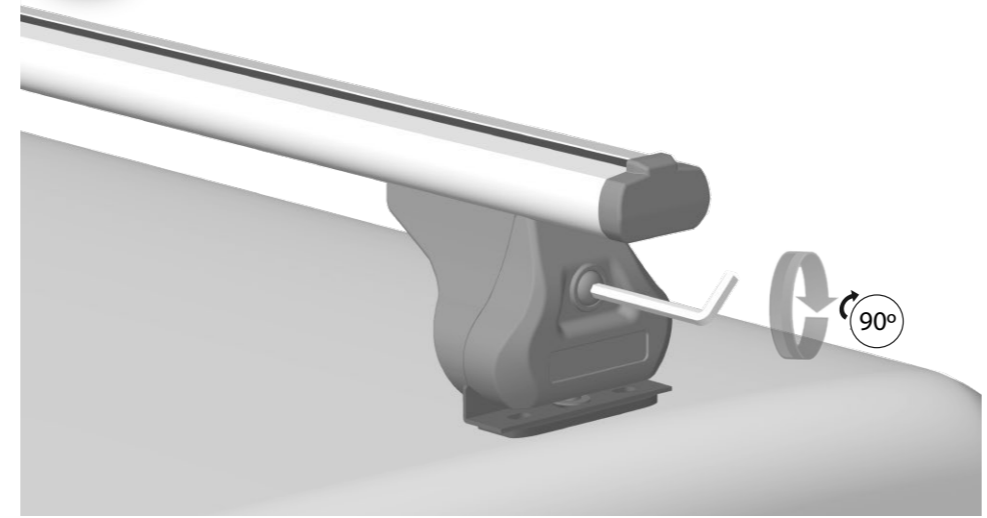

12

