



- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

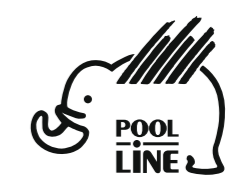

POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

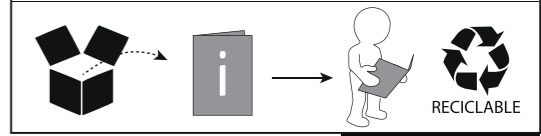

121012

Rv: 12/2019



- CITROËN JUMPY III L1 H1 (2016->)
- OPEL VIVARO C L1 H1 (2019->)
- PEUGEOT EXPERT III L1 H1 (2016->)
- TOYOTA PROACE II L1 H1 (2016->)

N		Q
1	1A (53)	2
2	224	2
3	1B (65)	2
4	220	2
5	1C (75)	2
6	226 225	1+1
7		6
8		6
9		1
BO00061		
11	DIN912 M6x20	24
12	DIN125 Ø6	24
BO0005 x3		
13	DIN912 M6x20	6
14	DIN9021 Ø6	6

A

C1

B

C2

PAG. 3

*** L1**
**** H1**

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
CITROËN												
Jumpy III (xs)	L1	H1	2016->	B00005	224+1A	224+1A	✗	✗	220+1B	220+1B	226+1C	225+1C
OPEL												
Vivaro C (xs)	L1	H1	2019->	B00005	224+1A	224+1A	✗	✗	220+1B	220+1B	226+1C	225+1C
PEUGEOT												
Expert III (xs)	L1	H1	2016->	B00005	224+1A	224+1A	✗	✗	220+1B	220+1B	226+1C	225+1C
TOYOTA												
Proace II (xs)	L1	H1	2016->	B00005	224+1A	224+1A	✗	✗	220+1B	220+1B	226+1C	225+1C