



- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujacy
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikli montaj Montaj kiti

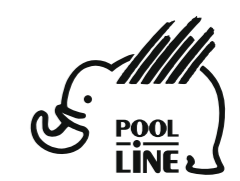

POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

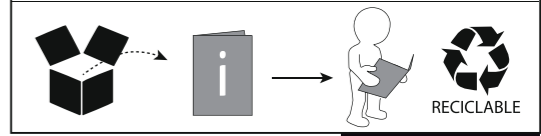

121013

Rv: 12/2019



- **CITROËN JUMPY III** L3 H1 (2016->)
- **OPEL VIVARO C** L3 H1 (2019->)
- **PEUGEOT EXPERT III** L3 H1 (2016->)
- **TOYOTA PROACE II** L3 H1 (2016->)

N		Q
1	1A (53)	4
2	224	4
3	1B (65)	4
4	220	4
5		8
6		8
7		1
	BO0060 (x2)	
11	DIN912 M6x20	32
12	DIN125 Ø6	32
	BO0005 (x4)	
13	DIN912 M6x20	8
14	DIN9021 Ø6	8

A

B

C1

C2

PAG. 3

	L*	H**	↻	↶	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
CITROËN														
Jumpy III (XL)	L3	H1	2016->	B00005	224+1A	224+1A	✗	✗	224+1A	224+1A	220+1B	220+1B	220+1B	220+1B
OPEL														
Vivaro C (XL)	L3	H1	2019->	B00005	224+1A	224+1A	✗	✗	224+1A	224+1A	220+1B	220+1B	220+1B	220+1B
PEUGEOT														
Expert III (XL)	L3	H1	2016->	B00005	224+1A	224+1A	✗	✗	224+1A	224+1A	220+1B	220+1B	220+1B	220+1B
TOYOTA														
Proace II (XL)	L3	H1	2016->	B00005	224+1A	224+1A	✗	✗	224+1A	224+1A	220+1B	220+1B	220+1B	220+1B