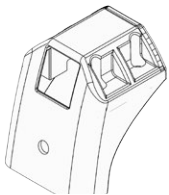
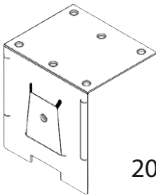




N		Q
1	 80R	10
2	 201	10
3	 G	10
4	 10	10
5	 20	20
6	 1	1


N	BO0054 + BO0055	Q
7	 DIN6923 M6	40
8	 DIN912 M6x20	40
9	 DIN125 Ø6	40

N	BO0004 x5	Q
10	 DIN912 M6x25	10
11	 DIN9021 Ø6	10

N		Q
12	 VENT6.5	2
13	 1	1

N		Q
14	 10	10

E	Instrucciones de montaje	Kit de fijación
C	Instruccions de muntatge	Kit de fixació
GB	Assembly instrucctions	Fixation Kit
F	Instruction de montage	Kit fixation
D	Montageanleitung	Stützfuß-Kit
PT	Instruções de montagem	Kit fixação
I	Istruzioni di montaggio	Kit di fissaggio
PL	Instrukcja montażu	Element mocujący
CZ	Montážní návod	Fixační kit
HU	Szerelési Utasítás	Rögzítő készlet
RO	Instructiuni de montaj	Kit de fixare
HR	Detaljne upute	Kit za montažu
TU	Öncelikle montaj	Montaj kiti

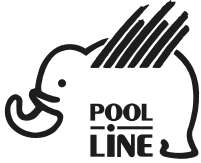

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN:

E9

26R-03.1043






RECICLABLE

121142


Rv: 11/2017



Limpieza pre-instalación




Pre-installation cleaning

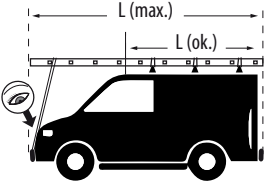

Revisar par de apriete



Check torque

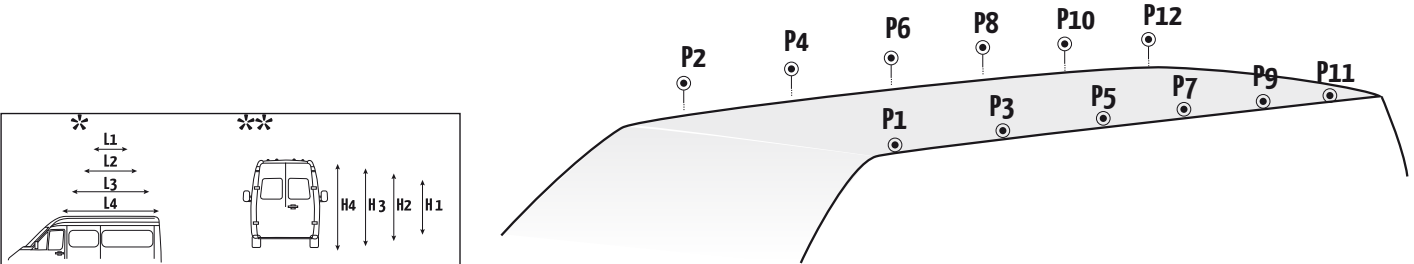

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
CITROËN																
Jumper II / III	L4	H2	06-	BO0004	201+G	201+G	VENT6.5	VENT6.5	201+G	201+G	201+G	201+G	201+G	201+G	201+G	201+G
Jumper II / III	L4	H3	06-	BO0004	201+G	201+G	VENT6.5	VENT6.5	201+G	201+G	201+G	201+G	201+G	201+G	201+G	201+G
FIAT																
Ducato III	L4	H2	06-	BO0004	201+G	201+G	VENT6.5	VENT6.5	201+G	201+G	201+G	201+G	201+G	201+G	201+G	201+G
Ducato III	L4	H3	06-	BO0004	201+G	201+G	VENT6.5	VENT6.5	201+G	201+G	201+G	201+G	201+G	201+G	201+G	201+G
PEUGEOT																
Boxer II / III	L4	H2	06-	BO0004	201+G	201+G	VENT6.5	VENT6.5	201+G	201+G	201+G	201+G	201+G	201+G	201+G	201+G
Boxer II / III	L4	H3	06-	BO0004	201+G	201+G	VENT6.5	VENT6.5	201+G	201+G	201+G	201+G	201+G	201+G	201+G	201+G

