


N	Q
1	4
2	4
3	8
4	4
5	1

N	BO0060	Q
8	DIN912 M6x20	16
9	DIN125	16
N	BO0017	Q
10	DIN912 M6x20	4
N	BO0018	Q
11	DIN912 M6x16	4
N	BO0019	Q
12	DIN125 Ø6	4

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

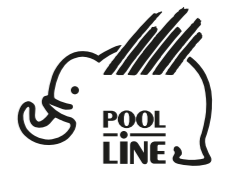



POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1043

RECYCLABLE

**121561**


Rv: 1/2019

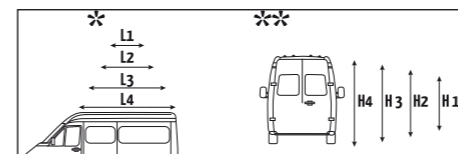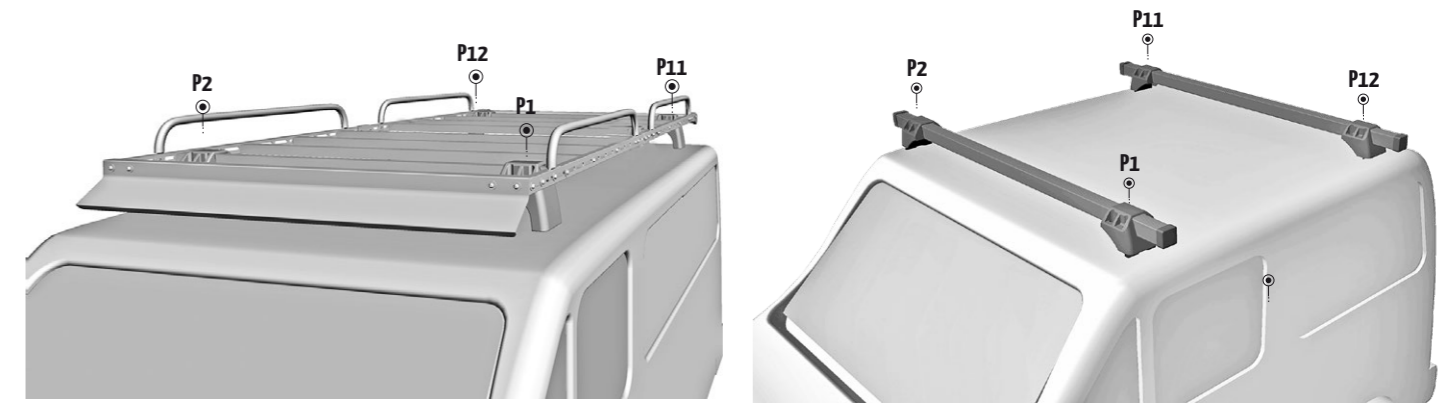


	L*	H**	⌚	⌚	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
<b>OPEL</b>																
COMBO B	L1	H1	93 - 02	B00017 + B00019	204	204									204	204
<b>SEAT</b>																
INCA I	L1	H1	95 - 97	B00018 + B00019	204	204									204	204
<b>VOLKSWAGEN!</b>																
CADDY II	L1	H1	95 - 97	B00018 + B00019	204	204									204	204



Limpeza pre-instalação  
Pre-installation cleaning

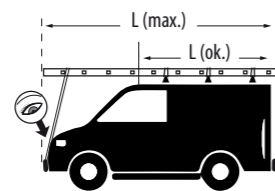


Revisar par de apriete  
Check torque


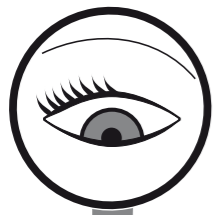


		P1	P1
0X	B0000XX		
0X-	B0000XX		
<b>Pag. 1</b>	R0000X		

**A**

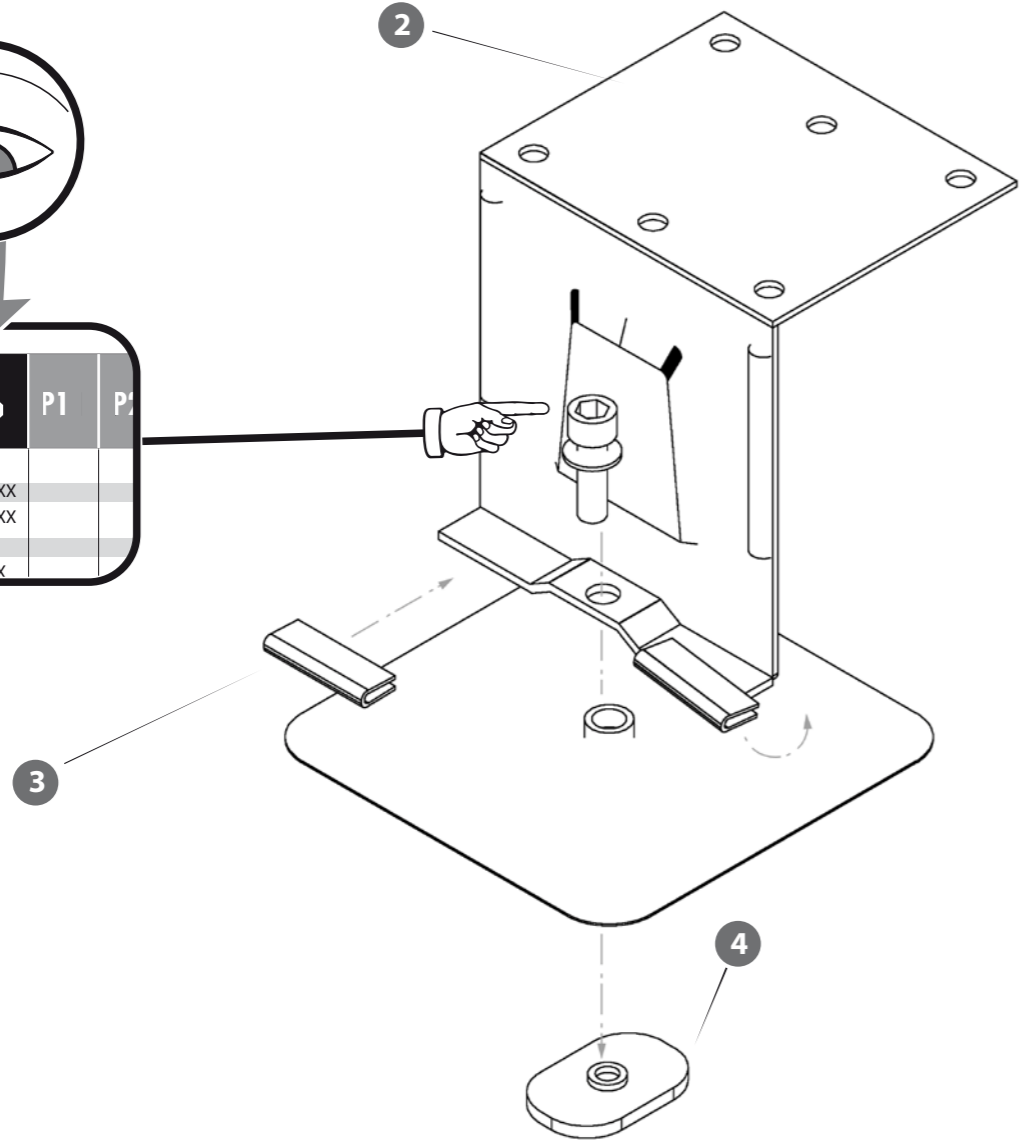

**B**

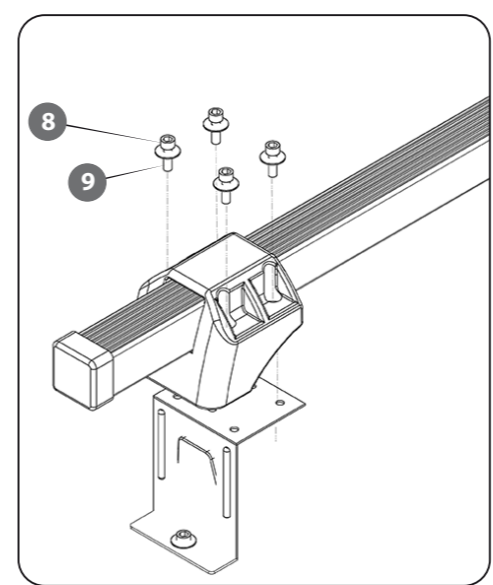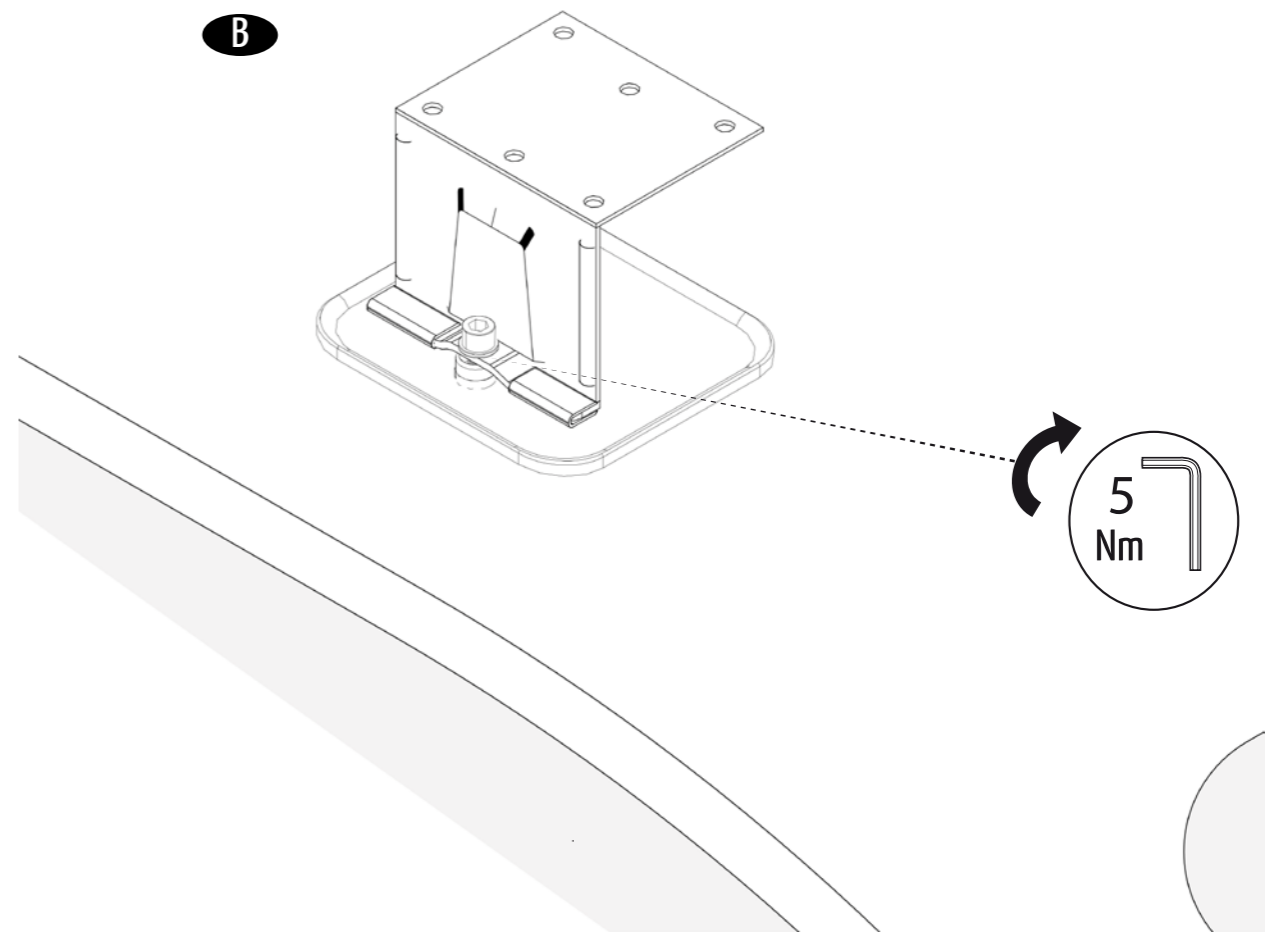

5 Nm

