
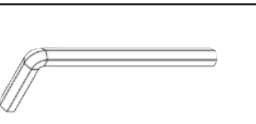
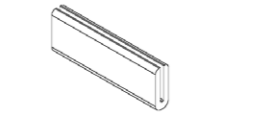
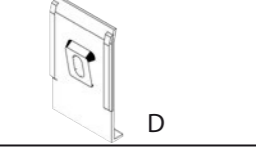
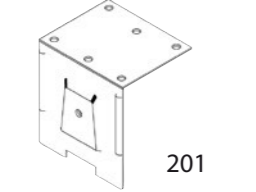


N	Q
1	4
2	4
3	4
4	4
5	8
6	1

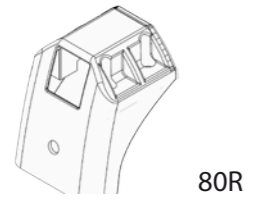



N	BO0054	Q
8	DIN912 M6x20	16
9	DIN125	16

N	BO0043	Q
10	DIN912 M6x25	4


N	BO0020	Q
11	DIN9021 Ø6	4

N	Q
12	2
13	1

N	Q
14	4

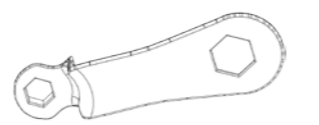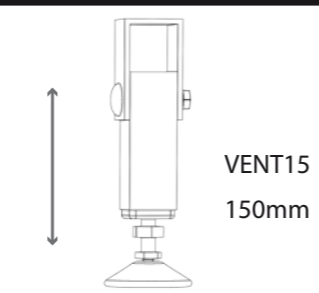

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti


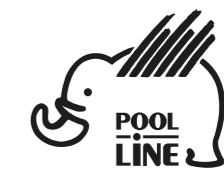


POOL-LINE ACCESORIOS, S.L.  
C. Esqueis, 19. P. I. Can Barri  
08415- Bigues i Riells. Barcelona (España)  
www.pool-line.net


Nº HOMOLOGACIÓN: **E9** 26R-03.1042

RECYCLABLE



**121721**  
Rv: 01/2018

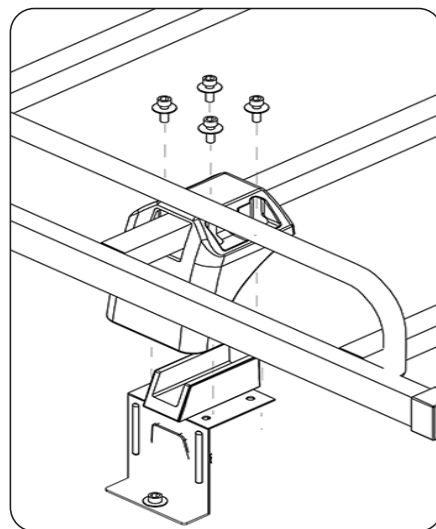

Limpeza pre-instalação  
Pre-installation cleaning

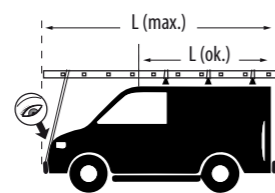

Revisar par de apriete  
Check torque

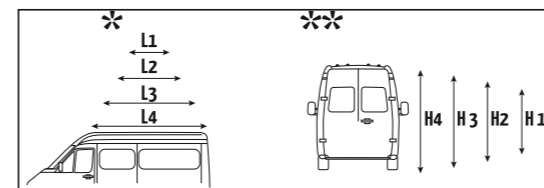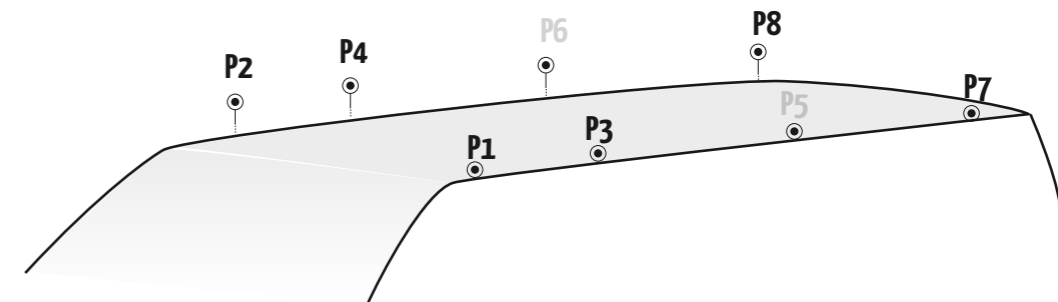

	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8
<b>CITROËN BERLINGO I</b>	L1	H1	96 - 08	B000043 + B00020	VENT15	VENT15	201+D	201+D			201+D	201+D
<b>PEUGEOT PARTNER I</b>	L1	H1	96 - 08	B000043 + B00020	VENT15	VENT15	201+D	201+D			201+D	201+D

