


	L*	H**	
NISSAN			
Kubistar	L1	H1	97-09
RENAULT			
Kangoo I	L1	H1	97-08

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

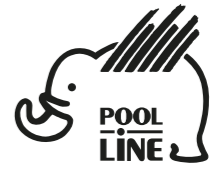

POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net

200


KG.

MAX.


Nº HOMOLOGACIÓN: **E9** 26R-03.1042

123011



Rv: 09/2015

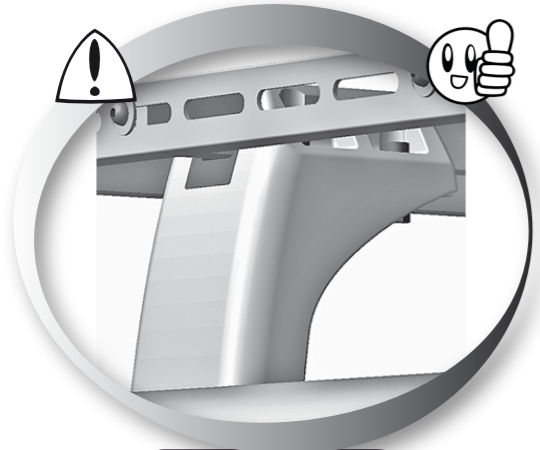

KIT CARGO-TECK

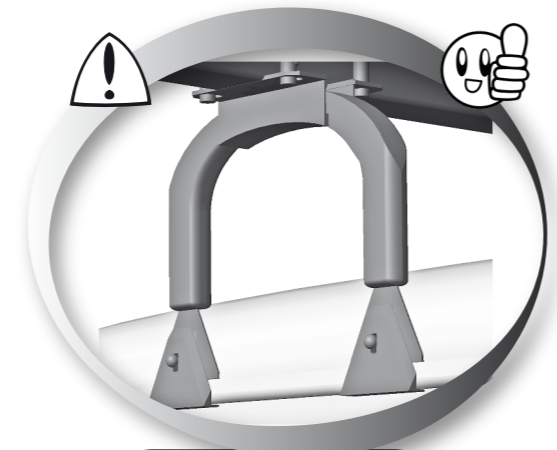

KIT CARGO-TECK FEET

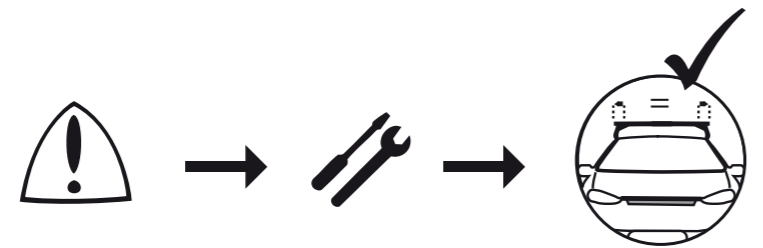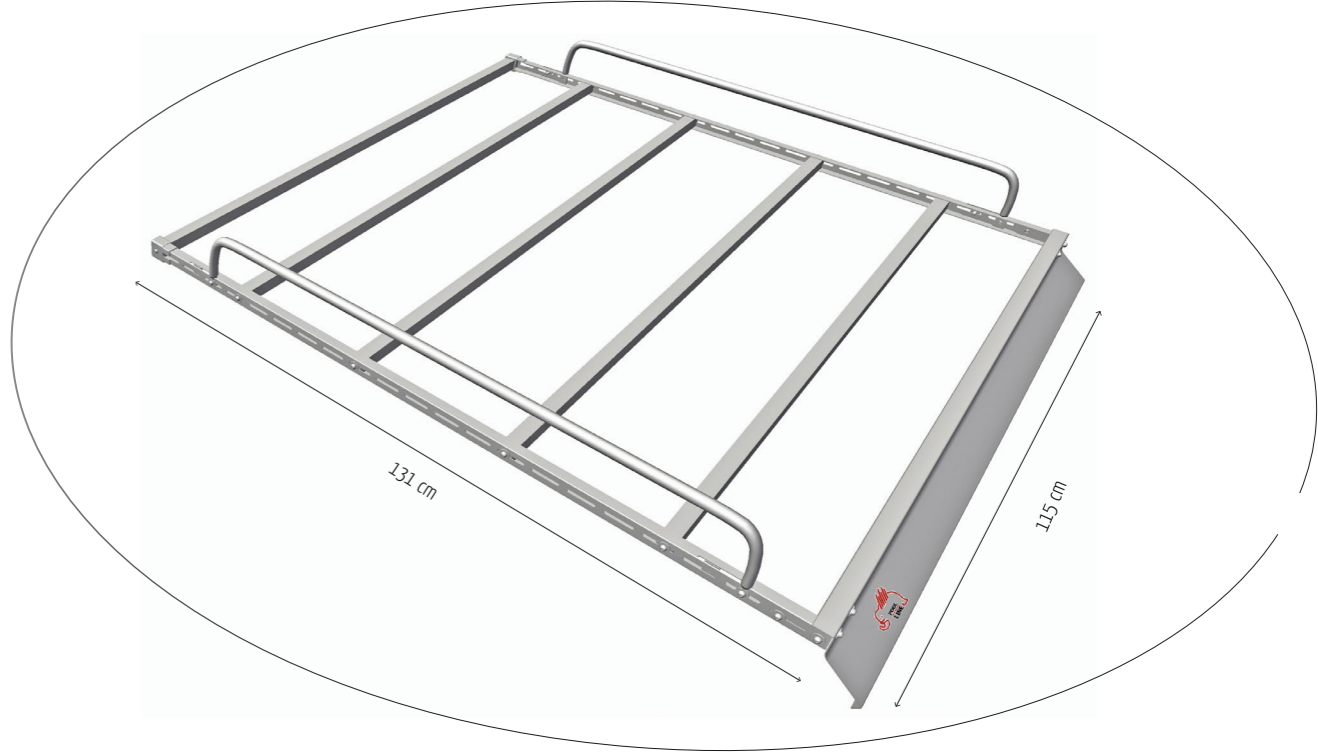








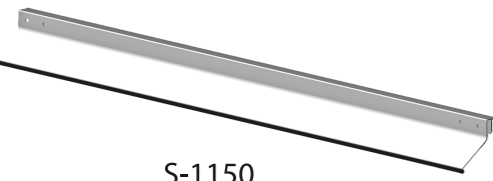


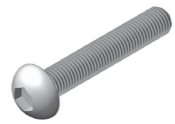


1


year







Warranty



N		Q
1	 S-1150	1
2		2
3	 L-1300	2
4	 B-1022	2
5	 T-1135	5
6		10
7		2
8		4
9		1


N		Q
10	 CHA-M8	4
11	 ISO 7380 M8x40	10
12	 ISO 7380 M8x16	12
13	 DIN 125 Ø 8	22

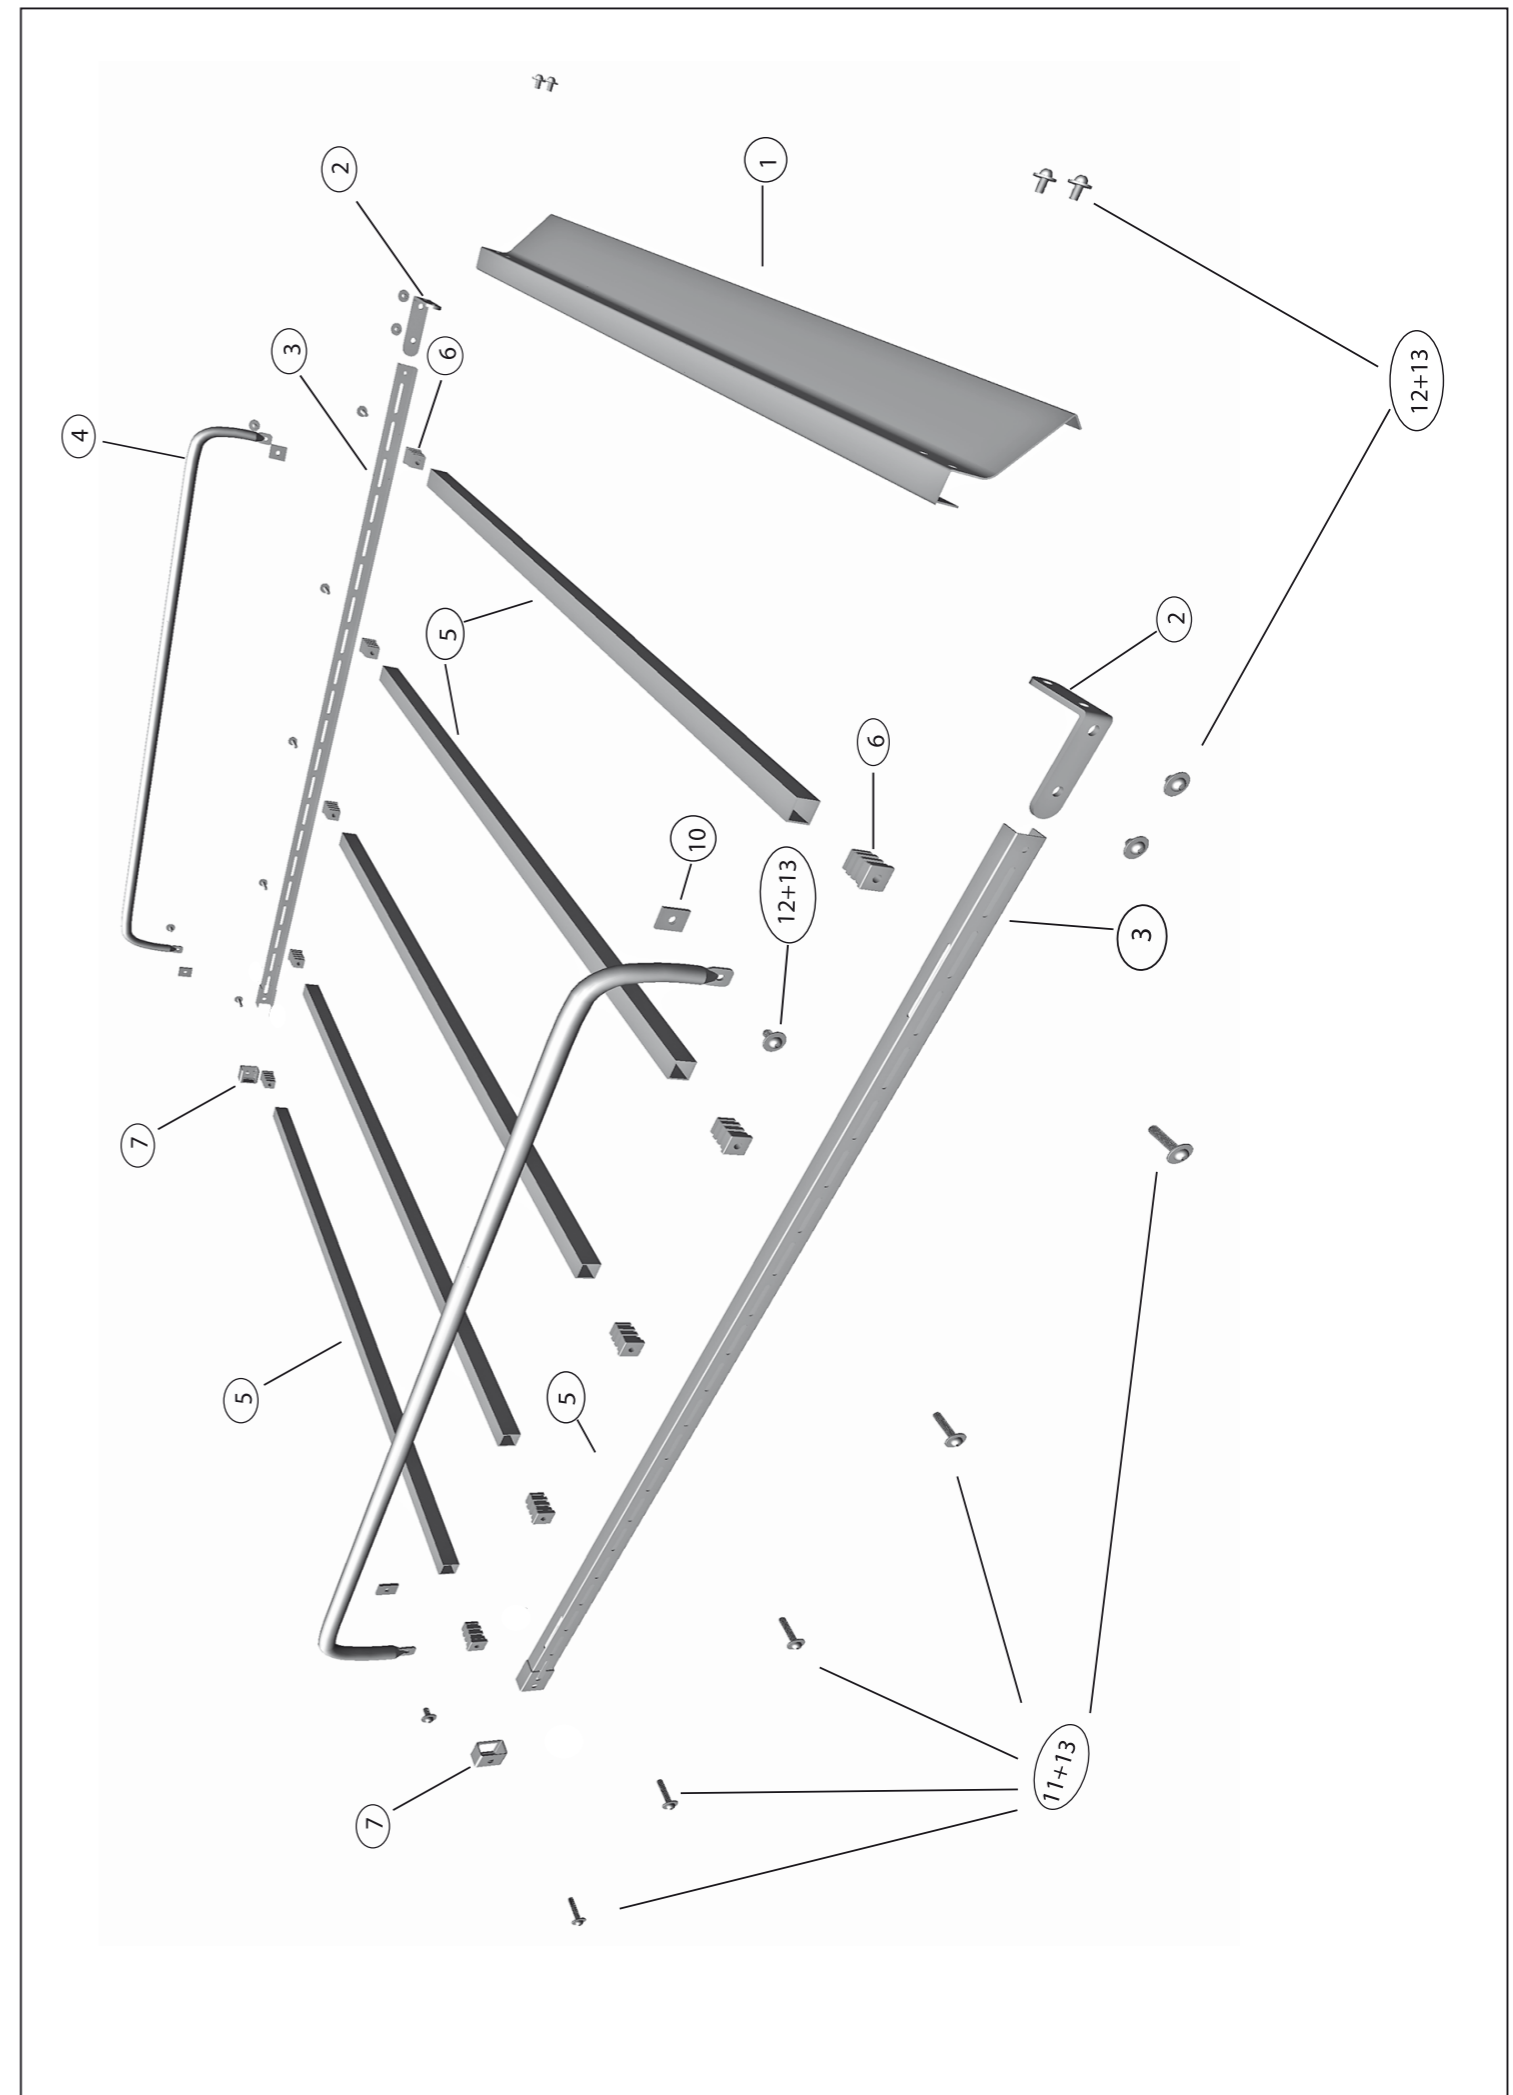

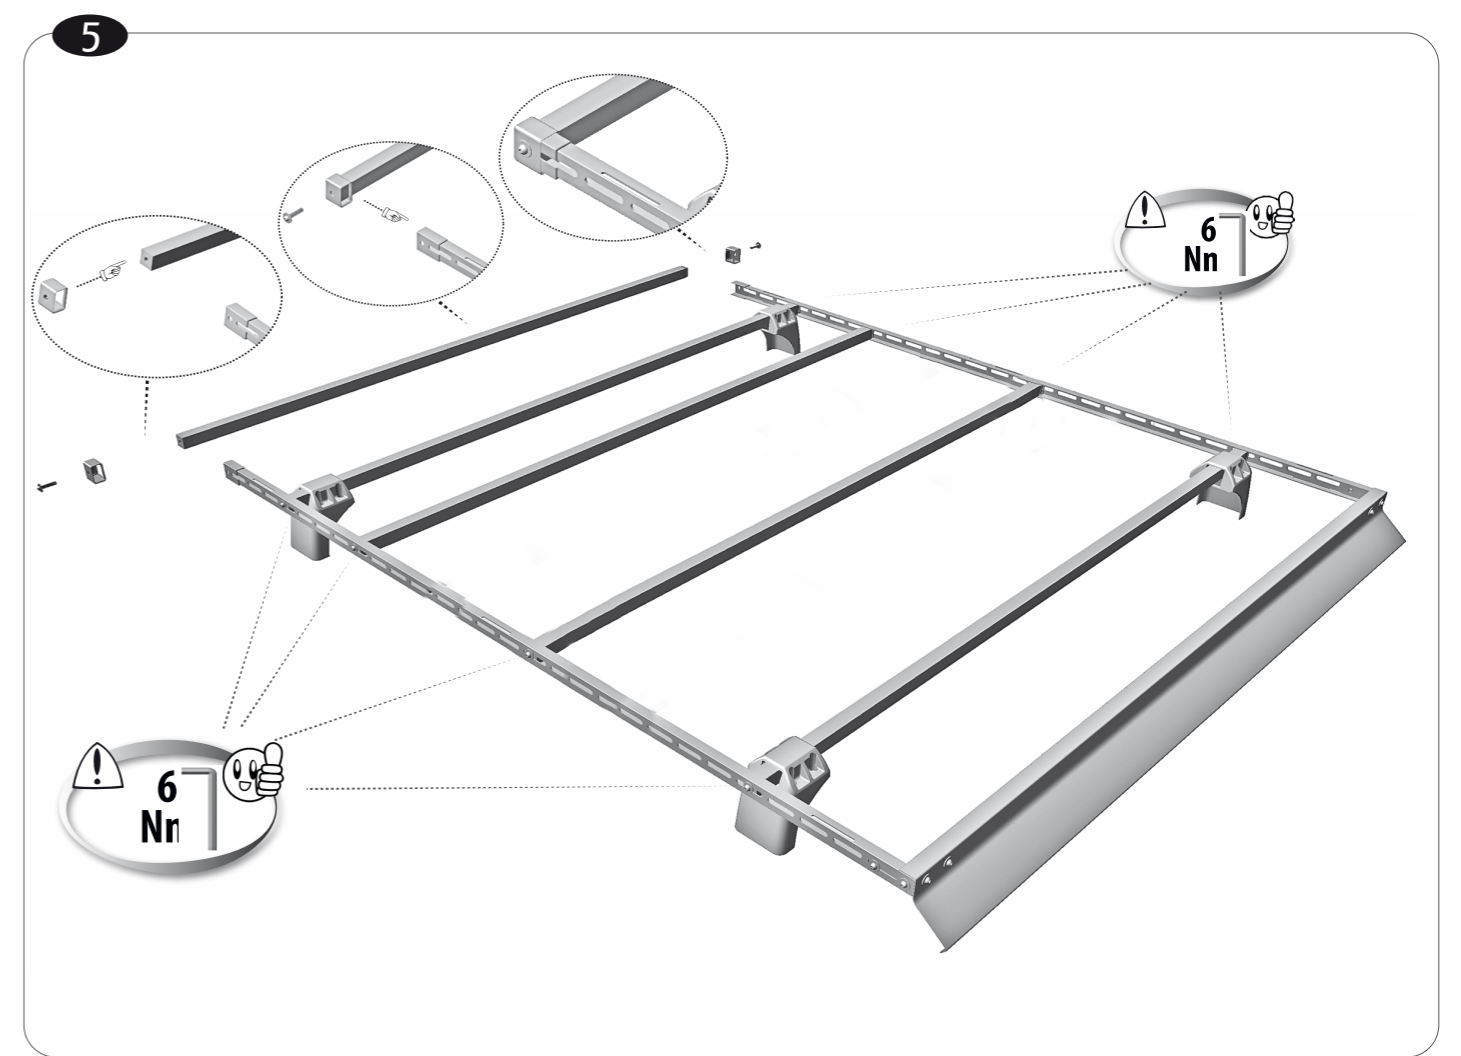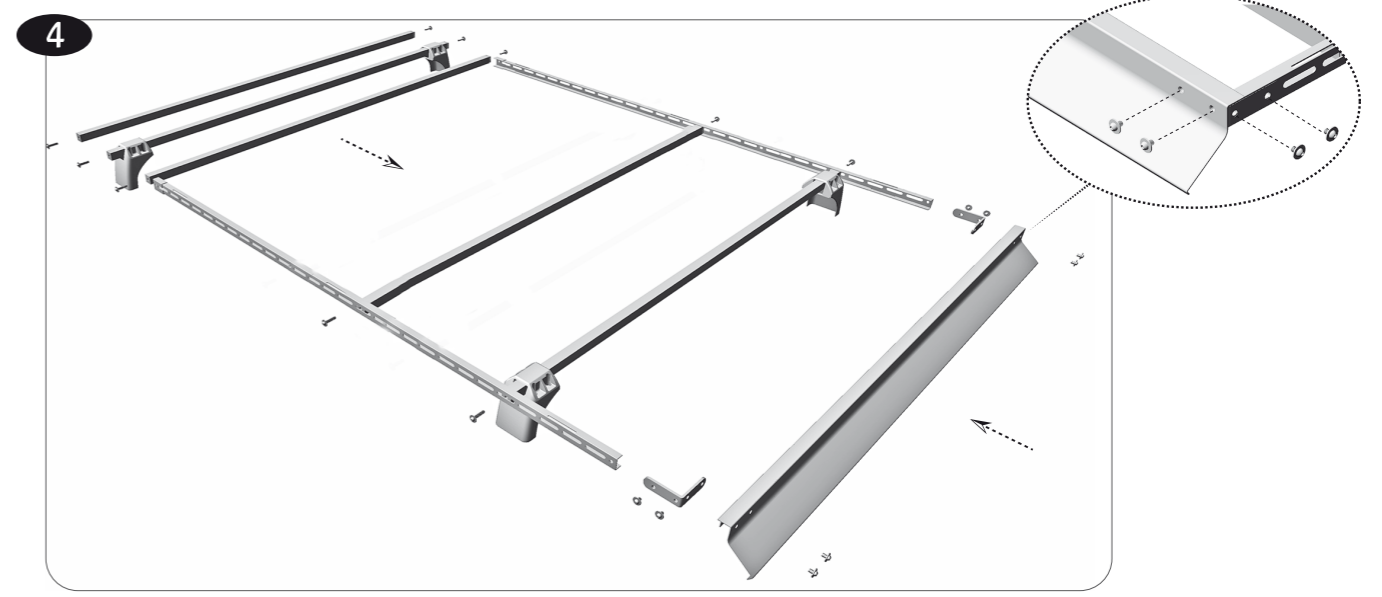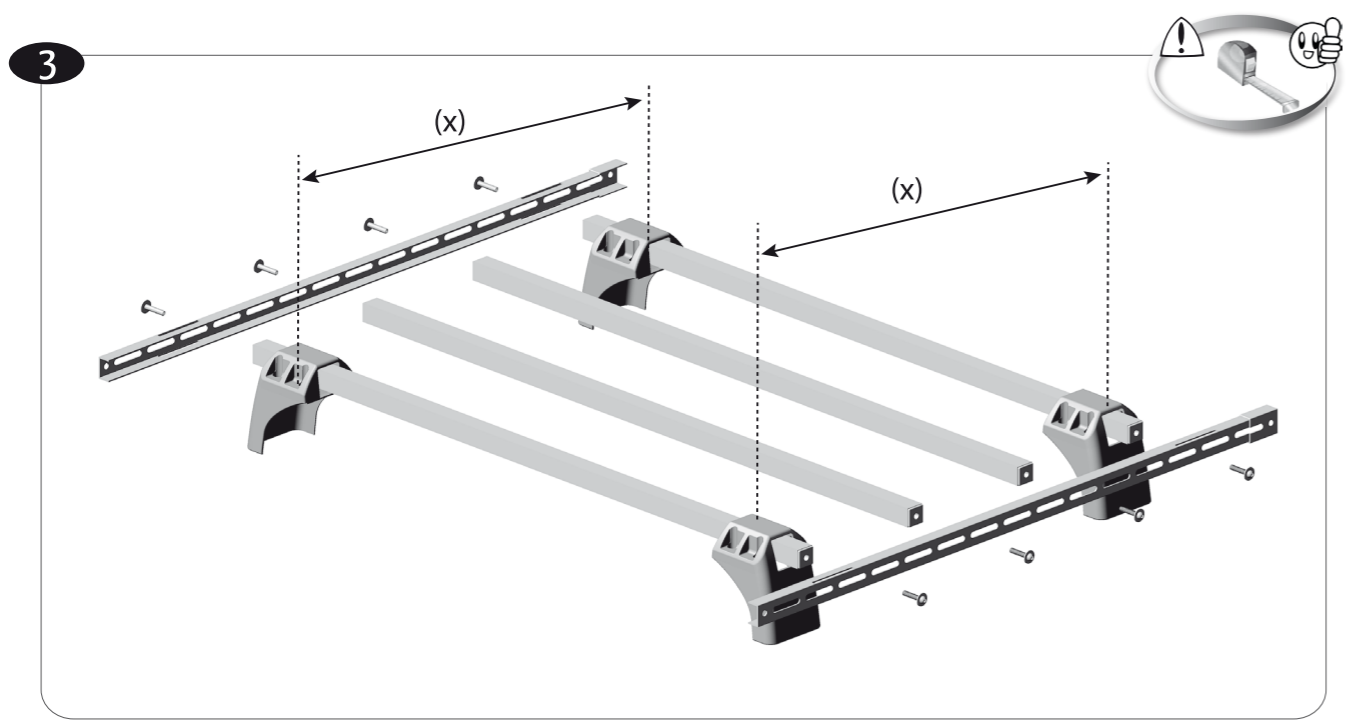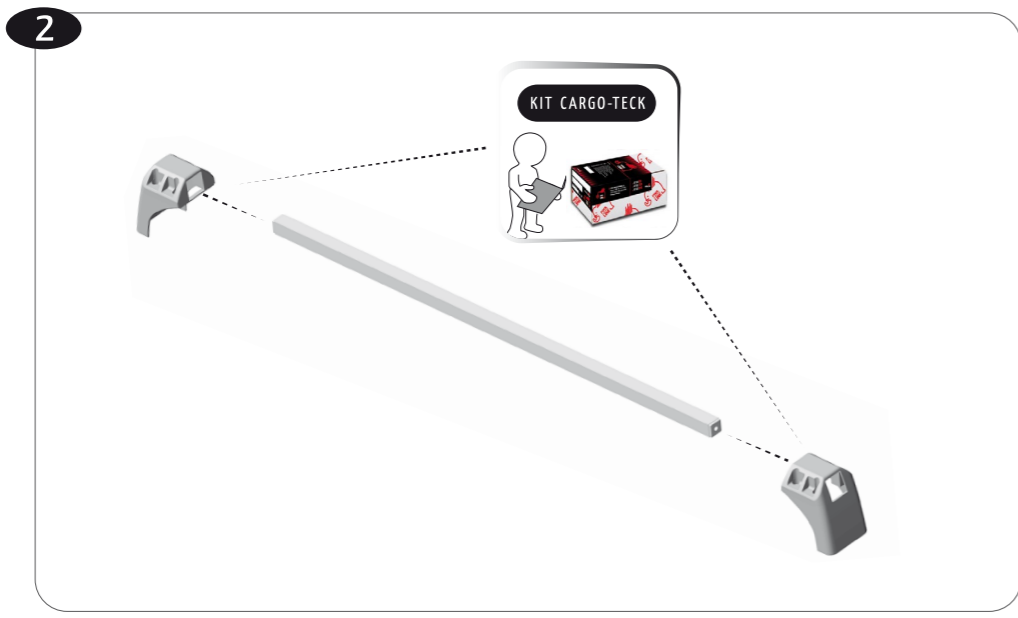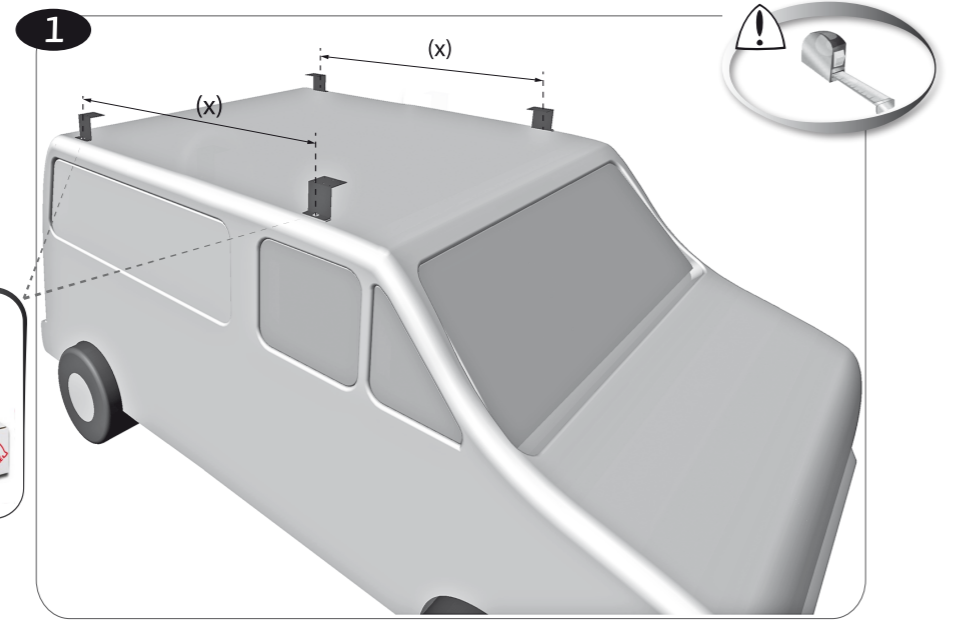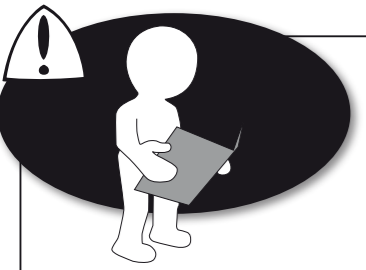





6

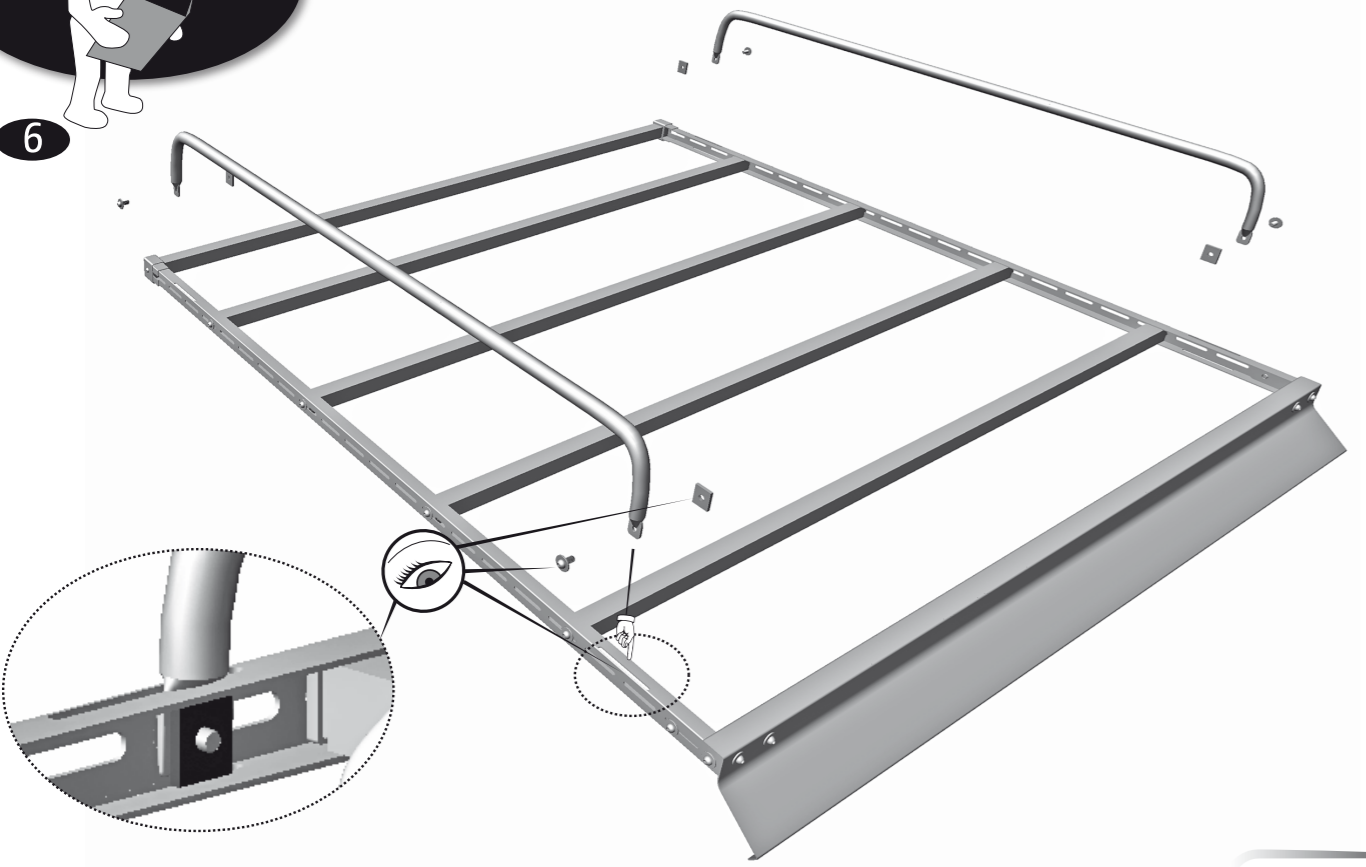


7

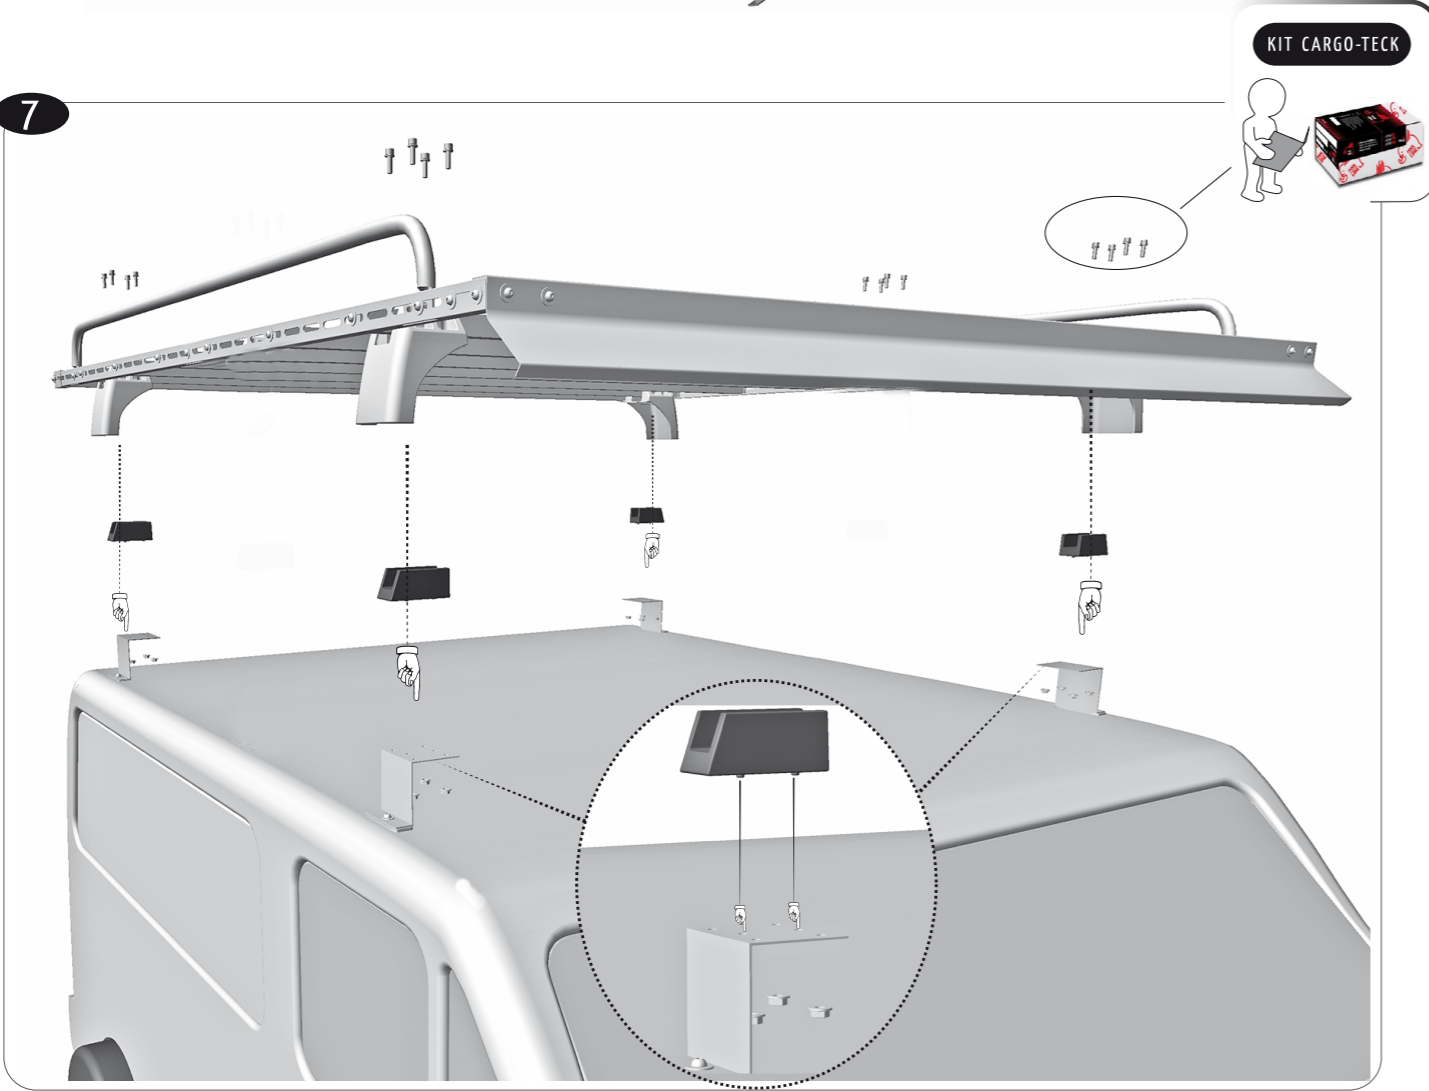

5 Nn

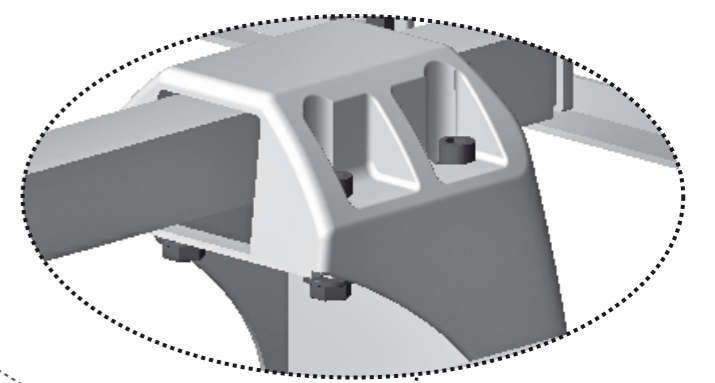

8

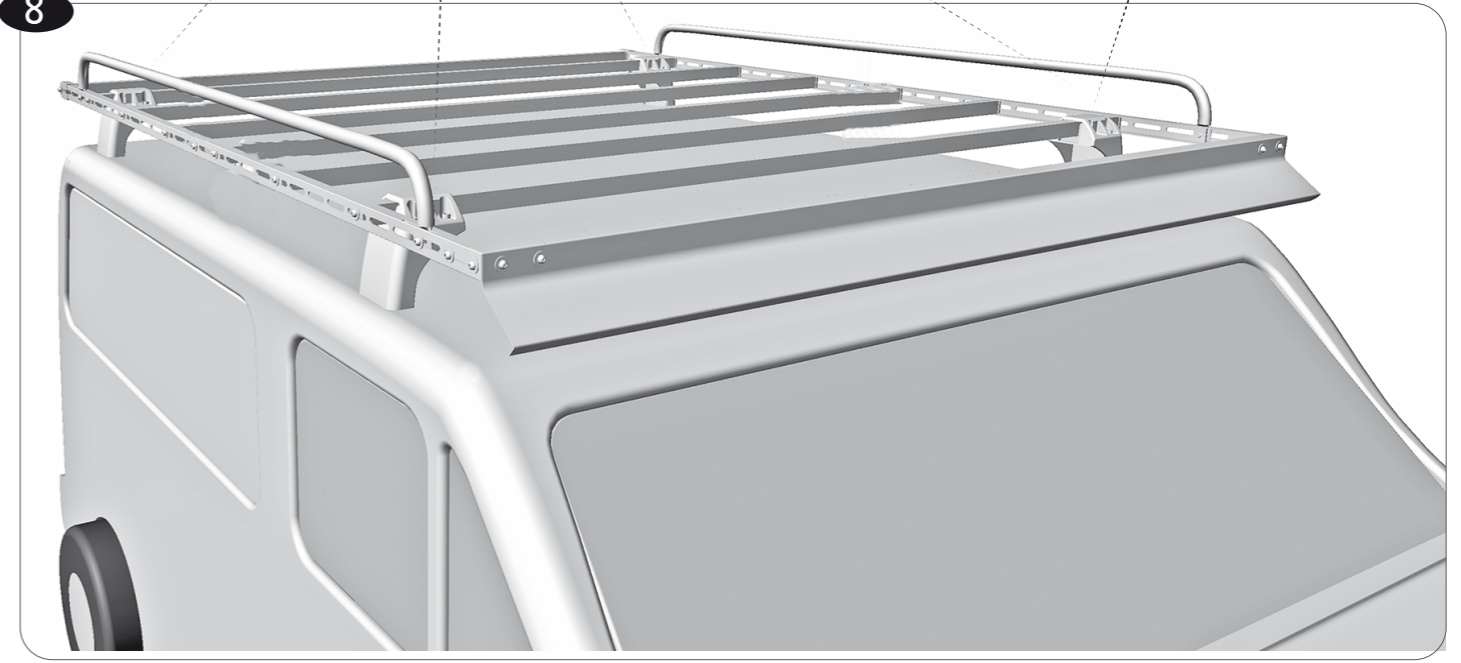



NISSAN KUBISTAR / RENAULT KANGOO I (97-09)

