


	L*	H**	
FIAT			
Doblo I	L1	H1	01-09
SUZUKI			
Samurai (metal roof)	L1	H1	85-98
Samurai	L1	H1	
Samurai	L1	H2	

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

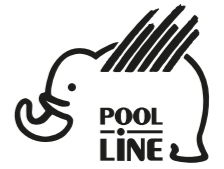

POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

200


KG.

MAX.


Nº HOMOLOGACIÓN: **E9** 26R-03.1042

123013



Rv: 09/2015

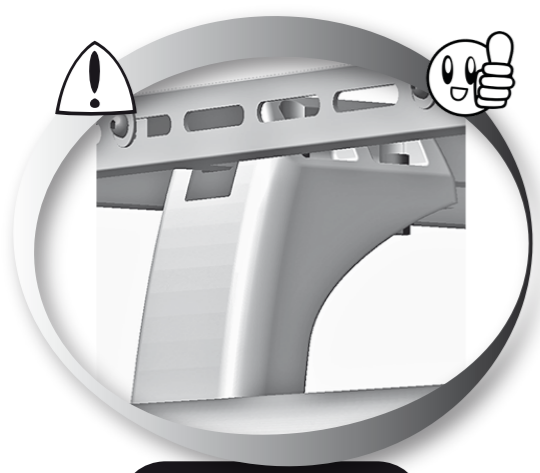

KIT CARGO-TECK

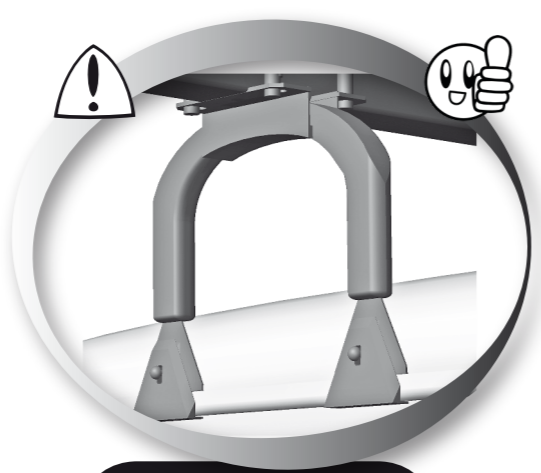

KIT CARGO-TECK FEET

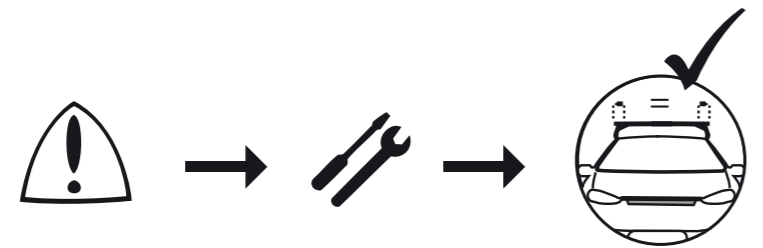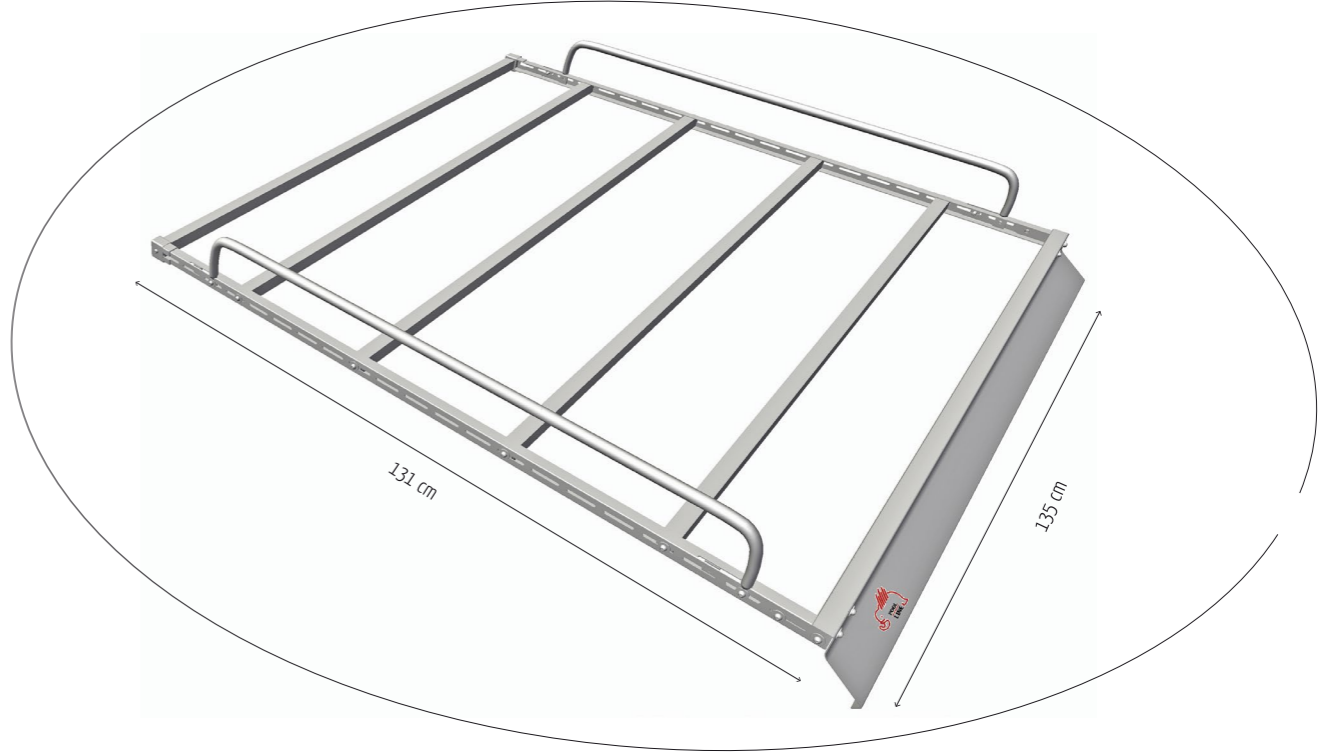








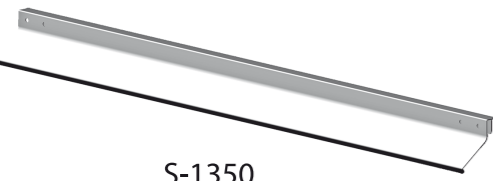


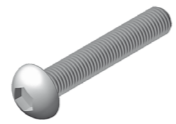


1


year







Warranty



N		Q
1	 S-1350	1
2		2
3	 L-1300	2
4	 B-1022	2
5	 T-1335	5
6		10
7		2
8		4
9		1


N		Q
10	 CHA-M8	4
11	 ISO 7380 M8x40	10
12	 ISO 7380 M8x16	12
13	 DIN 125 Ø 8	22

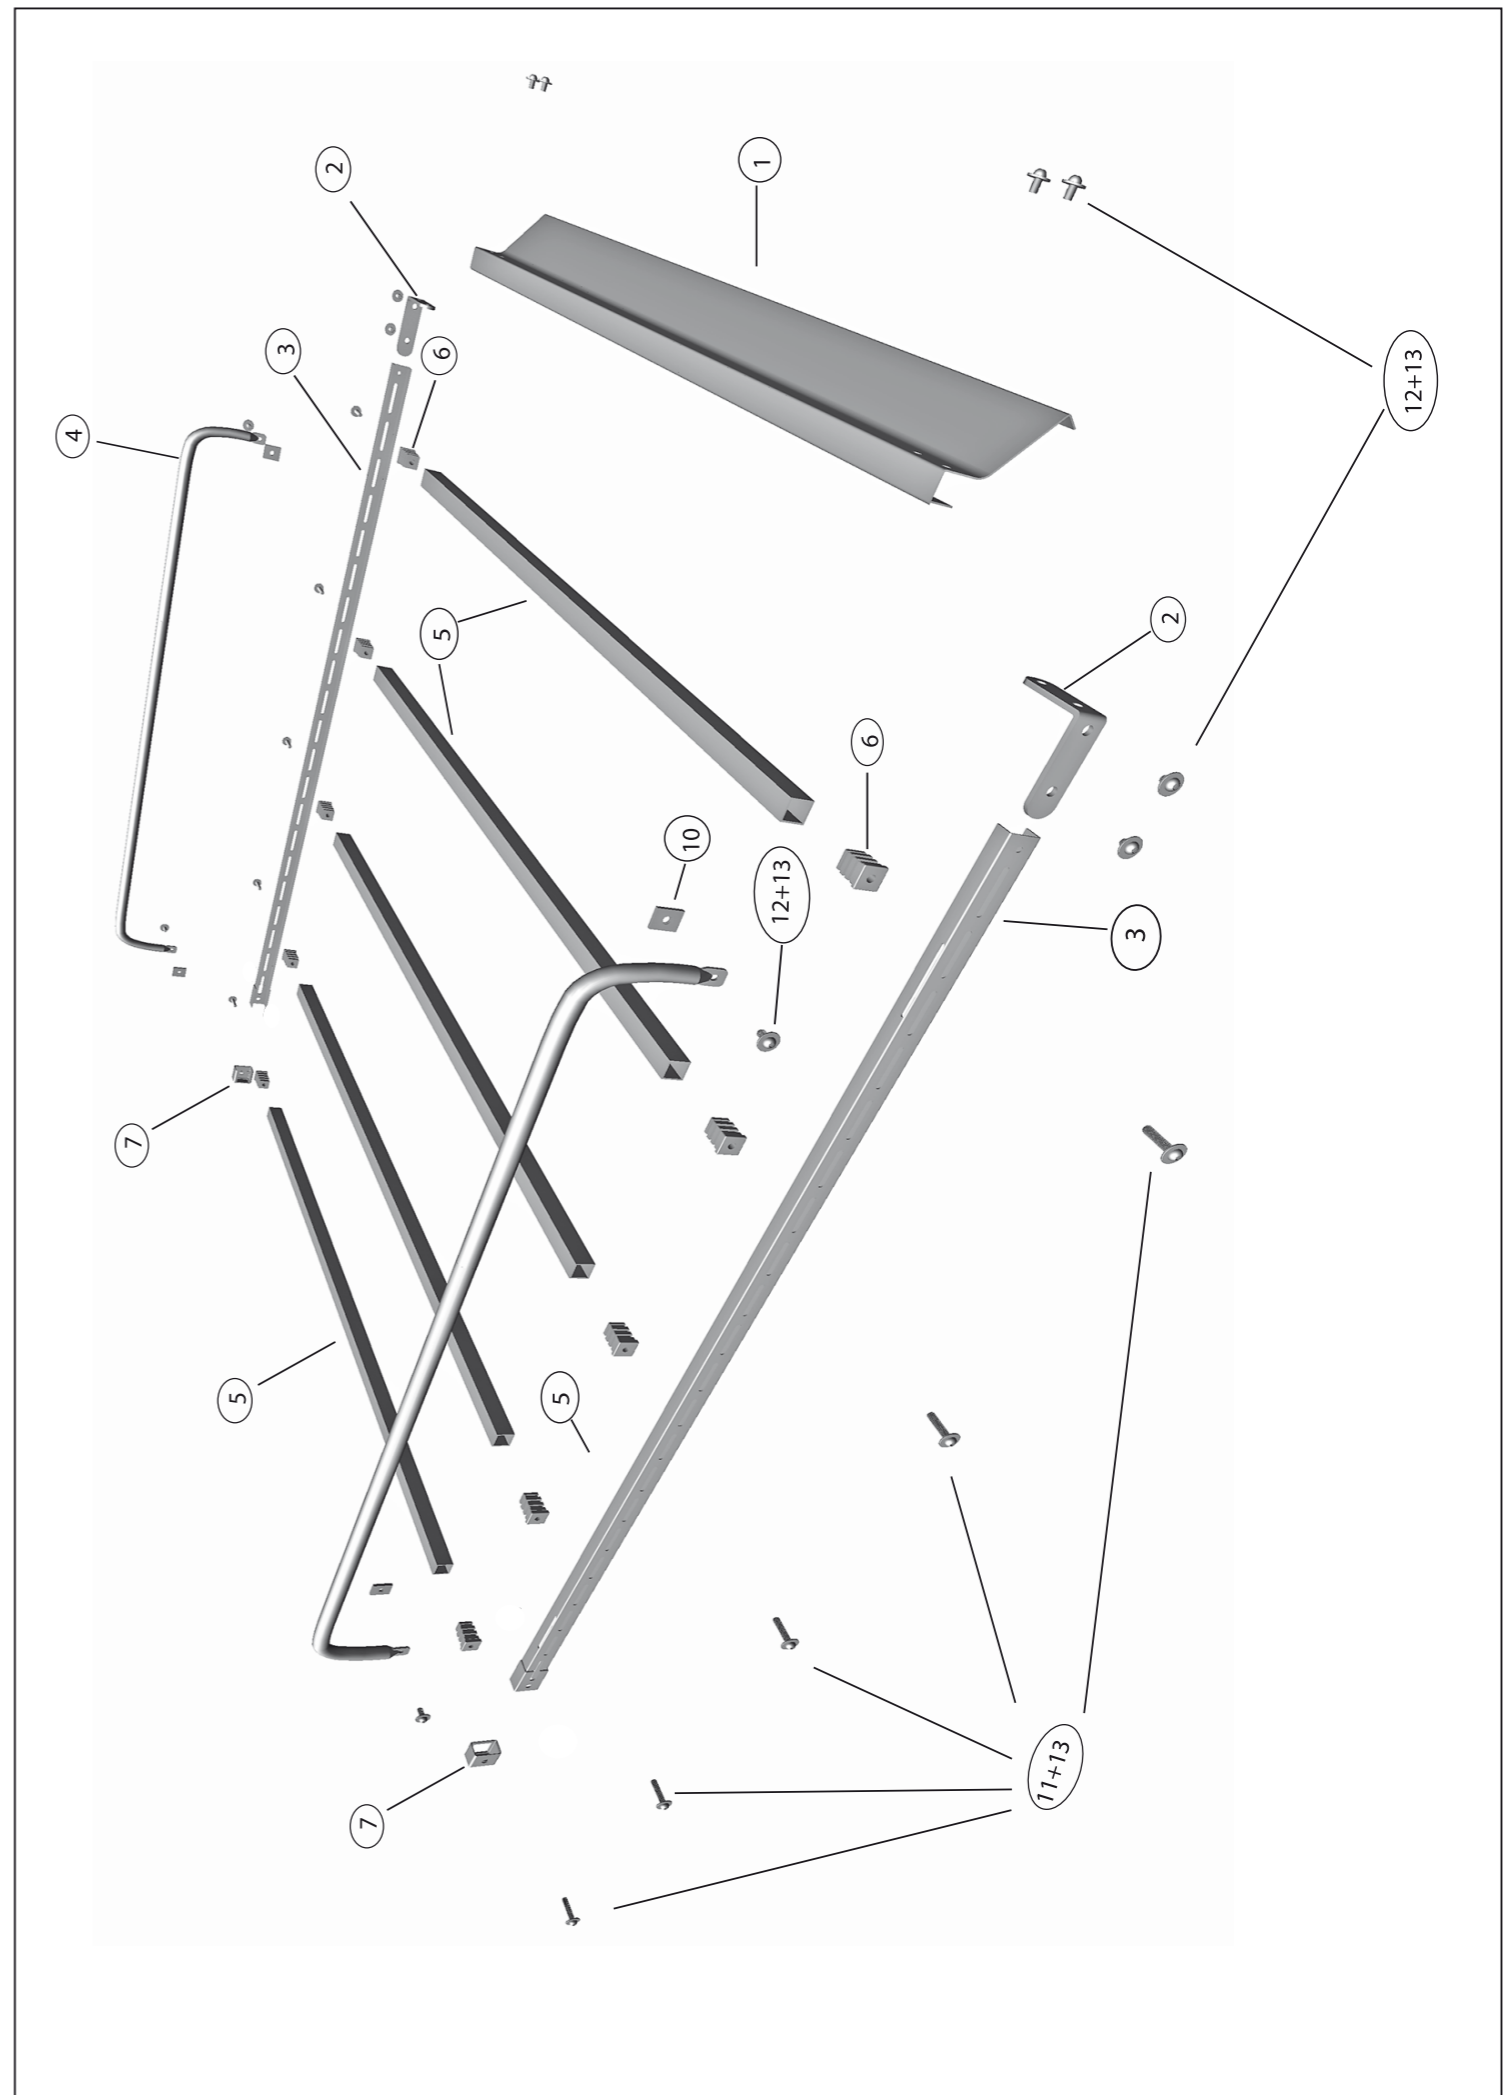

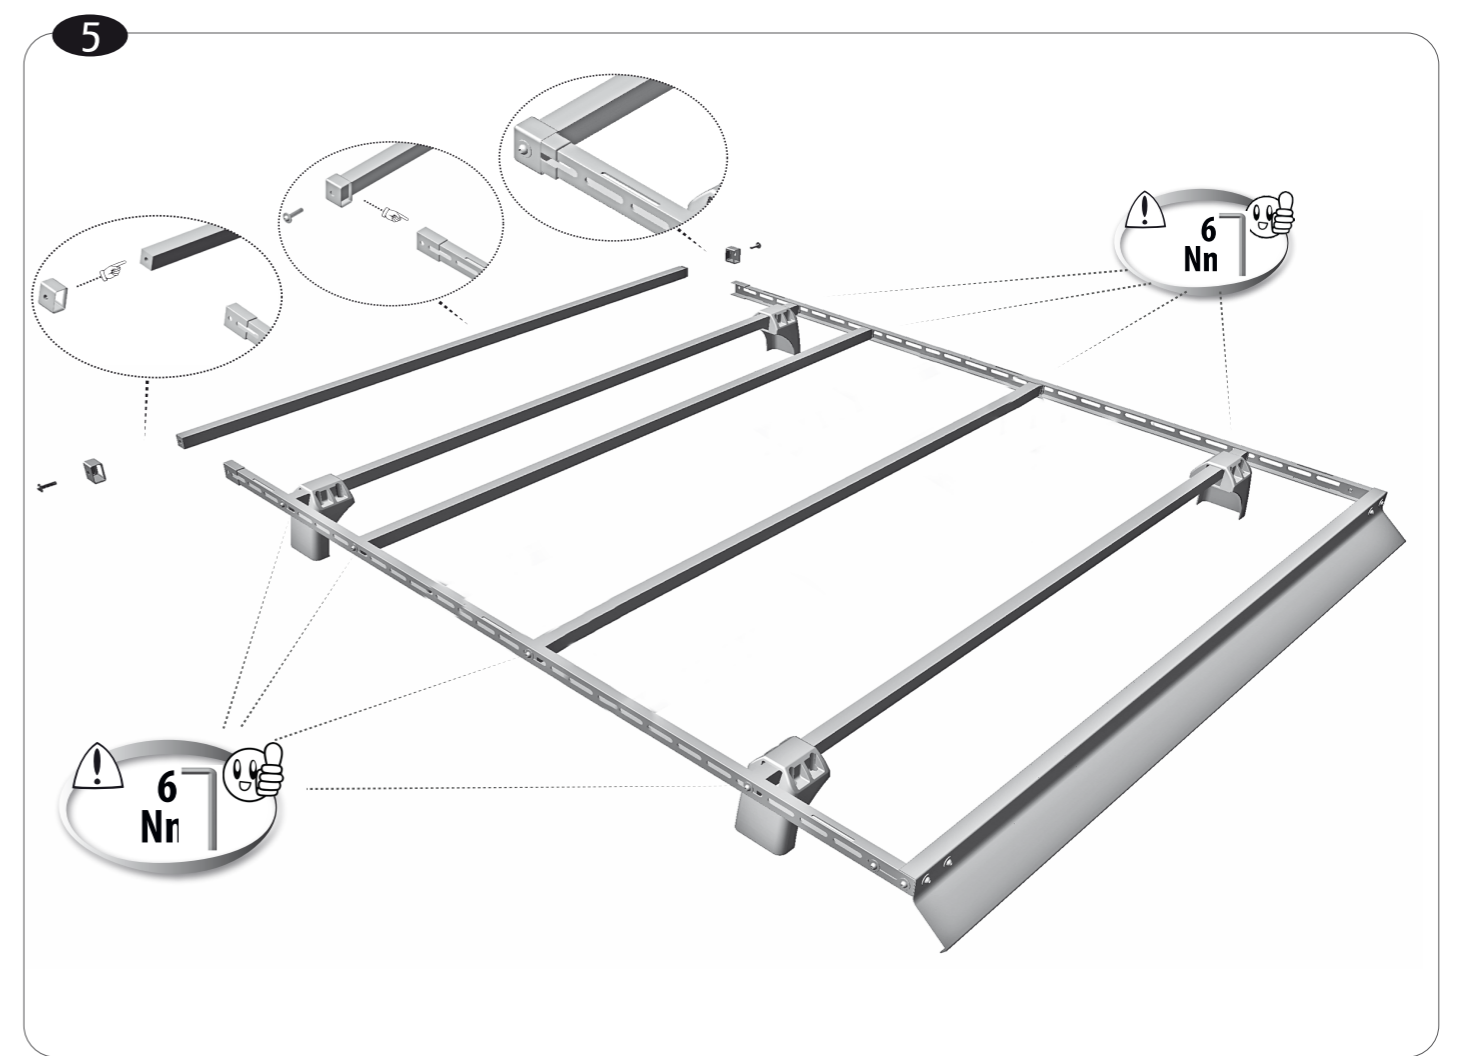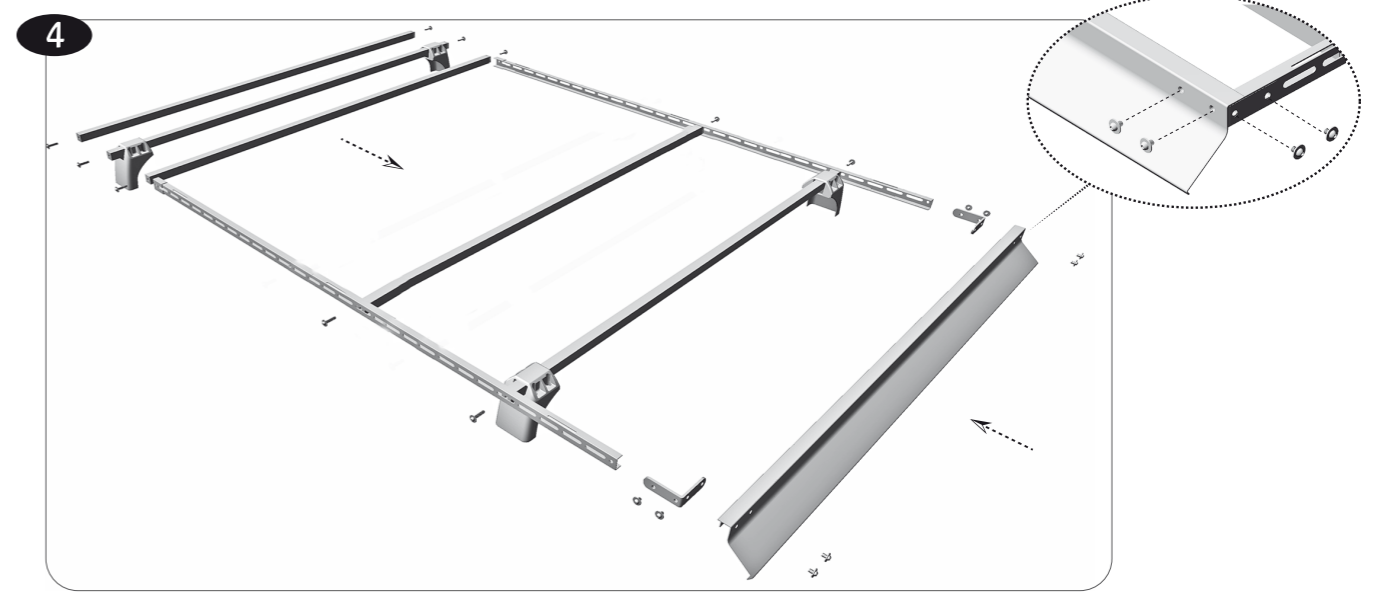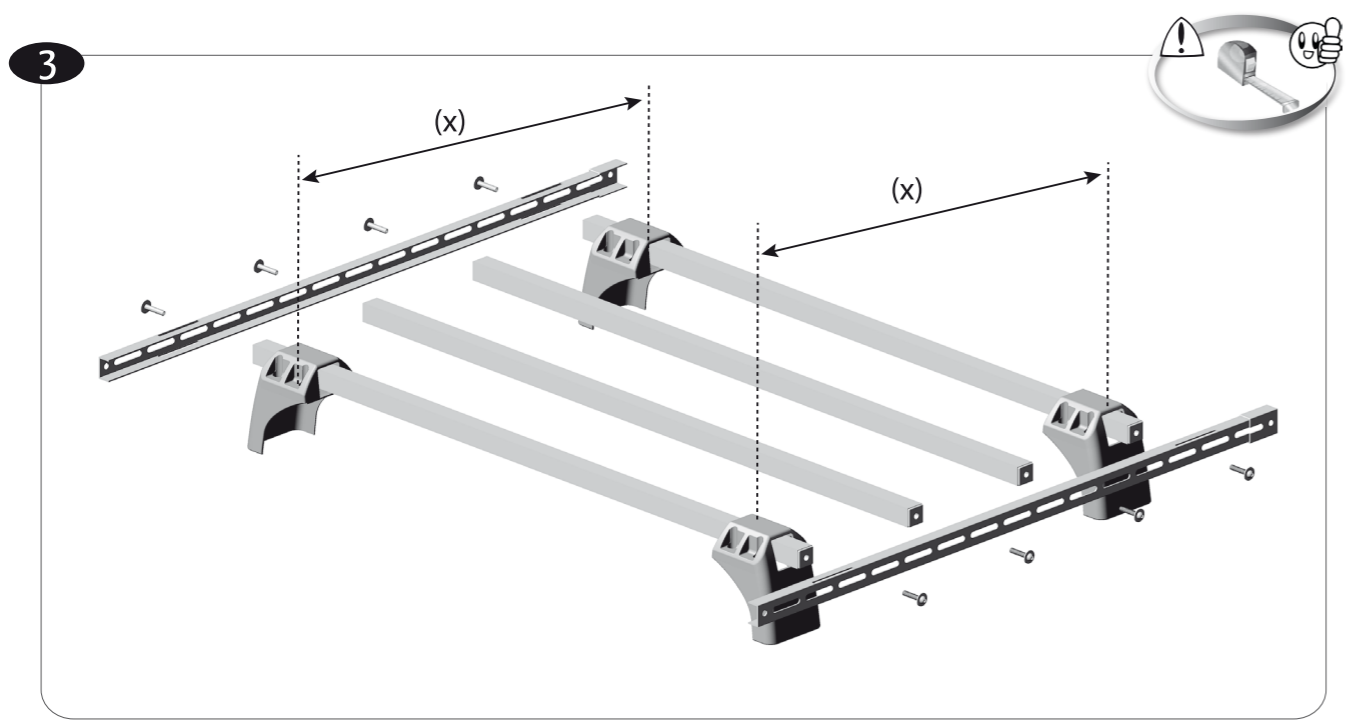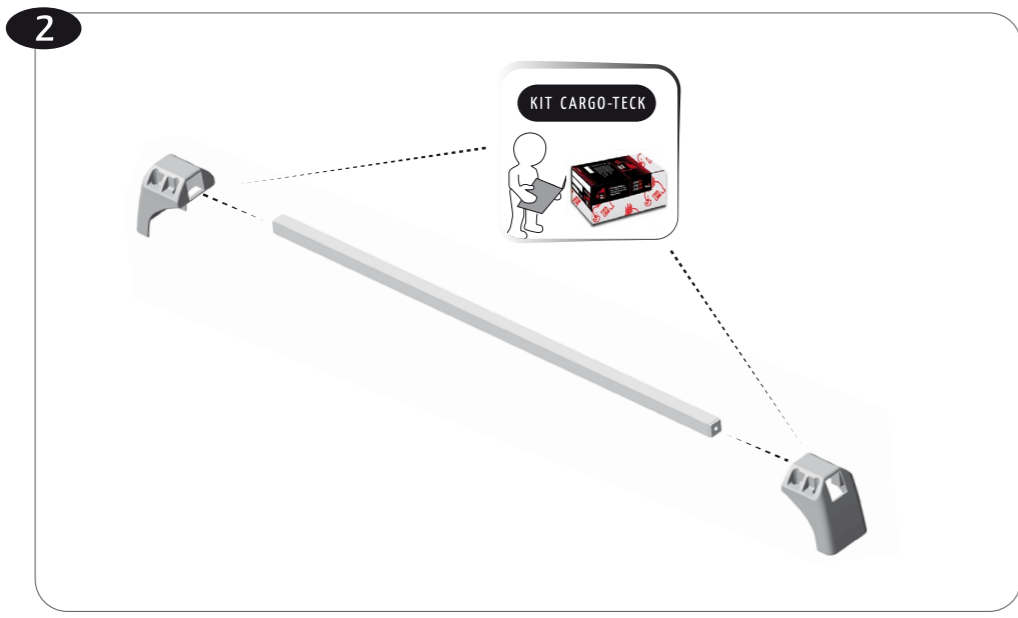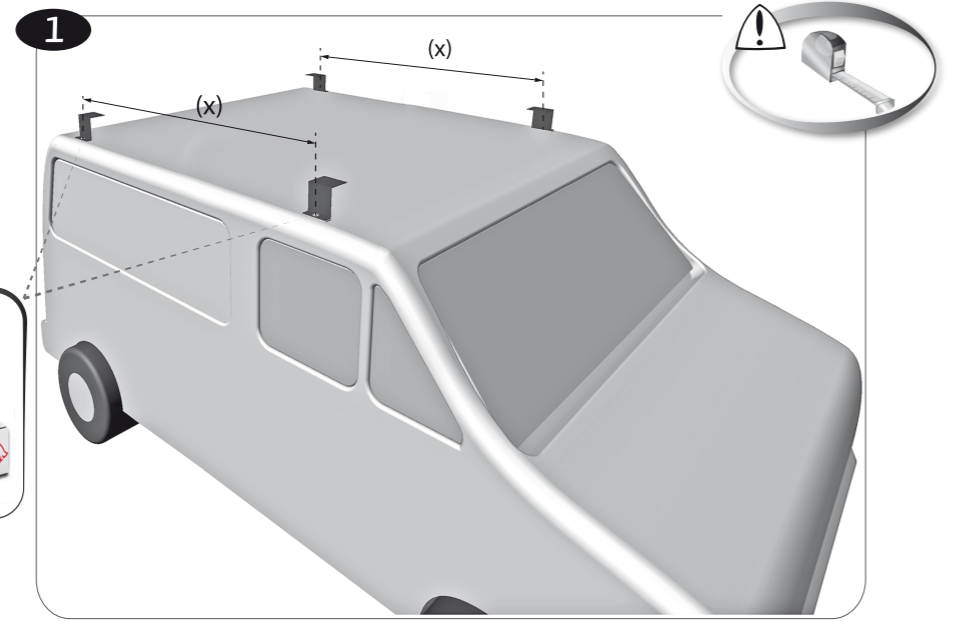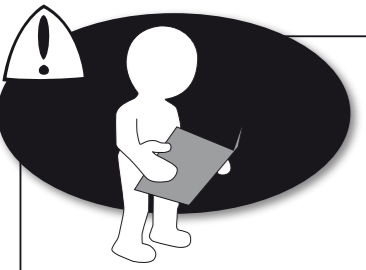





6

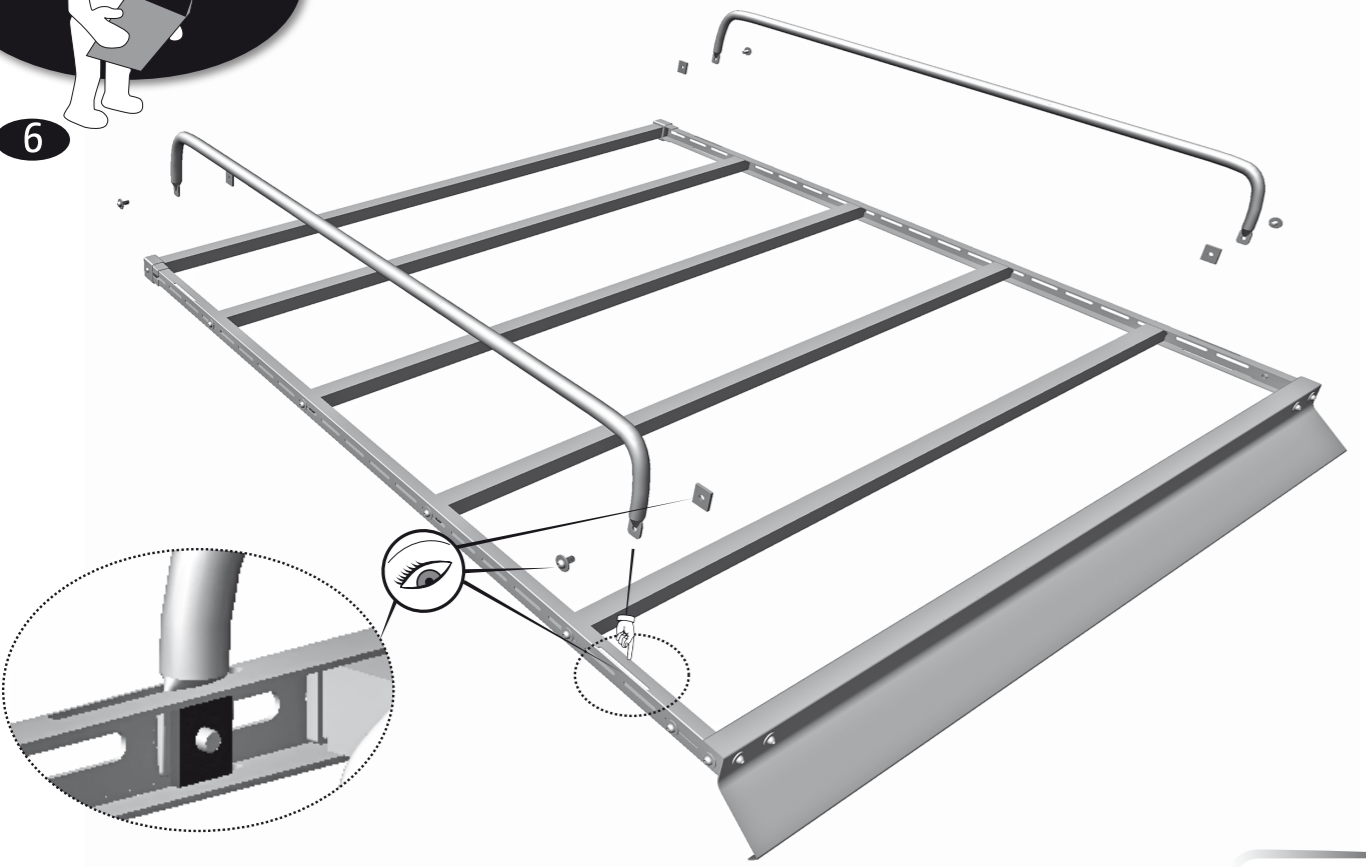


7

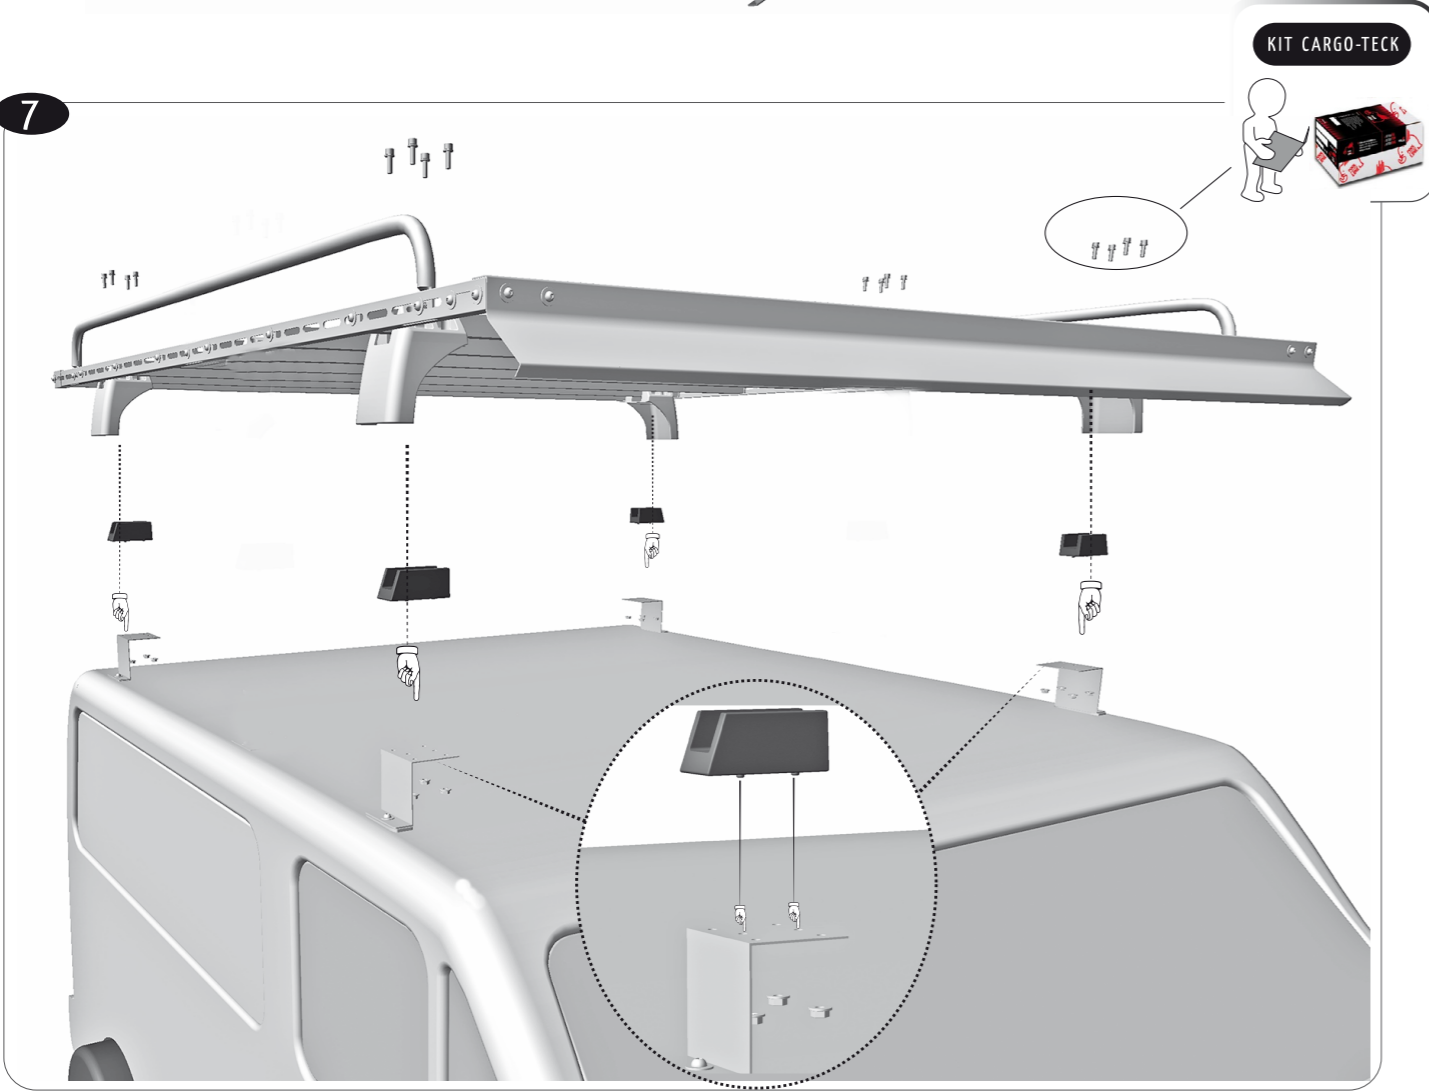



KIT CARGO-TECK

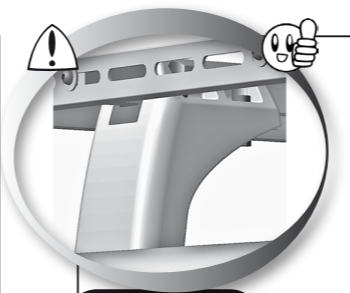

KIT CARGO-TECK

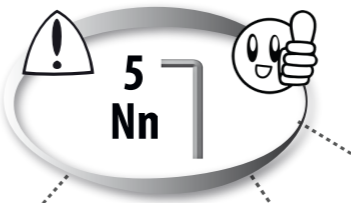


8

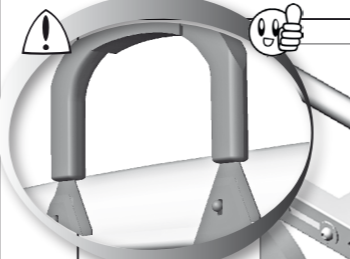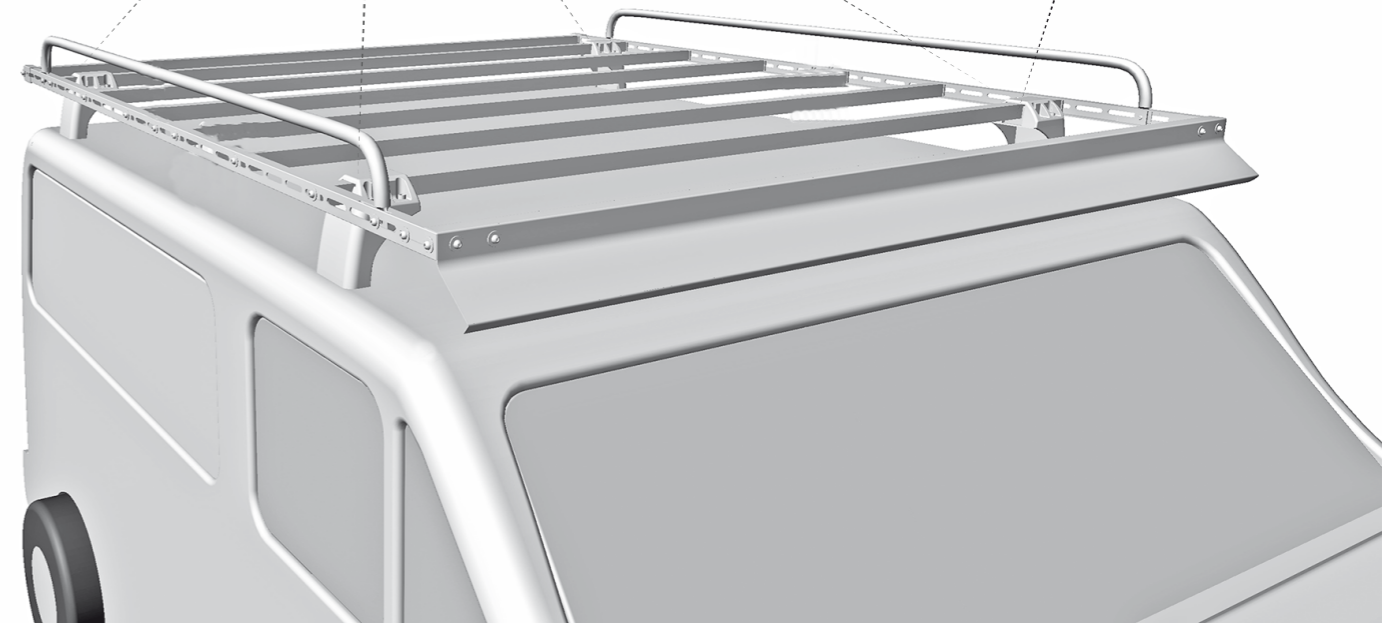

KIT CARGO-TECK FEET

8 bis



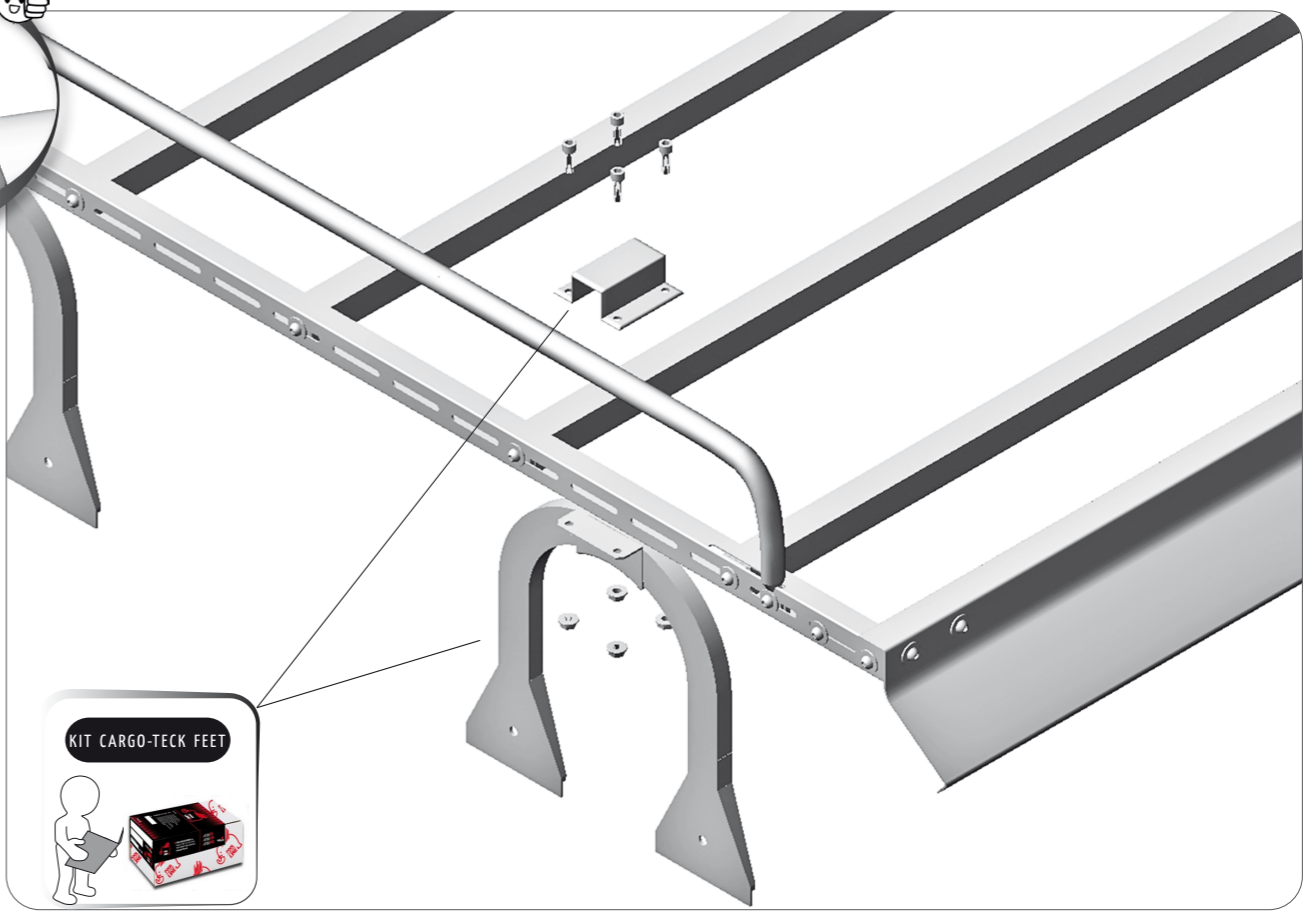


KIT CARGO-TECK FEET





FIAT DOBLO I (01-09)

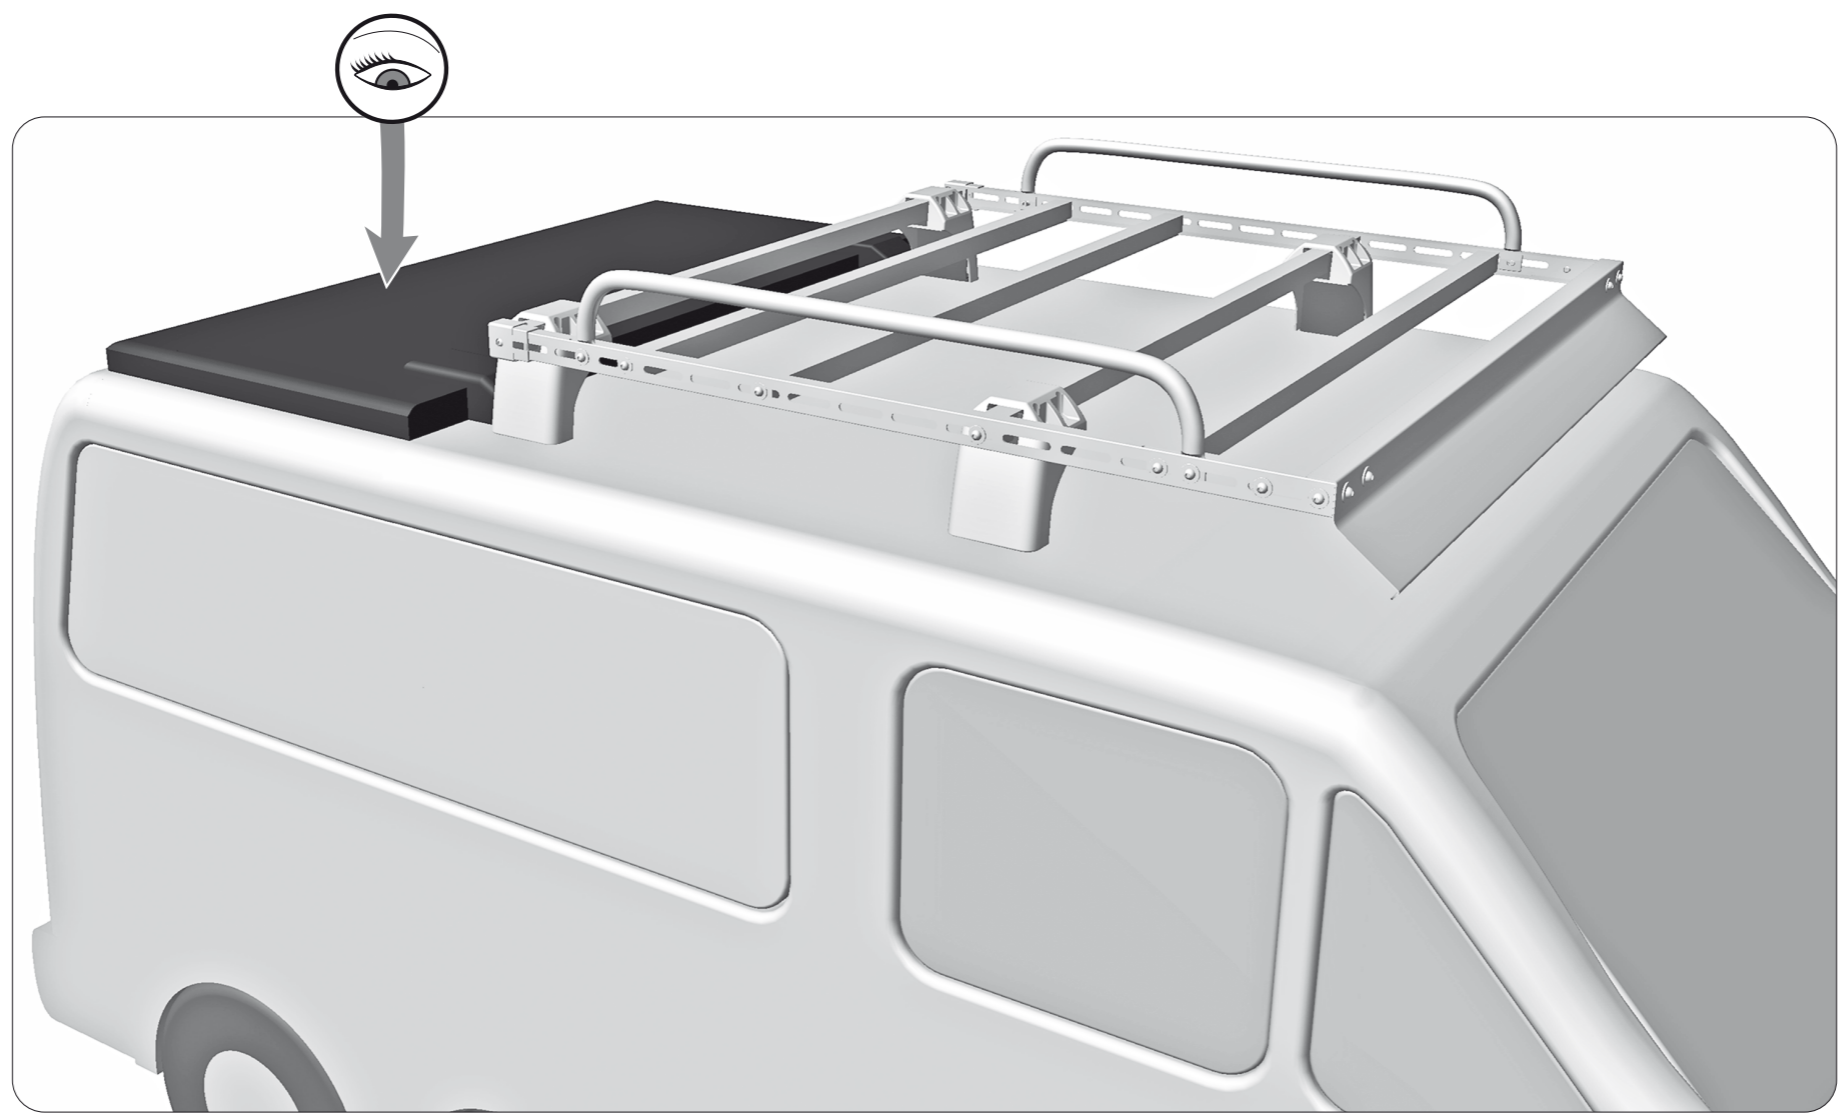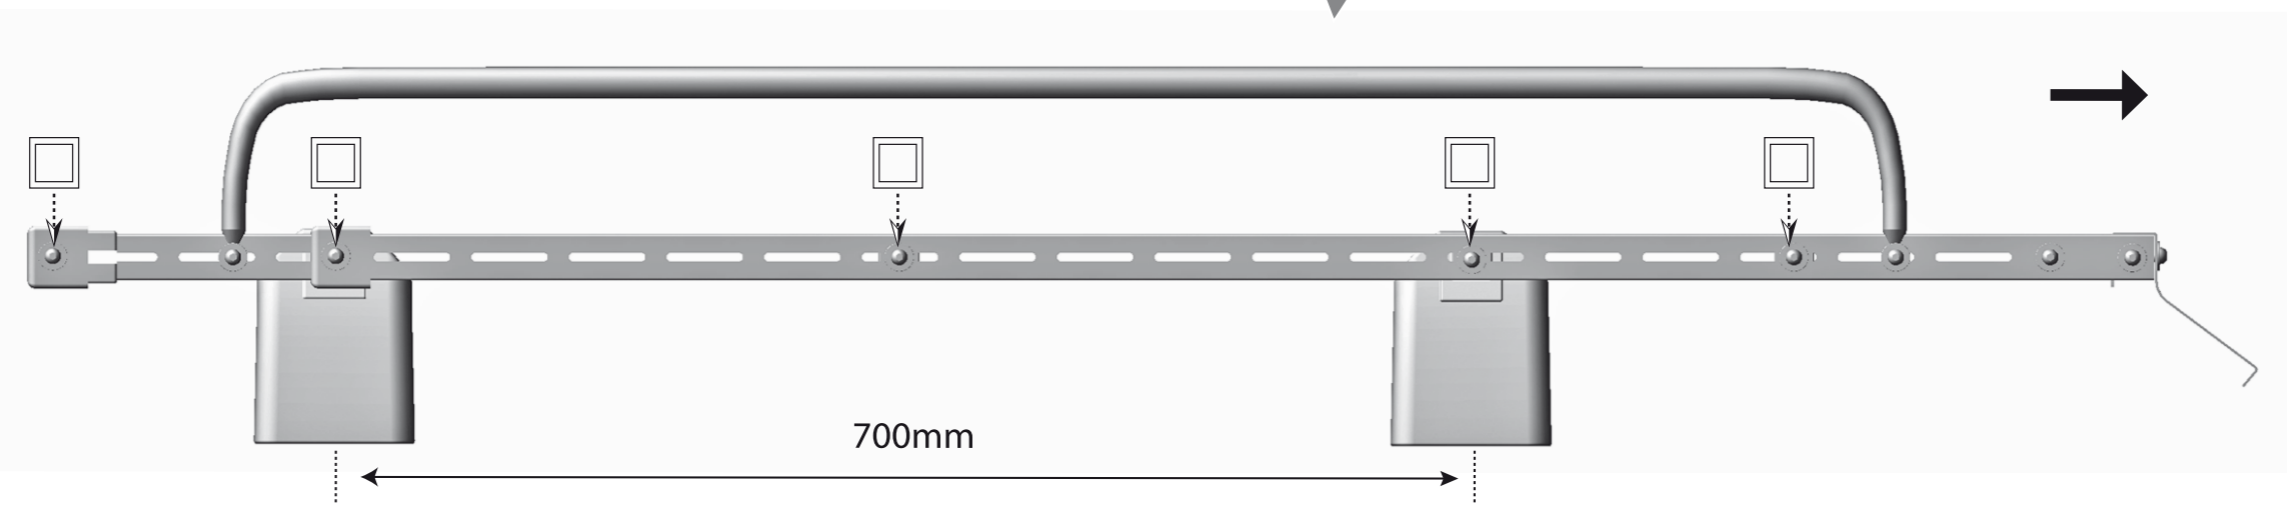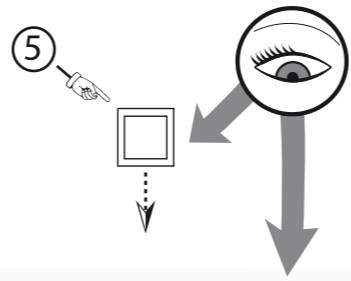



SUZUKI SAMURAI

