




	L*	H**	
<b>FORD</b>			
Transit IV	L4	H3	00-06
Transit V	L4	H3	07-14
<b>MERCEDES</b>			
209	L2	H1	
MB-100	L2	H1	
<b>VOLKSWAGEN</b>			
LT	L3	H2	96-06

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

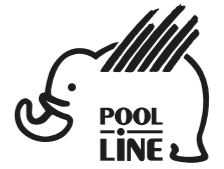

POOL-LINE ACCESORIOS, S.L.  
 C. Esqueis, 19. P. I. Can Barri  
 08415- Bigues i Riells. Barcelona (España)  
 www.pool-line.net

# 200

KG.


MAX.

---


Nº HOMOLOGACIÓN: **E9** 26R-03.1042

**123901**

Rv: 01/2016

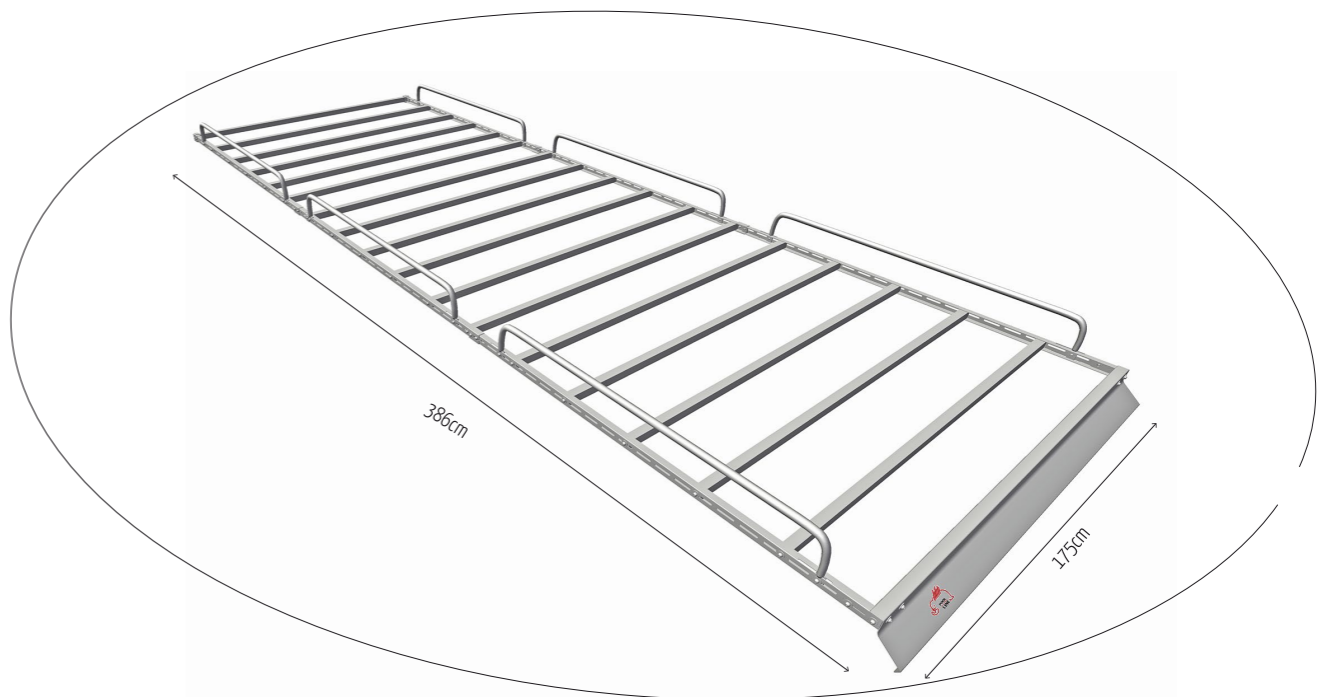

Rules **Respect** Traffic

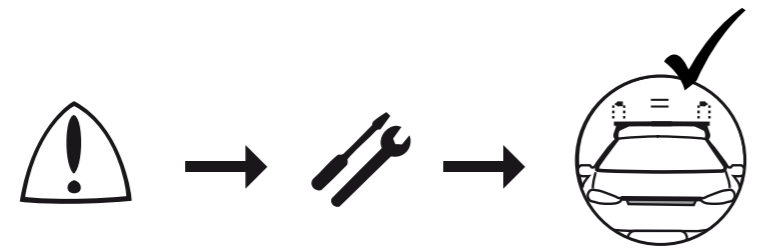










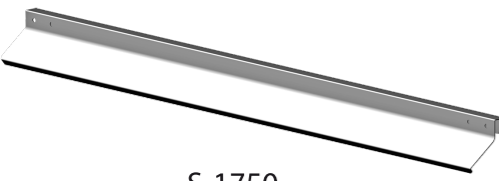


1

year

Warranty

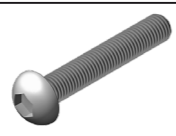

N		Q
1	 S-1750	1
2	 L-1300	6
3	 B-1022	6
4	 T-1735	17
5	 CHA-M8	34
6	 ISO 7380 M8x16	2
7	 DIN 125 Ø 8	2

N		Q
11	 CHA-M8	1
12	 CHA-M8	20
13	 ISO 7380 M8x40	34
14	 ISO 7380 M8x16	28
15	 DIN 125 Ø 8	62

