



- E Instrucciones de montaje
- C Instruccions de muntatge
- GB Assembly instructions
- F Instruction de montage
- D Montageanleitung
- PT Instruções de montagem
- I Istruzioni di montaggio
- PL Instrukcja montażu
- CZ Montážní návod
- HU Szerelési Utasítás
- RO Instrucțiuni de montaj
- HR Detaljne upute
- TU Öncelikle montaj

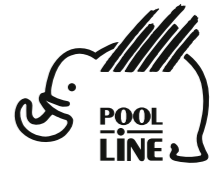



POOL-LINE ACCESORIOS, S.L.  
 C. Esqueis, 19. P. I. Can Barri  
 08415- Bigues i Riells. Barcelona (España)  
 www.pool-line.net

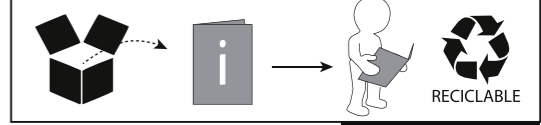







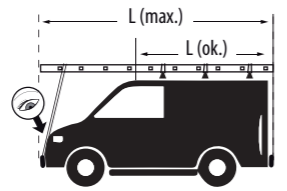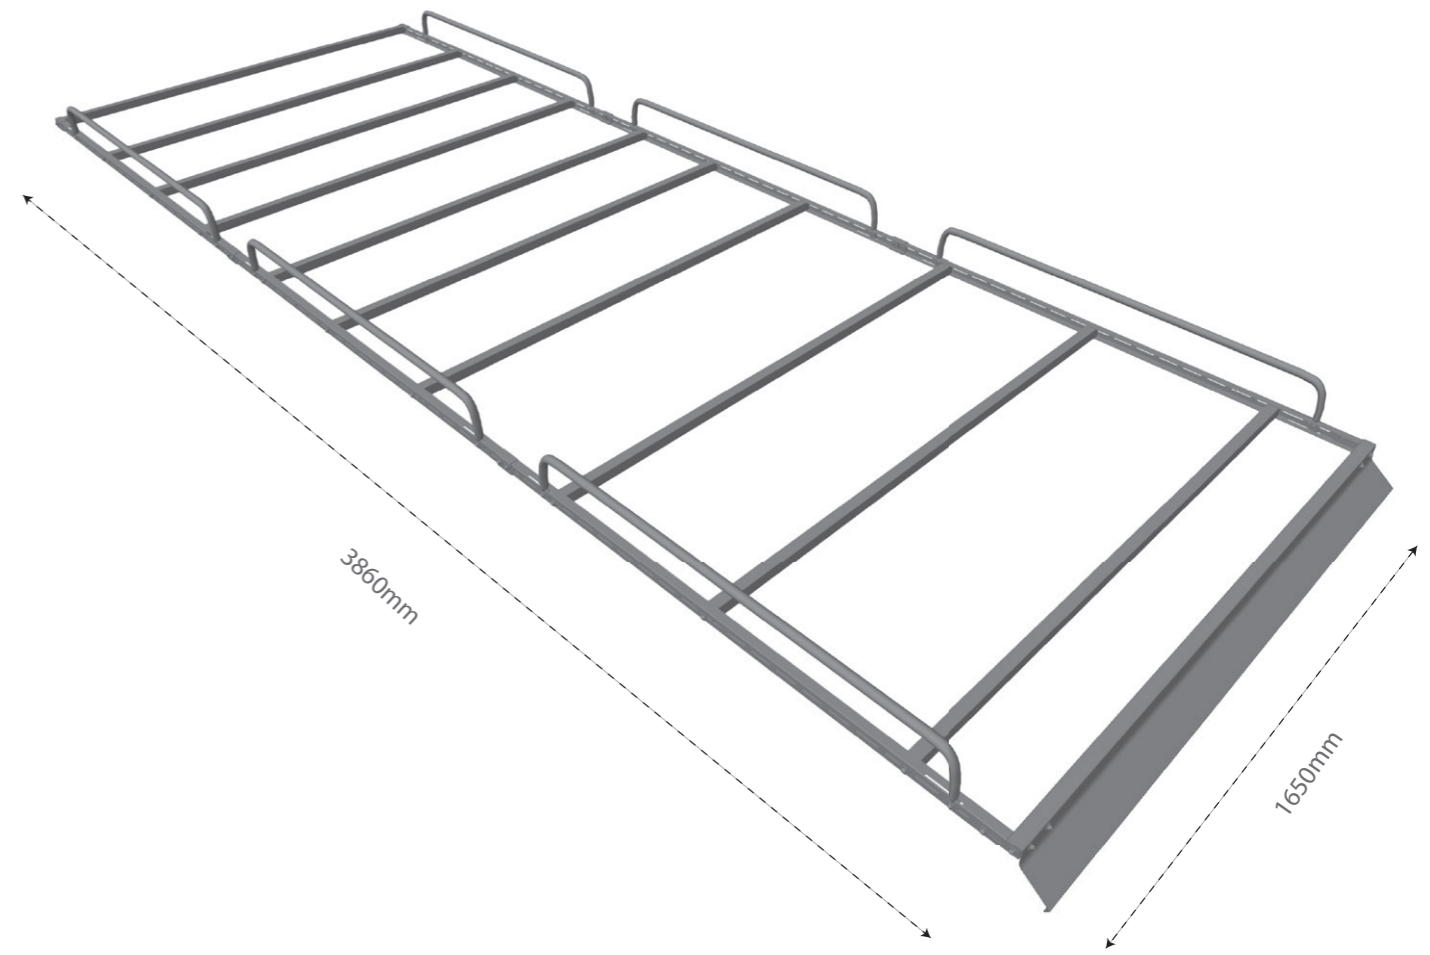



Nº HOMOLOGACIÓN: **E9** 26R-03.1042




**123916**





Rv: 9/2022








N		Q
21	 S-1550	1
22	 L-1300	6
23	 B-1022	6
24	 T-1635	10
25		20
26		2
27		2
28		8
30	 CHA-M8	20
31	 ISO 7380 M8x40	20
32	 ISO 7380 M8x16	28
33	 DIN 125 Ø 8	48

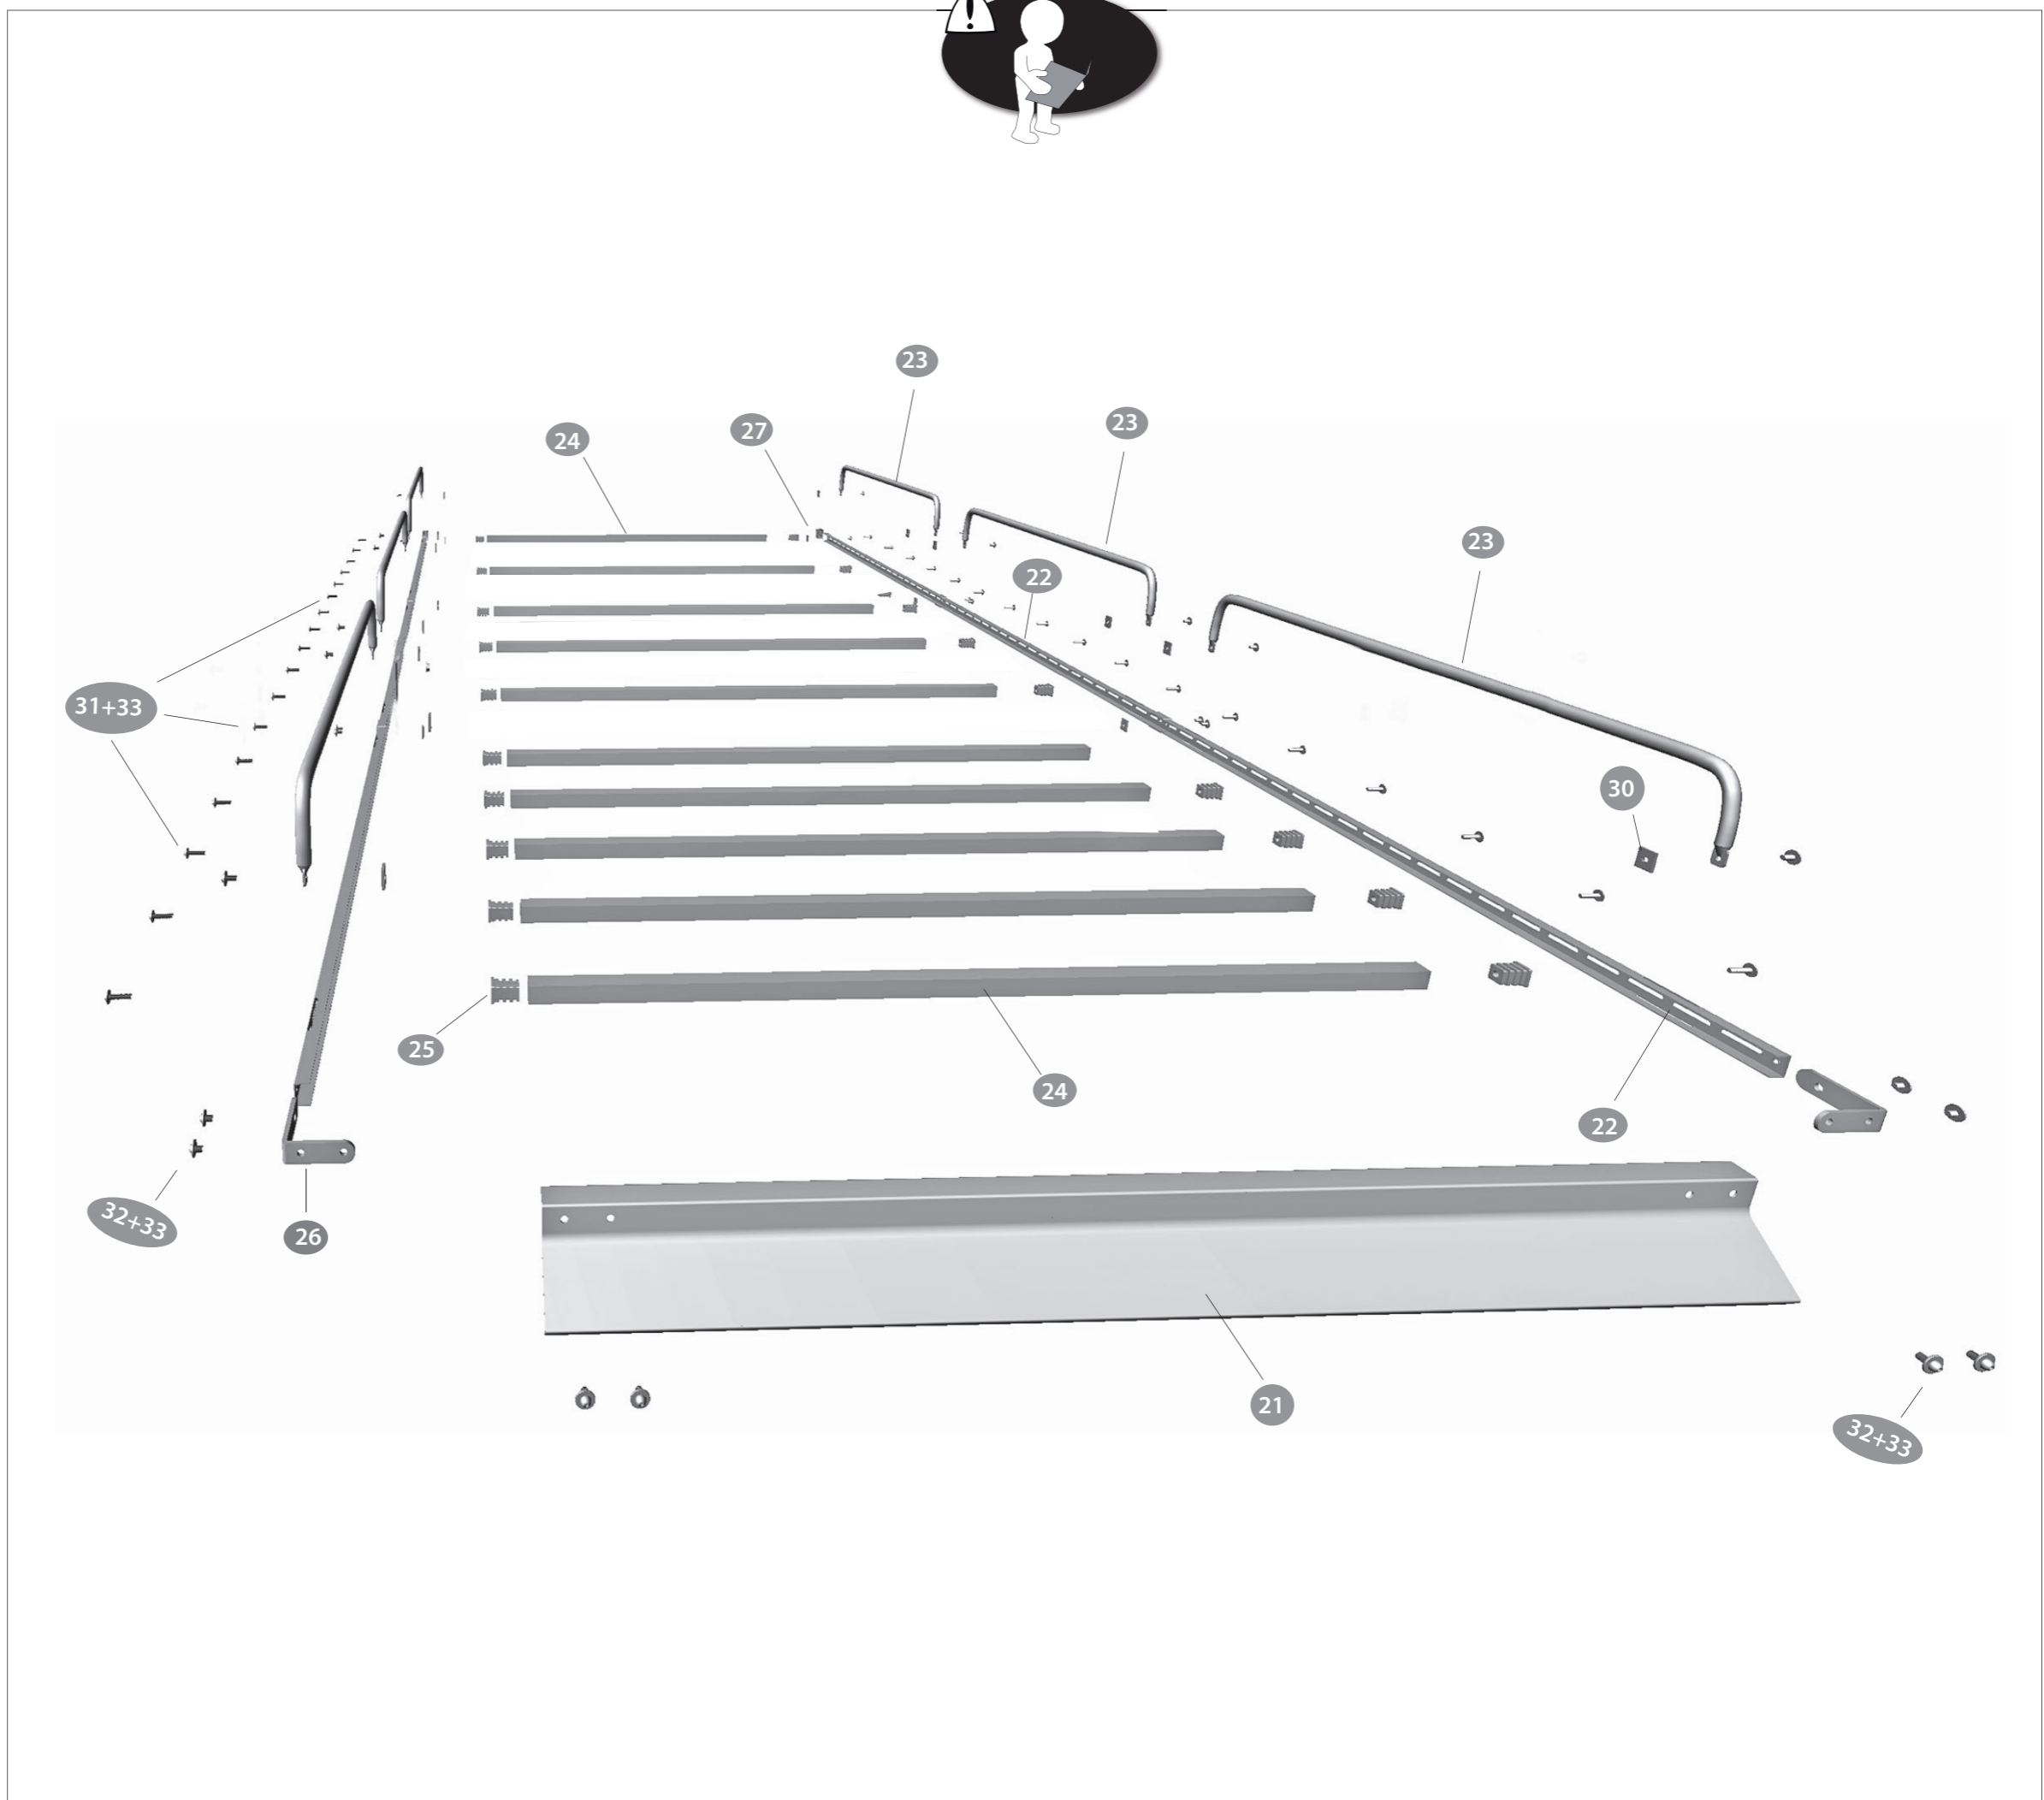



- CITROËN JUMPER L3 - H2
- FIAT DUCATO L3 - H2
- PEUGEOT BOXER L3 - H2
- OPEL MOVANO C L3 - H2

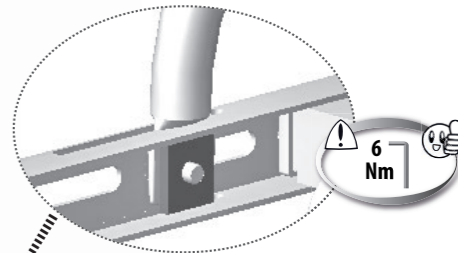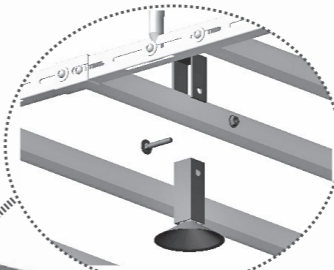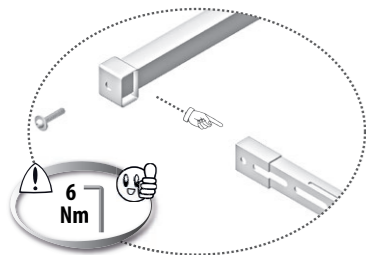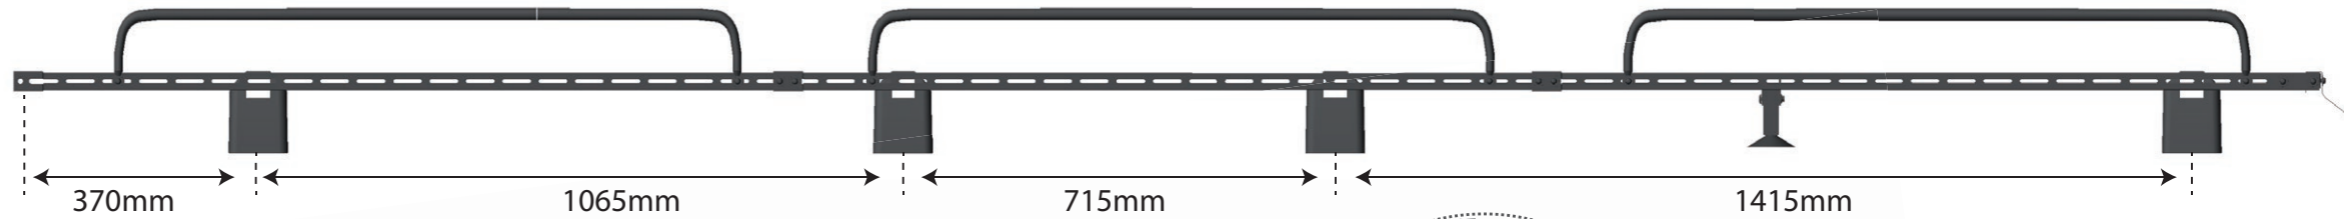

Zona delantera  
 Zone avant  
 Front zone  
 Zone anteriore  
 Vorderzone

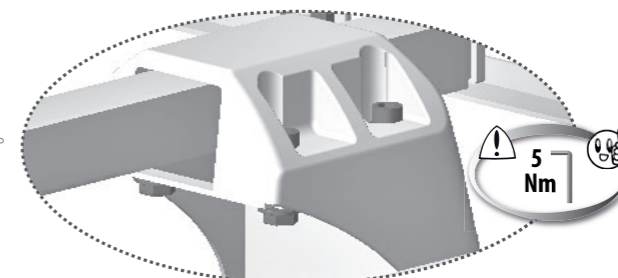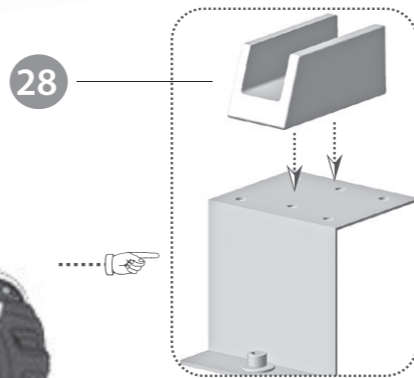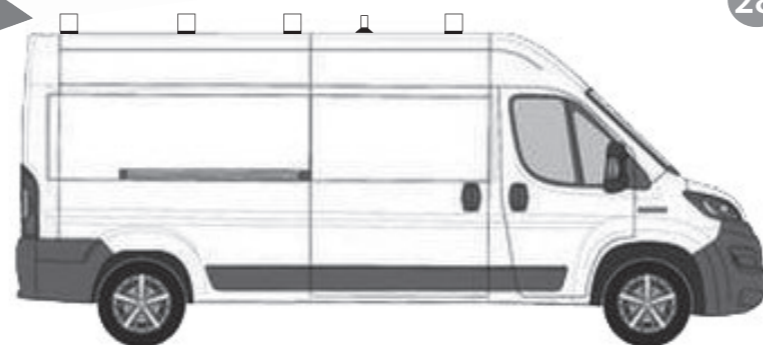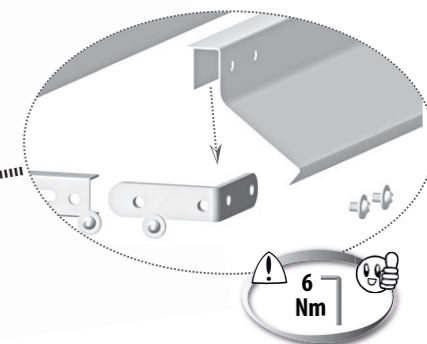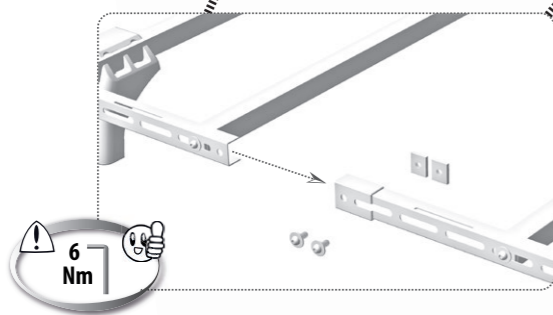

- CITROËN JUMPER L3 - H3
- FIAT DUCATO L3 - H3
- PEUGEOT BOXER L3 - H3
- OPEL MOVANO C L3 - H3

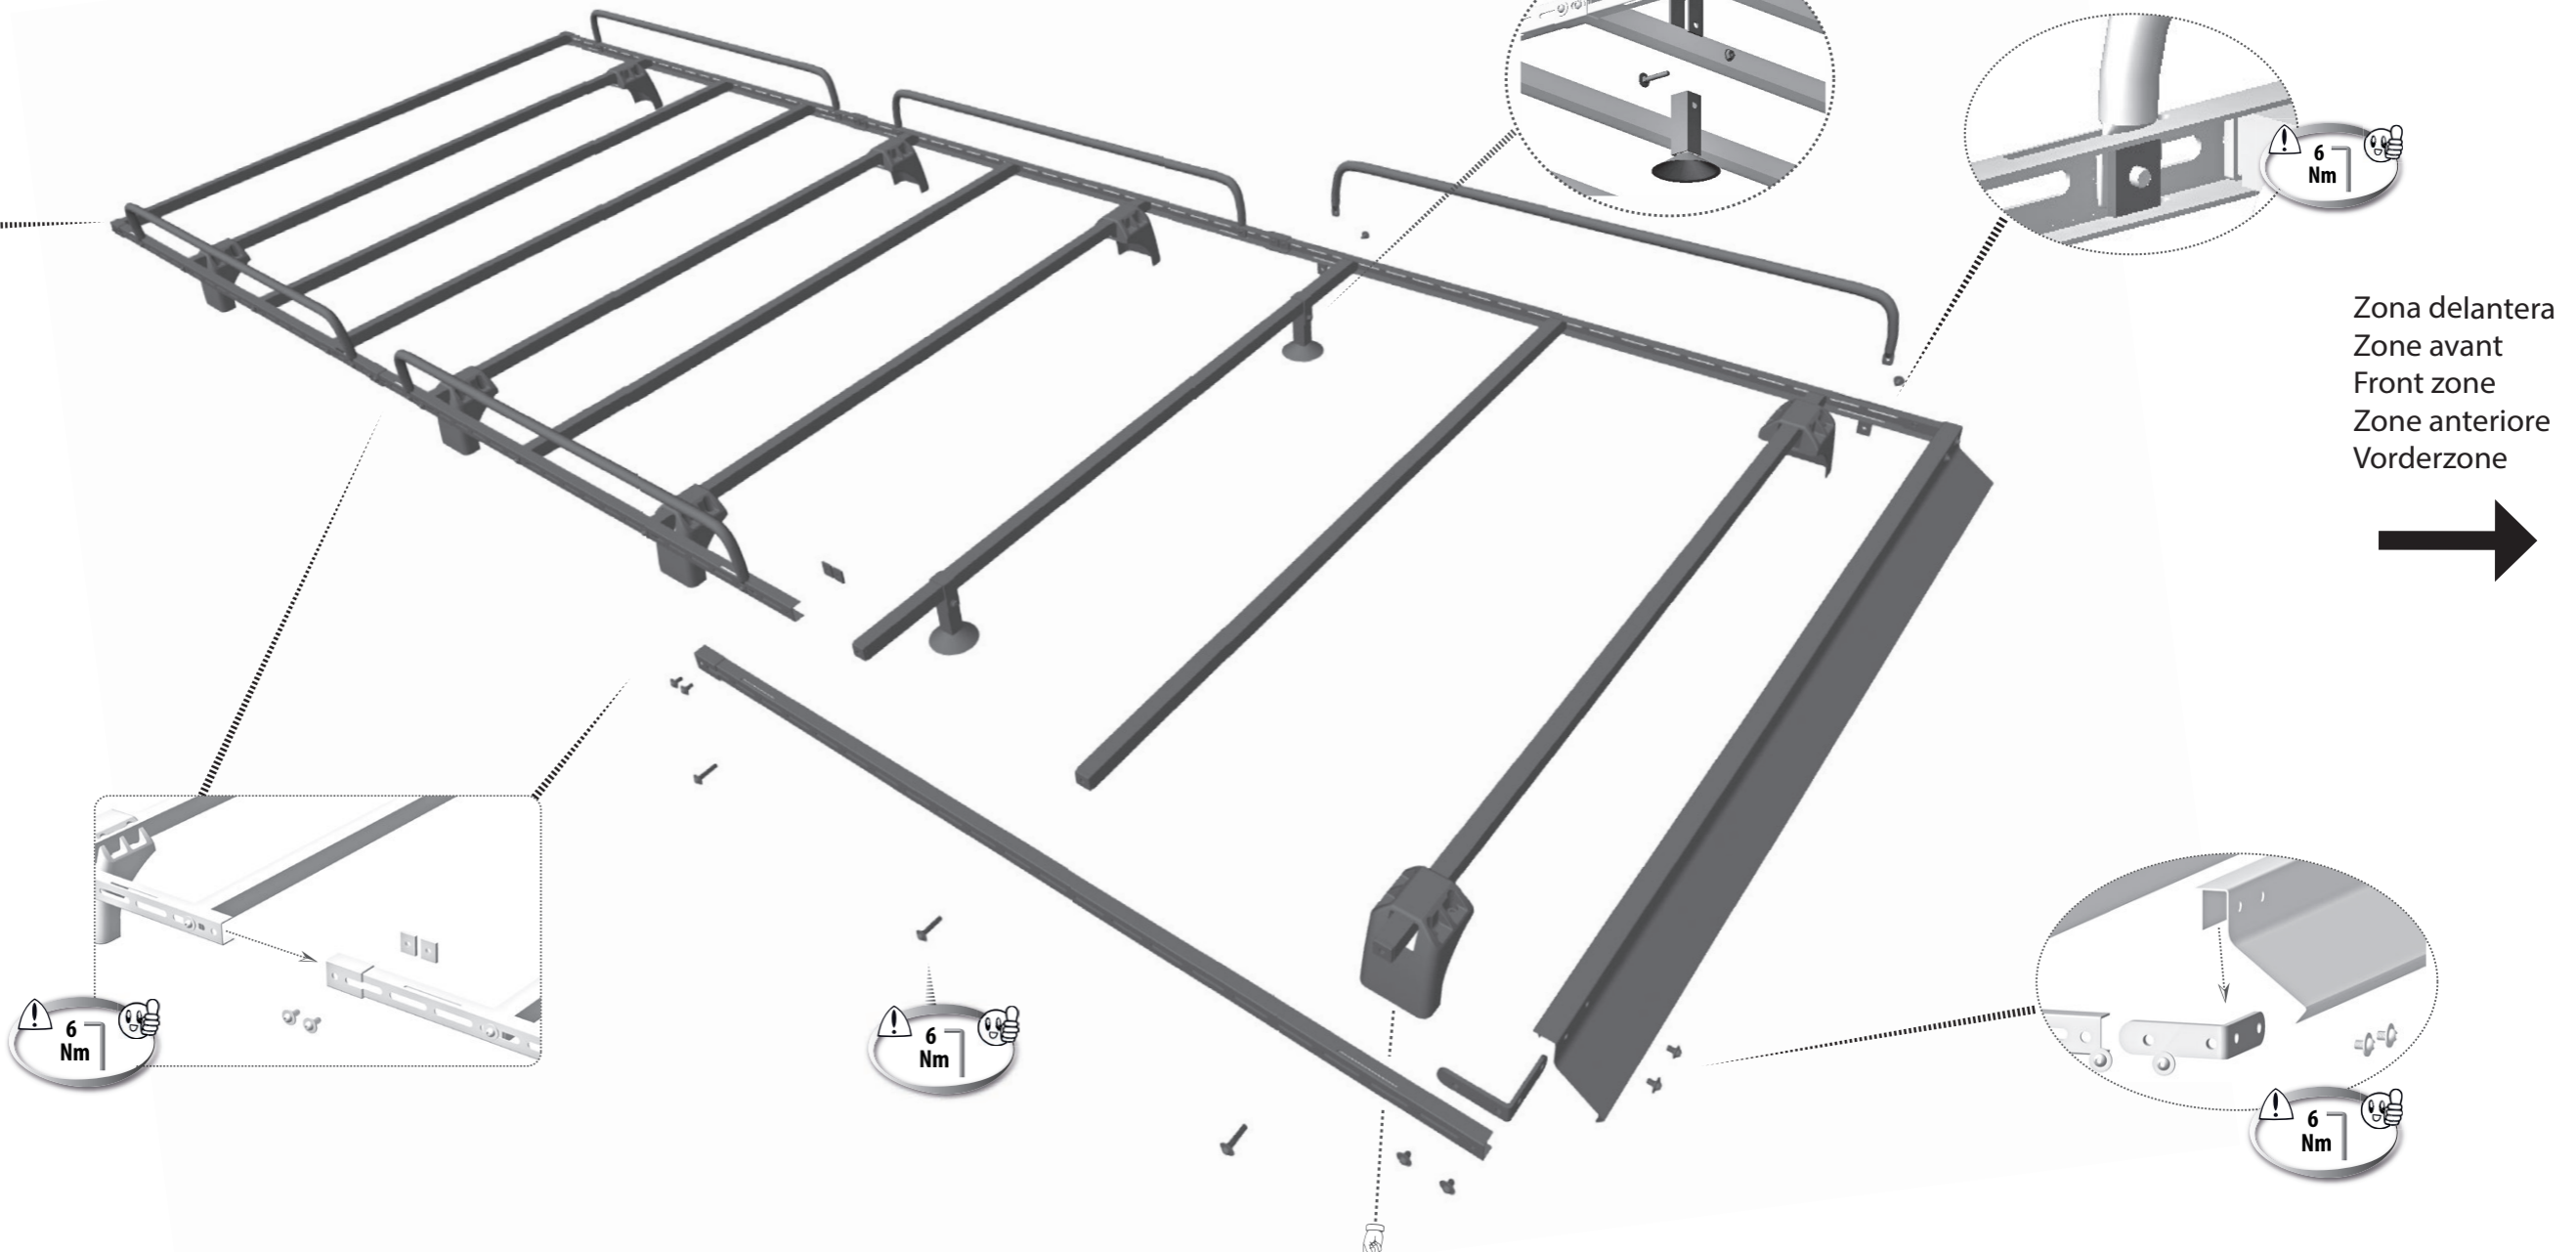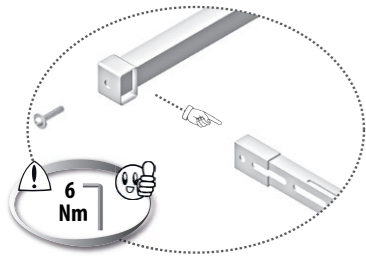

Zona delantera  
 Zone avant  
 Front zone  
 Zone anteriore  
 Vorderzone

➔

